



Gasketed Cover
CAUTION!
See Note 3

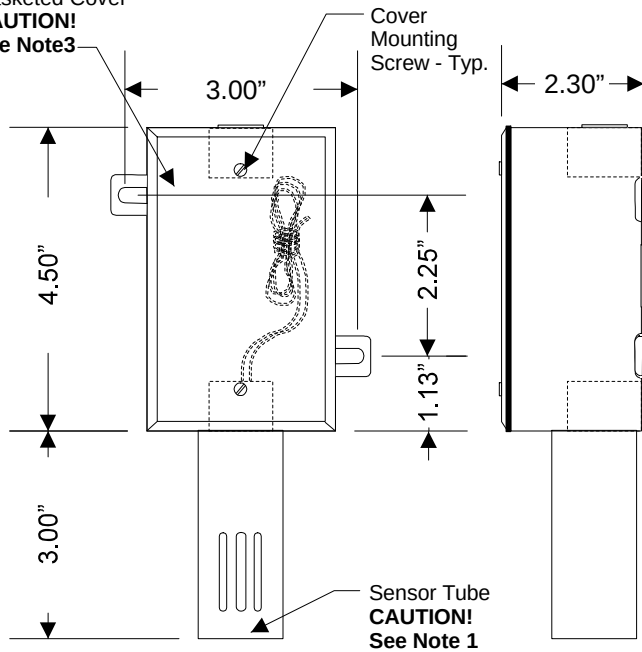


Front View

Side View

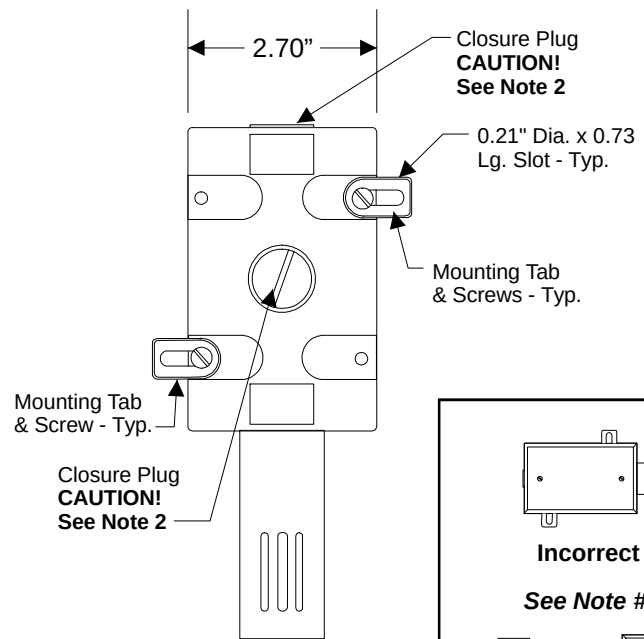

Back View

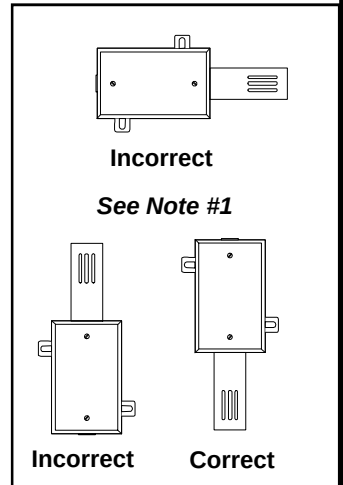

Sensor Mounting Position

Outside Air Sensor OE250

Temperature Sensor Resistance/Voltage Chart

Temp ° F	Resistance* Ohms	Voltage @ Input*	Temp ° F	Resistance* Ohms	Voltage @ Input*	Temp ° F	Resistance* Ohms	Voltage @ Input*	Temp ° F	Resistance* Ohms	Voltage @ Input*
-10	93333	4.620	45	21094	3.470	69	11906	2.780	84	8514	2.352
-5	80531	4.550	50	18655	3.330	70	11652	2.752	86	8153	2.297
0	69822	4.474	52	17799	3.275	71	11379	2.722	88	7805	2.242
5	60552	4.390	54	16956	3.217	72	11136	2.695	90	7472	2.187
10	52500	4.297	56	16164	3.160	73	10878	2.665	95	6716	2.055
15	45902	4.200	58	15385	3.100	74	10625	2.635	100	6047	1.927
20	40147	4.095	60	14681	3.042	75	10398	2.607	105	5453	1.805
25	35165	3.982	62	14014	2.985	76	10158	2.570	110	4923	1.687
30	30805	3.862	64	13382	2.927	78	9711	2.520	115	4449	1.575
35	27140	3.737	66	12758	2.867	80	9302	2.465	120	4030	1.469
40	23874	3.605	68	12191	2.810	82	8893	2.407			

***Chart Notes:**

1. Use the resistance column to check the thermistor sensor while disconnected from the controllers (not powered).
2. Use the voltage column to check sensors while connected to powered controllers. Read voltage with meter set on DC volts. Place the "-" (minus) lead on GND terminal and the "+" (plus) lead on the sensor input terminal being investigated. If the voltage is above 5.08 VDC, then the sensor or wiring is "open." If the voltage is less than 0.05 VDC, the sensor or wiring is shorted.

Notes:

- 1.) The Outside Air Sensor Must Be Mounted In A Vertical Position As Shown (Sensor Tube Pointing Down). **Water Must Not Be Allowed To Stand In Sensor Tube. Rainwater Will Damage Sensor.** Sensor Must Be Located Where It Will Not Be Affected By Direct Sunlight Or Heat Producing Equipment. If Possible Mount Under Roof Eave Or Similar Protected Location. If Sensor Is Not Located As Specified, Erroneous Outside Air Temperature Readings Will Result.
- 2.) Unused Conduit Opening(s) Must Have Closure Plugs Installed And Must Be Coated With Sealing Compound To Provide Raintight Seal. Water Can **Damage Sensor!**
- 3.) Gasket Must Be Installed Under Cover Plate To Provide Raintight Seal. **Rainwater Can Damage Sensor!**
- 4.) All Wiring To Be In Accordance With Local And National Electrical Codes And Specifications.

JOB NAME	
FILENAME	
G-OE250-OAS-PDWG.CDR	
DATE: 04/25/02	DRAWN BY: B. CREWS
PAGE	DESCRIPTION:
1	OE250
	Outside Air Temperature Sensor