


DETROIT RADIANT PRODUCTS CO.

DRWH-120 Replacement Instruction Sheet

Instructions

1. Open (turn off) electrical circuit to heater.
2. Close (turn off) gas supply to heater.
3. Disconnect harness or wires from circuit board and all wires to the electrode, gas valve and thermostat.
4. Dispose of old wiring harness or wires.
5. Reconnect the new harness to the circuit board and all wires to the electrode, gas valve and thermostat according to the diagram below.
6. Open (turn on) gas supply to heater.
7. Close (turn on) electrical circuit to heater.

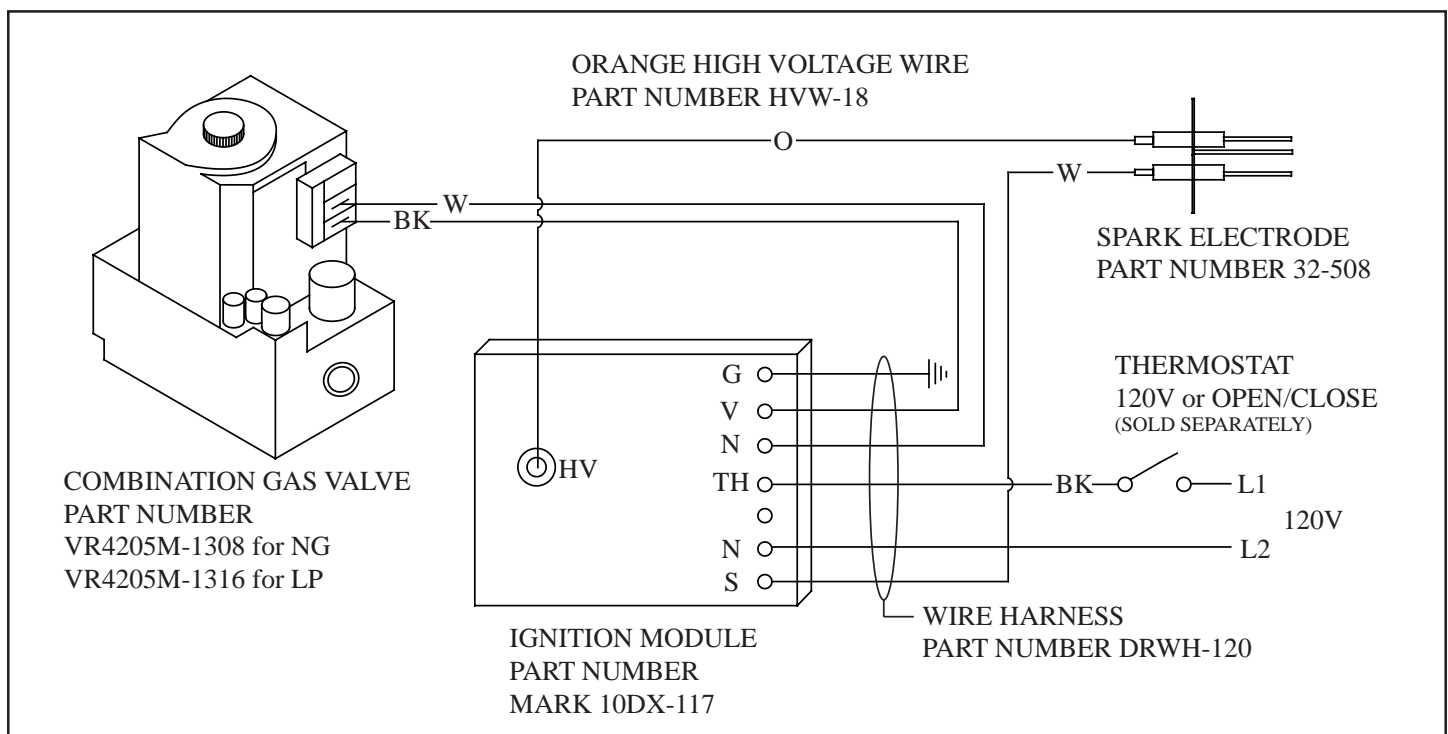

Note: The gas supply to the heater must be connected in accordance with national, state, provincial and local codes. In the U.S., refer to the most current revisions to the ANSI Z 2231 (NFPA 54) standard and in Canada refer to the most current revisions in the CAN/CGA B 149.2 standard.

! WARNING



Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Only trained, qualified gas installation and service personnel may install or service this equipment.



Printed in U.S.A.

© 2006 Detroit Radiant Products Co.
21400 Hoover Rd., Warren, MI 48089
T. (586) 756-0950 F. (586) 756-2626
www.detroitradiant.com
Form# LSH077-5/06 (DRP)