


# DETROIT RADIANT PRODUCTS CO.

## VR4205M-1308 Replacement Instruction Sheet

### Instructions

1. Open (turn off) electrical circuit to heater.
2. Close (turn off) gas supply to heater.
3. Disconnect the wires from circuit board.
4. Remove combination gas valve using two wrenches to loosen gas fitting (union).
5. Install new gas valve using two wrenches to tighten gas fitting (union).
6. Reconnect the wires to the circuit board according to diagram below.
7. Open (turn on) gas supply to heater.
8. Close (turn on) electrical circuit to heater.

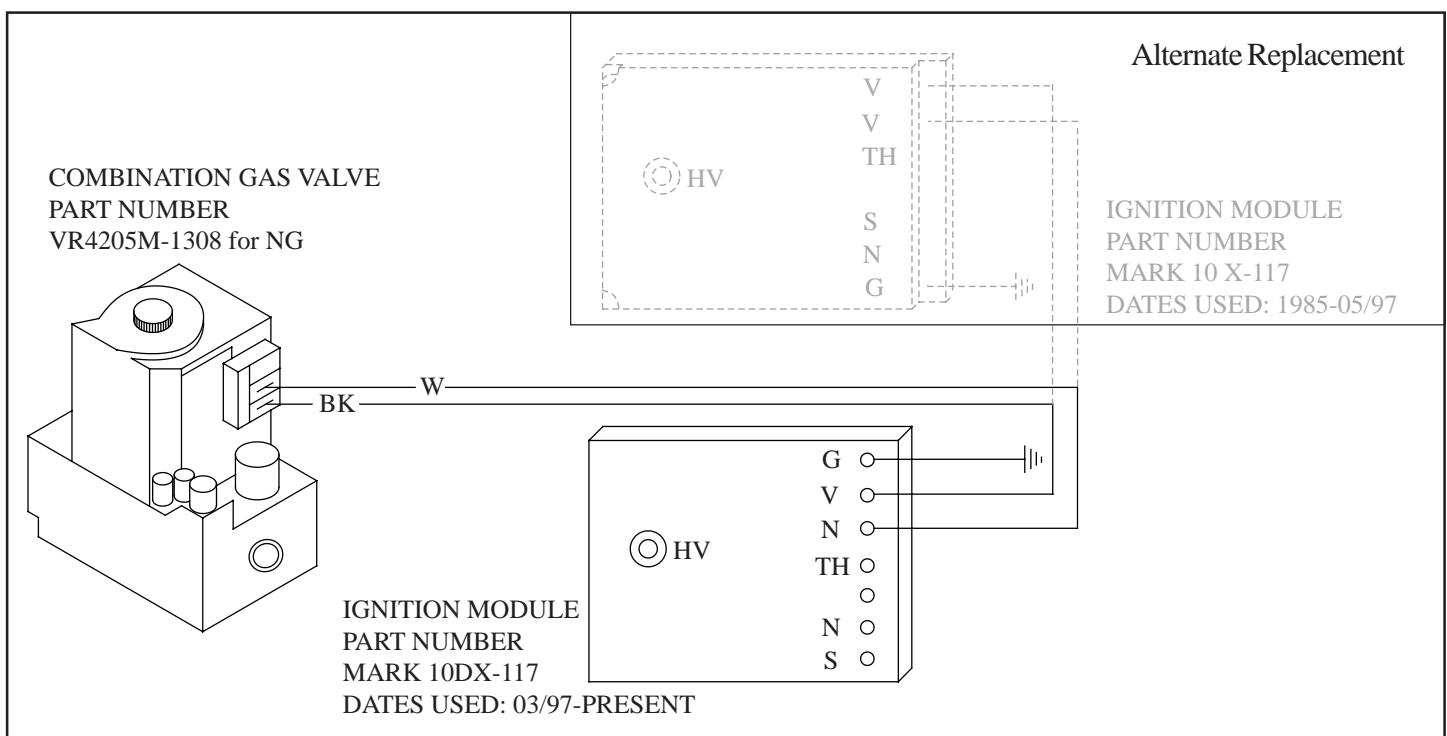

**Note:** The gas supply to the heater must be connected in accordance with national, state, provincial and local codes. In the U.S., refer to the most current revisions to the ANSI Z 2231 (NFPA 54) standard and in Canada refer to the most current revisions in the CAN/CGA B 149.2 standard.

### **WARNING**



**Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Only trained, qualified gas installation and service personnel may install or service this equipment.**



Printed in U.S.A.

© 2006 Detroit Radiant Products Co.  
21400 Hoover Rd., Warren, MI 48089  
T. (586) 756-0950 F. (586) 756-2626  
www.detroitradiant.com  
Form# LSH075-5/06 (DRP)