

High Intensity Parts Instruction Sheet

VR4205M-1357 Replacement Instruction Sheet

For heaters:

DR PFS-2 120V

Parts List

- VR4205M-1357 Valve Assembly


Installation Instructions

- 1 Open (turn off) electrical circuit to heater.
- 2 Close (turn off) gas supply to heater.
- 3 Disconnect the wires from circuit board.
- 4 Remove combination gas valve using two wrenches to loosen gas fitting (union).
- 5 Install new gas valve using two wrenches to tighten gas fitting (union).
- 6 Reconnect the wires to the circuit board according to diagram below.
- 7 Open (turn on) gas supply to heater.
- 8 Close (turn on) electrical circuit to heater.

⚠ WARNING

The following replacement **MUST** be performed by a qualified service person. Improper installation, adjustment, service or maintenance can cause property damage, injury or death.

Figure 1 • Internal Wiring Diagram

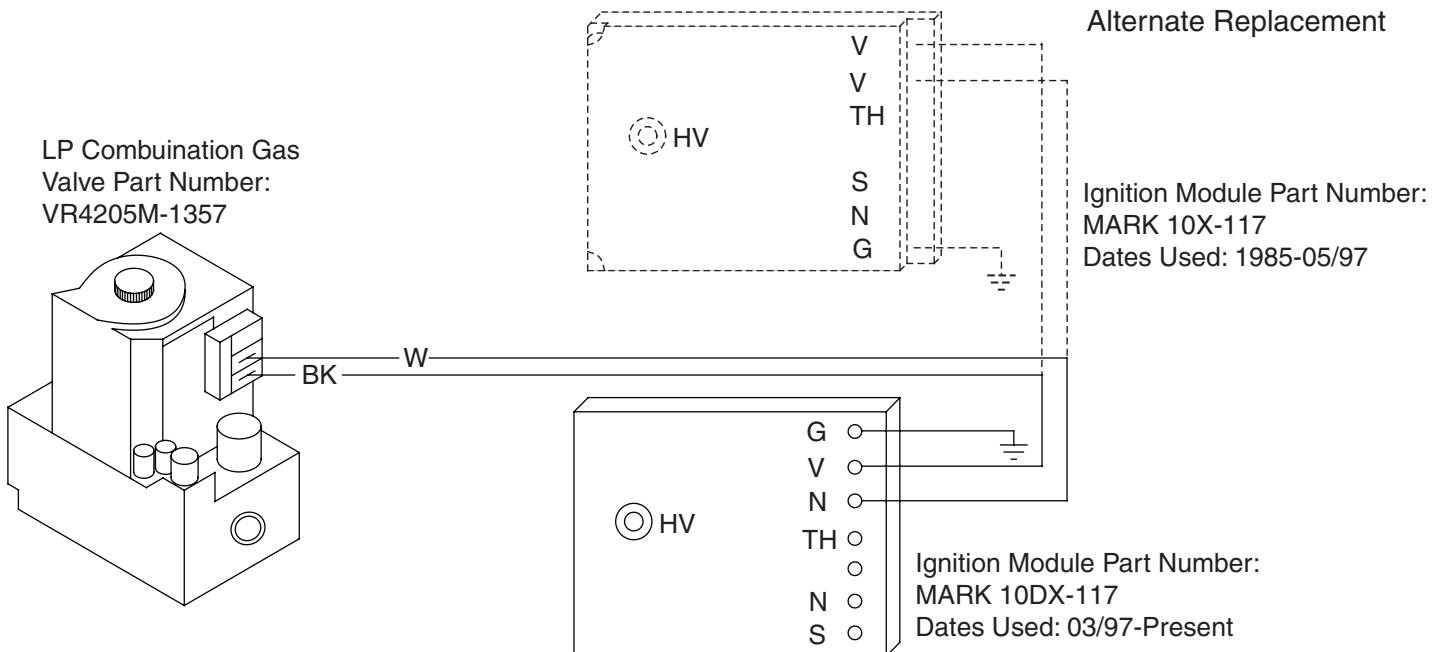

NOTE: The gas supply to the heater must be connected in accordance with national, state, provincial and local codes. In the U.S., refer to the most current revisions to the ANSI Z 2231 (NFPA 54) standard and in Canada refer to the most current revisions in the CAN/CGA B 149.2 standard.