# **Part Install Instructions**

### WP26X22240



#### IMPORTANT SAFETY NOTICE

The information in this part instruction is intended for use by individuals possessing adequate backgrounds of electrical, electronic and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.



To avoid personal injury, disconnect power before servicing this appliance. If electrical power is required for diagnosis or test purposes, disconnect the power immediately after performing the necessary checks. RECONNECT ALL GROUNDING DEVICES If grounding wires, screws, straps, clips, nuts, or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.


## Parts Included:


- Main board
- Instruction Sheet

Replacement of Main Board on AZ45 and AZ65 Zonelines


- 1. Disconnect power and access main board.
- 2. Disconnect all connections on the original board.
- 3. Remove original board and install the new board.
- 4. Reconnect all connections.
- 5. Use the chart on the next page to set the "dip-switches" to correspond with the model number.

# AZ45E09DABW1

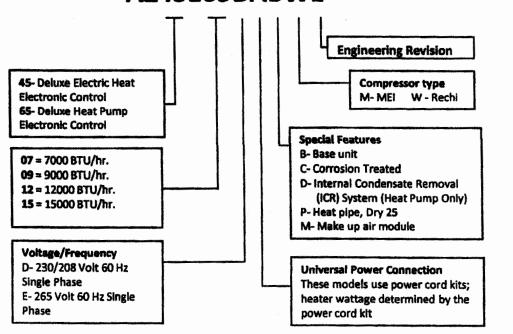

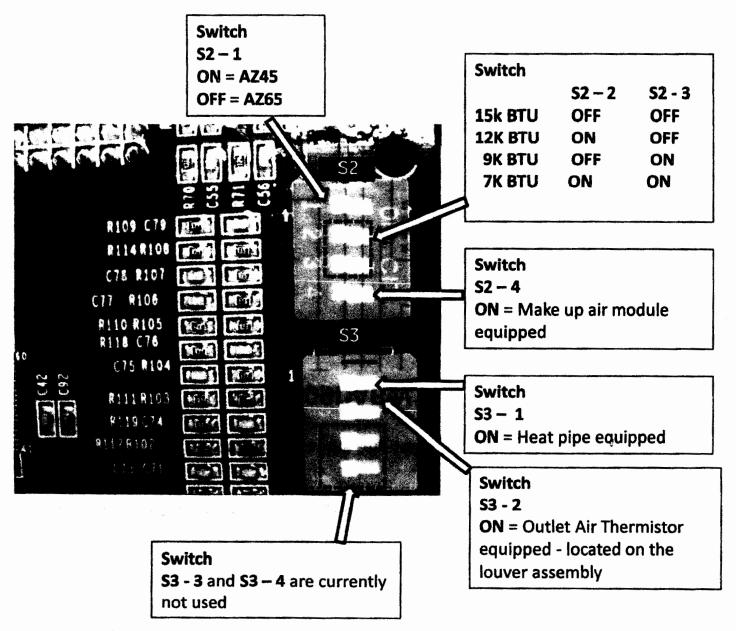

- 6. Reassemble and re-apply power.
- 7. When the unit is powered on after replacing the board, the display will show "P1." Press the "+" button until the second digit matches the last number in the model number as shown below.

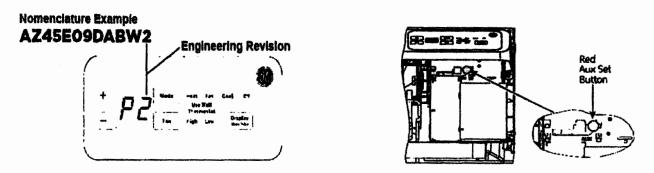

8. Press the red "Aux" button to save and exit, then verify proper operation.