


Instruction of Replacing Motor

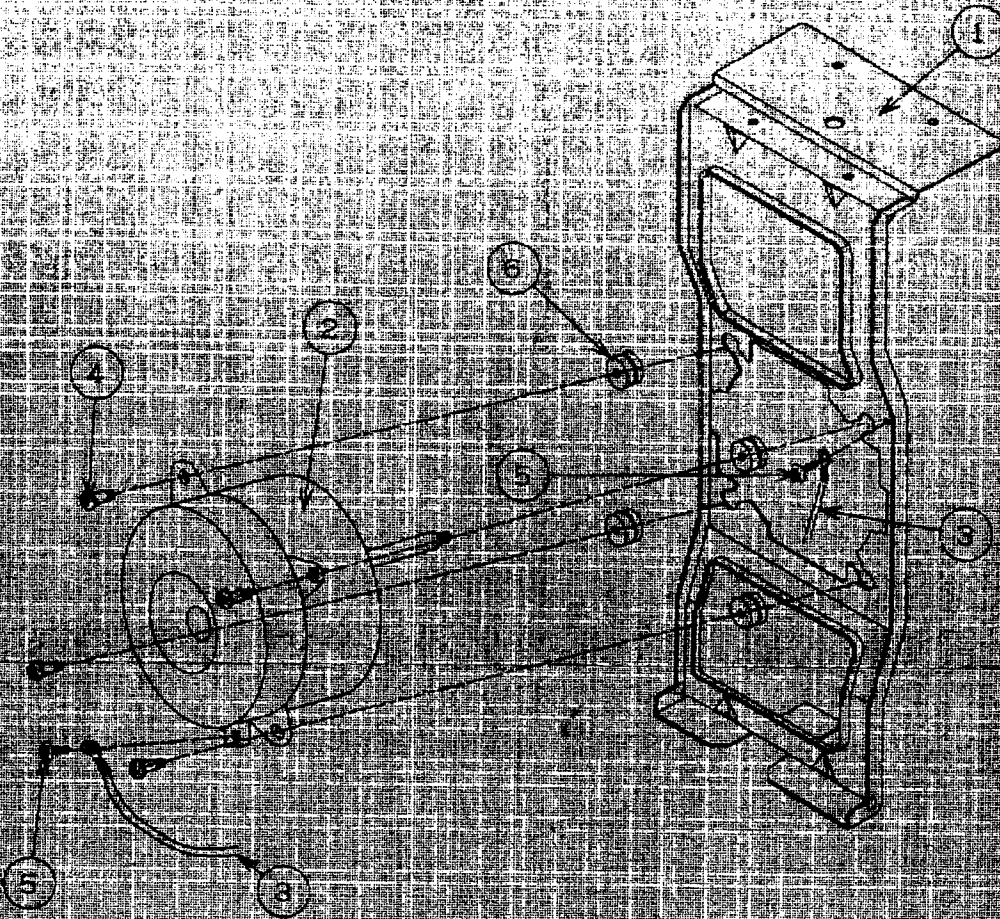

1	MOTOR ANGLE (LANG-A291JBPO)	1
2	MOTOR (VMOTL****JBEO)	1
3	LEAD WIRE (QW-VZD050JBEO)	1
4	SPECIAL SCREW (LX-BZA198JBEO)	4
5	SCREW (XHTWW40P08000)	2
6	MOTOR CUSHION (LHLD-A795JBEZ)	4

AE219