

INLET/OUTLET THERMISTOR REPLACEMENT INSTRUCTIONS

for Kits: 7250P-018 & 7250P-020

If your boiler has a thermistor with 2 exposed blade type connections, please follow the directions below to install this wire harness.

1. Slide one of the yellow wires of the cable assembly through the groove in the supplied insulation displacement connector. See Fig. 1. Position the connector near the 2 pin connector on the yellow wire (in kit #7250P-018) or the blue wire (in kit #7250P-020).
2. Place one of the supplied loose wires into the other side of the insulation displacement connector as shown. See Fig. 2 Be sure the wire passes the metal tang and cannot go any further.
3. Using suitable pliers, squeeze the metal tang down into the connector until it is flush as shown in Fig. 3
4. Fold the cover over the tang as shown in Fig. 4
5. Repeat steps 1-4 for the other wire.
6. Plug new wires into thermistor.

