

**Pressure Switch Replacement Instructions for Models:
STS, STSp, STM, STB, SEM, SEB, STS-JZ, IQ, IT, IS, STR, SER, IR, IA & ATH**

Connecting sensing tubes: Current replacement switches are supplied with two (2) tube connection points. The sensor tube is to be connected to the barb on the switch side. Please see picture below.

