







Model RB-24E-S  
Model RB-24E-A  
Model RB-24E-L  
Model RB-24E-B

# Conductance Type Low Water Cut-Off


with Universal Wiring Harness  
For Residential

24 VAC Hot Water Boilers

Each wiring harness includes connectors which allow a RB-24E LWCO to be connected to most residential hot water boilers having a 24 volt burner circuit.

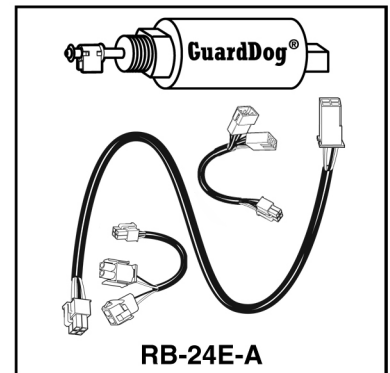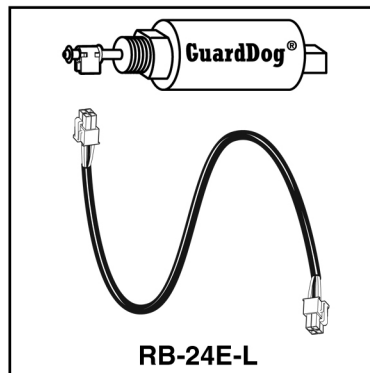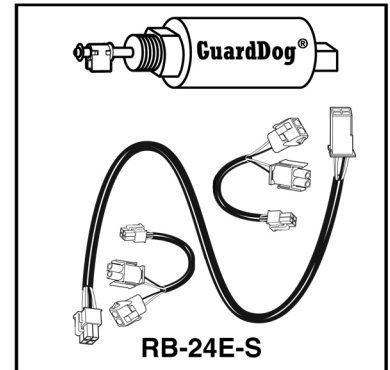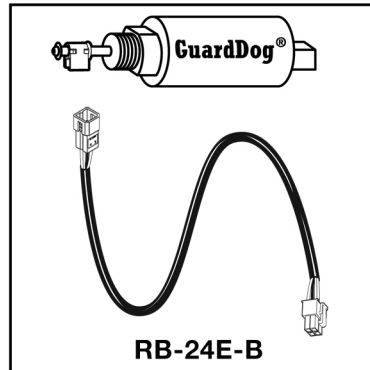

## WARNING

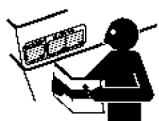

- Before using this product read and understand instructions.

- Save these instructions for future reference.



- All work must be performed by qualified personnel trained in the proper application, installation, and maintenance of plumbing, steam, hot water, and electrical equipment and/or systems in accordance with all applicable codes and ordinances.

- To prevent electrical shock, turn off the electrical power before making electrical connections.



- This low water cut-off must be installed in series with all other limit and operating controls installed on the boiler. After installation, check for proper operation of all of the operating controls, before leaving the site.



- We recommend that secondary (redundant) Low Water Cut-Off controls be installed on all boilers with heat input greater than 400,000 BTU/hour. At least two controls should be connected in series with the burner control circuit to provide safety redundancy protection should the boiler experience a low water condition. Moreover, at each annual out age, the low water cut-offs should be dismantled, inspected, cleaned, and checked for proper calibration and performance.

Failure to follow this warning could cause property damage, personal injury or death.

# OPERATION

The Model RB-24E Low Water Cut-Off is specifically designed to provide burner cut-off if there is an unsafe water loss, which can result from a broken or leaking radiator or pipe, or a cracked section in the boiler.

Water/glycol mixtures up to 50% concentration may be used.

# SPECIFICATIONS

### Temperature:

Storage: -40°F to 120°F (-40°C to 49°C)

Ambient: 32°F to 120°F (0°C to 49°C)

**Humidity:** 85% (non-condensing)


**Maximum Water Pressure:** 160 psi (11.2 kg/cm<sup>2</sup>)

**Maximum Water Temperature:** 250°F (121°C)

### Electrical Ratings



Voltage	Power Consumption	Switching Capacity
24 VAC	2.5 VA	2A at 24 VAC

**Enclosure Rating:** NEMA 1 General Purpose

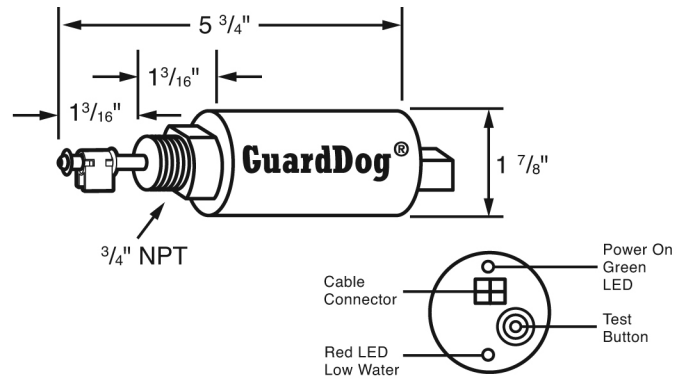

**IMPORTANT:** Do not use Model RB-24E on steam boilers.

**IMPORTANT:** Do not use on millivolt systems.

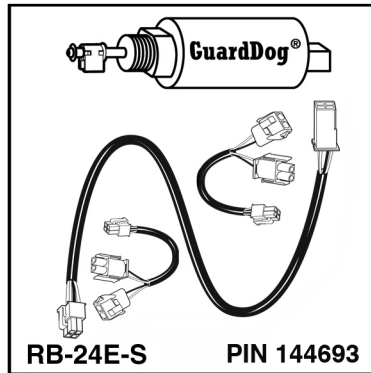
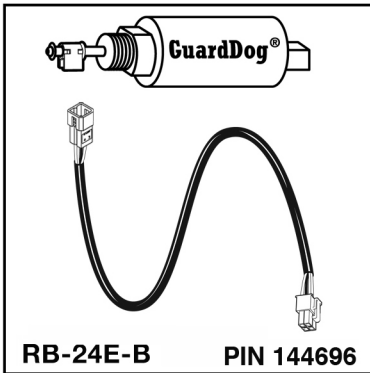


The **RB-24E-B** is for use on hot water boilers that have a harness plug connection.

- 5 foot connector cable harness

The **RB-24E-S** is for use on hot water boilers that have a transformer plug connection to the aquastat.

- 5 foot connector cable
- 'Y' harness for Honeywell Aquastat
- 'Y' harness for United Technologies burner control module

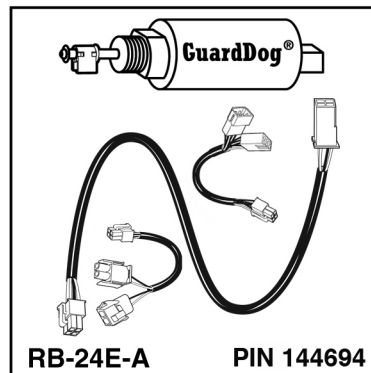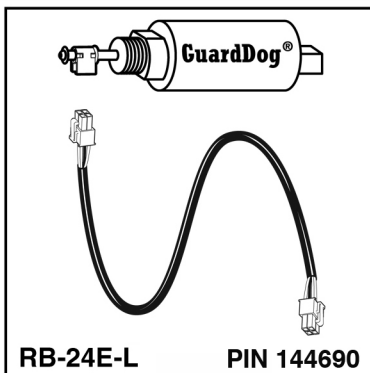

The **RB-24E-L** is for use on hot water boilers that have a control panel plug connection.

- 5 foot connector cable

The **RB-24E-A** is for use on hot water boilers that have a vent damper.

- 5 foot connector cable
- 6 pin connector 'Y' harness
- 4 pin connector 'Y' harness

# INSTALLATION –

### TOOLS NEEDED:

Pipe wrench or channel lock pliers.

## STEP 1 - Electrical Wiring Options

### WARNING



- To prevent electrical shock, turn off the electrical power before making electrical connections.
  - This low water cut-off must be installed in series with all other limit and operating controls installed on the boiler. After installation, check for proper operation of all of the limit and operating controls, before leaving the site.
- Failure to follow this warning could cause property damage, personal injury or death.


### Option 1

#### RB-24E-A 4-Pin Damper 'Y' Harness with GRAY Color Tubing for Atmospheric Boilers

Install angle bracket (1) on vent damper using fitting (2) and nut (3).

- Install BX connector to angle bracket.
- Plug 4-pin connector of 'Y' harness to 4-pin connector on vent damper.
- Plug 4-pin connector of boiler's vent damper wiring harness to connector of 'Y' harness.

**NOTE**  
This 'Y' Harness can only be used with vent dampers with 4-pin connectors.

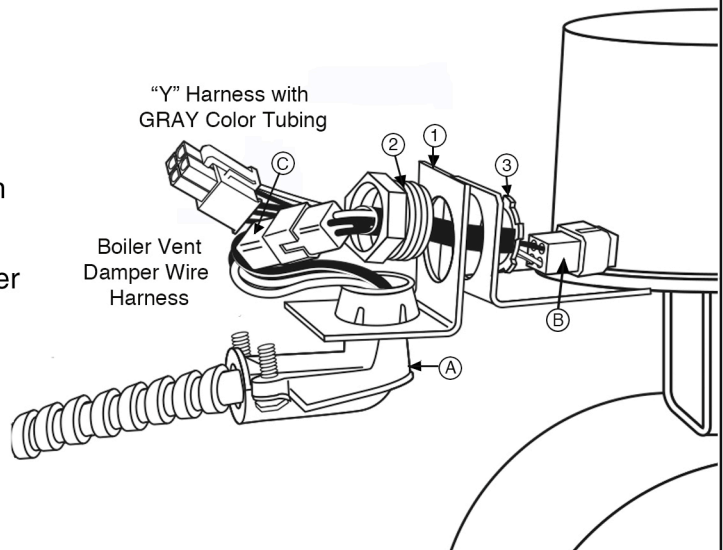


### Option 2

#### RB-24E-A 6-Pin Damper 'Y' Harness with BLACK Color Tubing for Atmospheric Boilers

- Remove 6-pin connector of damper wiring harness from connector on aquastat.
- Plug 6-pin connector of damper 'Y' harness to connector on aquastat.
- Plug connector of damper 'Y' harness to connector of boiler's damper wiring harness.

**NOTE**  
This 'Y' Harness can only be used with vent dampers with 6-pin connectors.

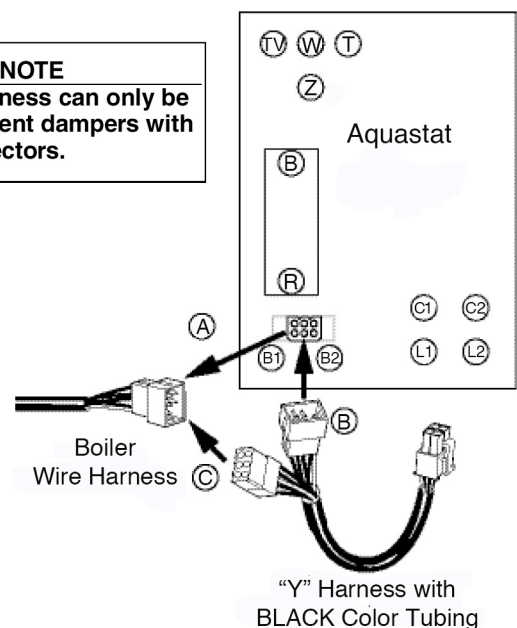


## STEP 1 - Electrical Wiring Options (continued)

### Option 3

#### RB-24E-S Transformer 'Y' Harness with BLUE Color Tubing


- A.** Remove connector of boiler wiring harness from boiler control transformer connector.
- B.** Plug connector of boiler wiring harness to connector of 'Y' harness with BLUE color tubing.
- C.** Plug connector of 'Y' harness with BLUE color tubing to boiler control transformer connector.

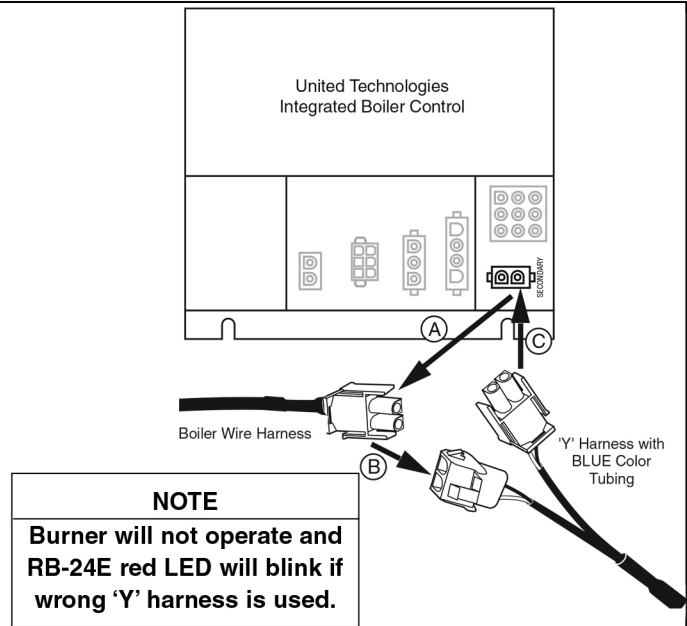

### Option 4


#### RB-24E-S Transformer 'Y' Harness with GREEN Color Tubing

- A.** Remove connector of boiler wiring harness from Aquastat transformer connector.
- B.** Plug connector of boiler wiring harness to connector of 'Y' harness with GREEN color tubing.
- C.** Plug connector of 'Y' harness with GREEN color tubing to Aquastat transformer connector.

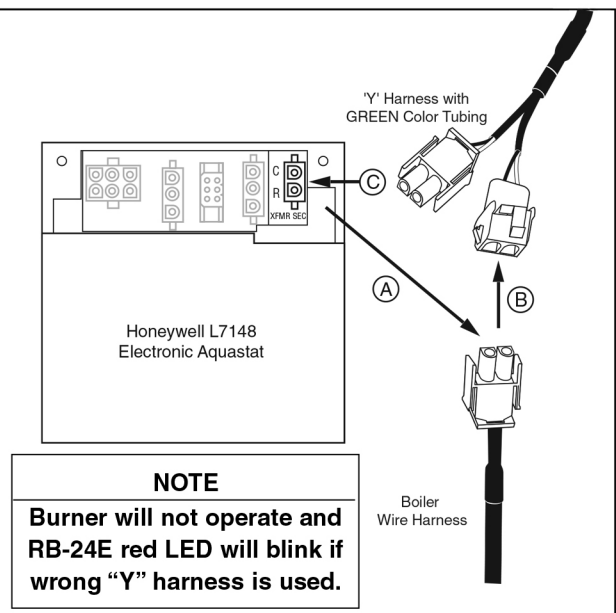

**Option 5**  
**RB-24E-L Connector**  
**with Gray or Orange Color Tubing for Control Panel Connection**


- (A)** Remove jumper plug from plug-in connector on control panel
- (B)** Plug connector of wiring harness into plug-in Connector on control panel.

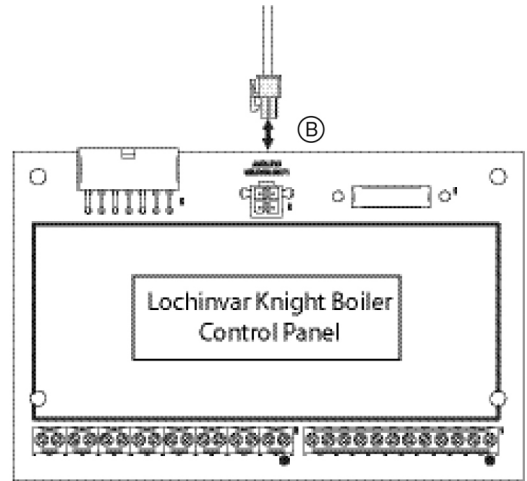

**Option 6**  
**RB-24E-B Connector**  
**with Purple Color Tubing for Harness Plug Connection**

- (A)** Remove jumper plug from plug-in connector on control panel
- (B)** Plug connector of wiring harness into plug-in Connector on harness plug connection.

**Note: For Burnham Alpine Boiler**

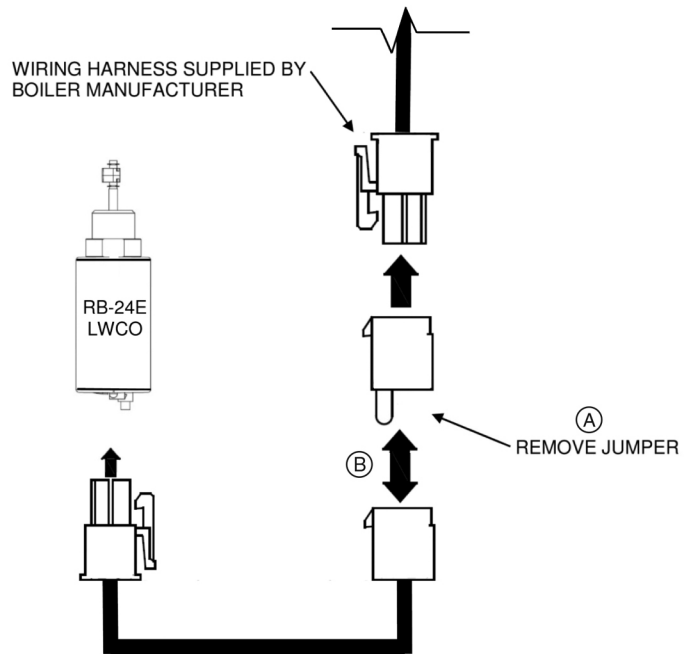

## STEP 2 - Determine the Location of the Low Water Cut-Off

Determine where to install the probe control based on the following requirements:


1. If tapplings are provided on the boiler, the probe control must be installed in a tapping above the minimum safe water level, as specified by the boiler manufacturer. If no specified minimum safe water level is designated, contact the boiler manufacturer.
2. If **no tapping is provided** on the boiler, the probe control can be installed in a header or riser pipe above the boiler. Refer to the Typical Installation Diagrams below.

### NOTE


Make sure RB-24E is located close enough (no more than 4 ft.) to burner control so the harness can be connected.

## TYPICAL INSTALLATIONS

### On the Boiler (RECOMMENDED)

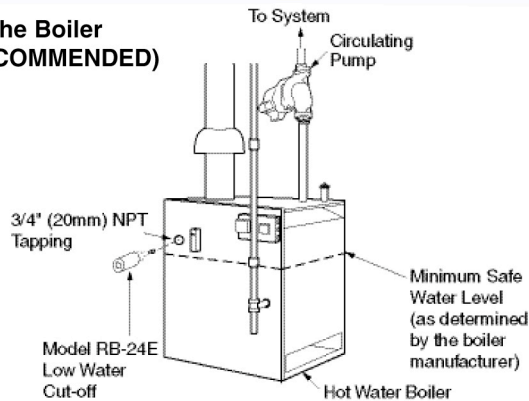

### In a Pipe Tee Above the Boiler

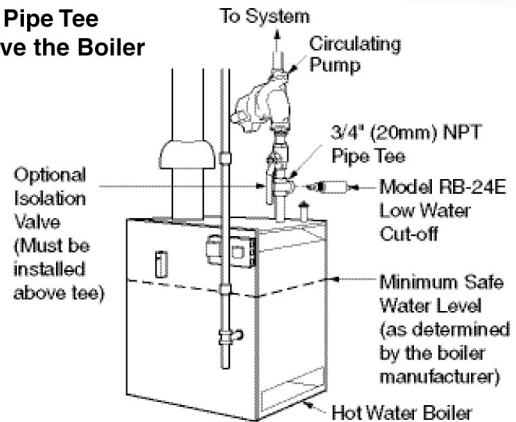

## STEP 3 - Installing the Low Water Cut-Off

- a. **Sparingly**, apply pipe sealant to the external threads (D) of the probe (A).

### WARNING


Do not use PTFE tape. Only use pipe sealant. Failure to follow these instructions will cause the probe not to function as intended and could cause property damage, personal injury or death.




- b. Insert the probe portion (B) of the low water cut-off into the 3/4 inch (20mm) NPT tapping (C) on the boiler

**OR** into a 3/4 inch (20mm) NPT pipe or reducing tee (D) above the boiler. Do not cross thread the low water cut-off.


Fully **hand tighten** the low water cut-off (approximately 4 revolutions) to approximately 6 ft•lb (8 N•m).

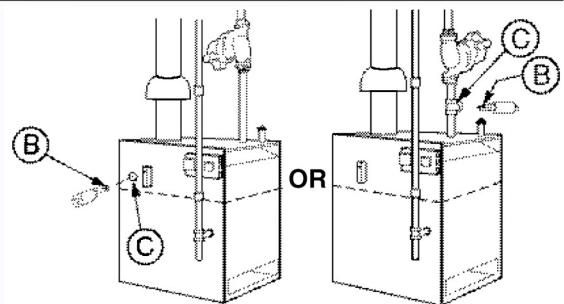

- c. Using a wrench, tighten the unit (A) into the tapped connection (E) that was determined in Step 1 of these instructions. Tighten to 47 ft•lb (64 N•m).

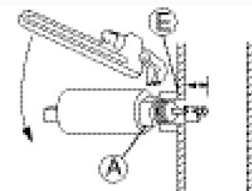

- d. Install the plug end of the cable (E) into the low water cut-off (F).


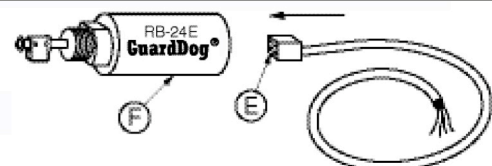


## STEP 4 - Testing

- a. **Before filling the system**, turn on the electric power to the boiler. The low water cut-off's green "Power On" LED should be illuminated. With the room thermostat set on "heat," confirm that the burner **will not** operate without water in the system. The low water cut-off's red LED should be illuminated.

NOTE: The burner will come on briefly (1 second or less) and then shut off to verify proper operation.

- b. Fill the system with water. When water is just above the probe, the low water cut-off's red LED should turn off.
- c. Check and confirm that the boiler's thermostat, burner and safety limits are operating properly after filling system and before leaving the site.
- d. Check the threaded connection of the low water cut-off for leakage. Tighten, if necessary.

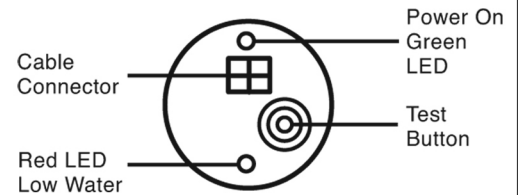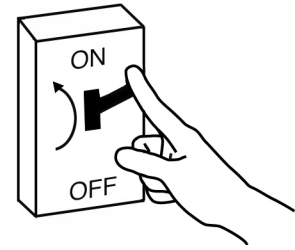

### Testing Control Using "Test Button"

Pressing the "Test Button" interrupts the probe circuit which simulates water off the probe.

- a. Press and hold "test button" while burner is running.
- b. The burner should turn OFF and red light turn ON if burner is wired correctly.
- c. Release the test button and the red light should turn off and the boiler should turn on provided that the boiler water in contact with the probe.

## INSTALLATION COMPLETE

### TROUBLESHOOTING:

If control fails to operate, perform the following diagnostic checks.

1. Check to be sure that the water level in the boiler is at or above the level of the probe.
2. Re-check all wiring to ensure proper connections as specified in boiler manufacturers wiring diagrams.
3. Check to ensure that PTFE tape has not been used on the threaded connection of the probe to the boiler.
4. Check the quality of the boiler water to ensure adequate conductance.

**Boiler Does Not Turn Off** (when water is below probe)

- Turn off boiler and check boiler wiring connections.
- Turn off boiler, drain boiler and remove control to check if the tip of the probe is touching a metal surface.

**Boiler Does Not Turn ON**

- Make sure water is above the level of the probe.
- Make sure probe is installed in a location where an air pocket cannot develop.
- Check boiler wiring connections.

**Boiler Does Not Turn ON and RB-24E Red LED blinking**

- Problem is wrong transformer 'Y' harness.
- Turn off boiler and install correct transformer 'Y' harness.

# MAINTENANCE

## SCHEDULE:

- Test the low water cut-off annually or more frequently.
- Remove and inspect the self-cleaning probe every 5 years.
- Replace the low water cut-off every 15 years.

### NOTE

Clean probe by wiping with non-abrasive cloth and rinsing with clean water. DO NOT use sharp instruments to remove any accumulations of rust or scale.

### CAUTION

Replace Probe if:

- PTFE insulator is cracked or worn.
- Probe is loose.

Failure to follow this caution could cause property damage, personal injury or death.

#### COMMERCIAL WARRANTY

**Warranty.** For goods sold to commercial buyers, Seller warrants the goods sold to Buyer hereunder (with the exception of membranes, seals, gaskets, elastomer materials, coatings and other "wear parts" or consumables all of which are not warranted except as otherwise provided in the quotation or sales form) will be (i) be built in accordance with the specifications referred to in the quotation or sales form, if such specifications are expressly made a part of this Agreement, and (ii) free from defects in material and workmanship for a period of one (1) year from the date of installation or two (2) years from the date of manufacture, whichever shall occur first, unless a longer period is specified in the product documentation (the "Warranty").

Except as otherwise required by law, Seller shall, at its option and at no cost to Buyer, either repair or replace any product which fails to conform with the Warranty provided Buyer gives written notice to Seller of any defects in material or workmanship within ten (10) days of the date when any defects or non-conformance are first manifest. Under either repair or replacement option, Seller shall not be obligated to remove or pay for the removal of the defective product or install or pay for the installation of the replaced or repaired product and Buyer shall be responsible for all other costs, including, but not limited to, service costs, shipping fees and expenses. Seller shall have sole discretion as to the method or means of repair or replacement. Buyer's failure to comply with Seller's repair or replacement directions shall terminate Seller's obligations under this Warranty and render the Warranty void. Any parts repaired or replaced under the Warranty are warranted only for the balance of the warranty period on the parts that were repaired or replaced. Seller shall have no warranty obligations to Buyer with respect to any product or parts of a product that have been: (a) repaired by third parties other than Seller or without Seller's written approval; (b) subject to misuse, misapplication, neglect, alteration, accident, or physical damage; (c) used in a manner contrary to Seller's instructions for installation, operation and maintenance; (d) damaged from ordinary wear and tear, corrosion, or chemical attack; (e) damaged due to abnormal conditions, vibration, failure to properly prime, or operation without flow; (f) damaged due to a defective power supply or improper electrical protection; or (g) damaged resulting from the use of accessory equipment not sold or approved by Seller. In any case of products not manufactured by Seller, there is no warranty from Seller; however, Seller will extend to Buyer any warranty received from Seller's supplier of such products.

**THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER EXPRESS OR IMPLIED WARRANTIES, GUARANTEES, CONDITIONS OR TERMS OF WHATEVER NATURE RELATING TO THE GOODS PROVIDED HEREUNDER, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY EXPRESSLY DISCLAIMED AND EXCLUDED. EXCEPT AS OTHERWISE REQUIRED BY LAW, BUYER'S EXCLUSIVE REMEDY AND SELLER'S AGGREGATE LIABILITY FOR BREACH OF ANY OF THE FOREGOING WARRANTIES ARE LIMITED TO REPAIRING OR REPLACING THE PRODUCT AND SHALL IN ALL CASES BE LIMITED TO THE AMOUNT PAID BY THE BUYER FOR THE DEFECTIVE PRODUCT. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY OTHER FORM OF DAMAGES, WHETHER DIRECT, INDIRECT, LIQUIDATED, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY OR SPECIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFIT, LOSS OF ANTICIPATED SAVINGS OR REVENUE, LOSS OF INCOME, LOSS OF BUSINESS, LOSS OF PRODUCTION, LOSS OF OPPORTUNITY OR LOSS OF REPUTATION.**

#### LIMITED CONSUMER WARRANTY

**Warranty.** For goods sold for personal, family or household purposes, Seller warrants the goods purchased hereunder (with the exception of membranes, seals, gaskets, elastomer materials, coatings and other "wear parts" or consumables all of which are not warranted except as otherwise provided in the quotation or sales form) will be free from defects in material and workmanship for a period of one (1) year from the date of installation or two (2) years from the product date code, whichever shall occur first, unless a longer period is provided by law or is specified in the product documentation (the "Warranty").

Except as otherwise required by law, Seller shall, at its option and at no cost to Buyer, either repair or replace any product which fails to conform with the Warranty provided Buyer gives written notice to Seller of any defects in material or workmanship within ten (10) days of the date when any defects or non-conformance are first manifest. Under either repair or replacement option, Seller shall not be obligated to remove or pay for the removal of the defective product or install or pay for the installation of the replaced or repaired product and Buyer shall be responsible for all other costs, including, but not limited to, service costs, shipping fees and expenses. Seller shall have sole discretion as to the method or means of repair or replacement. Buyer's failure to comply with Seller's repair or replacement directions shall terminate Seller's obligations under this Warranty and render this Warranty void. Any parts repaired or replaced under the Warranty are warranted only for the balance of the warranty period on the parts that were repaired or replaced. The Warranty is conditioned on Buyer giving written notice to Seller of any defects in material or workmanship of warranted goods within ten (10) days of the date when any defects are first manifest.

Seller shall have no warranty obligations to Buyer with respect to any product or parts of a product that have been: (a) repaired by third parties other than Seller or without Seller's written approval; (b) subject to misuse, misapplication, neglect, alteration, accident, or physical damage; (c) used in a manner contrary to Seller's instructions for installation, operation and maintenance; (d) damaged from ordinary wear and tear, corrosion, or chemical attack; (e) damaged due to abnormal conditions, vibration, failure to properly prime, or operation without flow; (f) damaged due to a defective power supply or improper electrical protection; or (g) damaged resulting from the use of accessory equipment not sold or approved by Seller. In any case of products not manufactured by Seller, there is no warranty from Seller; however, Seller will extend to Buyer any warranty received from Seller's supplier of such products.

**THE FOREGOING WARRANTY IS PROVIDED IN PLACE OF ALL OTHER EXPRESS WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE (1) YEAR FROM THE DATE OF INSTALLATION OR TWO (2) YEARS FROM THE PRODUCT DATE CODE, WHICHEVER SHALL OCCUR FIRST. EXCEPT AS OTHERWISE REQUIRED BY LAW, BUYER'S EXCLUSIVE REMEDY AND SELLER'S AGGREGATE LIABILITY FOR BREACH OF ANY OF THE FOREGOING WARRANTIES ARE LIMITED TO REPAIRING OR REPLACING THE PRODUCT AND SHALL IN ALL CASES BE LIMITED TO THE AMOUNT PAID BY THE BUYER FOR THE DEFECTIVE PRODUCT. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY OTHER FORM OF DAMAGES, WHETHER DIRECT, INDIRECT, LIQUIDATED, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY OR SPECIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFIT, LOSS OF ANTICIPATED SAVINGS OR REVENUE, LOSS OF INCOME, LOSS OF BUSINESS, LOSS OF PRODUCTION, LOSS OF OPPORTUNITY OR LOSS OF REPUTATION.**

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

To make a warranty claim, check first with the dealer from whom you purchased the product or call +1-847-966-3700 for the name and location of the nearest dealer providing warranty service.

**xylem**  
Let's Solve Water

Xylem Inc.  
8200 N. Austin Avenue  
Morton Grove, Illinois 60053  
Phone: (847) 966-3700  
Fax: (847) 965-8379  
www.mcdonnellmiller.com

McDonnell & Miller is a trademark of Xylem Inc. or one of its subsidiaries.  
© 2015 Xylem Inc. MM-277K December 2015 Part No. 210589

