



1-550.31
5H0707180000

May, 2017

INSTALLATION AND SERVICE MANUAL steam/hot water unit heaters



Model HSB
Horizontal Delivery
Top/Bottom
Inlet/Outlet



Model HC
Horizontal Delivery
Side
Inlet/Outlet



Models V/VN
Vertical Delivery



Model PT/PTN
"Power-Throw"



General Information

Installation and service instructions in this manual are applicable to the three types of steam/hot water unit heaters which should be installed in their proper applications for their most effective function as overhead heating units.

The copper coils are warranted for operation at steam or hot water pressures up to 150 lbs. per sq. in. gauge, and or temperatures up to 375°F, cupronickel tube units are warranted for operating pressures up to 250 PSI and operating temperatures up to 400°F. Canadian Standards Association (CSA) requirements state that explosion-proof units may not be used with a fluid temperature in excess of 329°F and still maintain their explosion-proof rating, for national electric code ignition temperature rating T3B for grain dust.

Motors are designed for continuous duty. They can operate in a maximum ambient temperature of 104°F (40°C).

The unit heaters are listed by the Canadian Standards Association as certified and Canadian Registered heat exchangers CRN OH 9234.5C. *Does not apply to V/PT 952.

IMPORTANT

The use of this manual is specifically intended for a qualified installation and service agency. A qualified installation and service agency must perform all installation and service of these appliances.

Inspection On Arrival

1. Inspect unit upon arrival. In case of damage, report it immediately to transportation company and your local factory sales representative.
2. Check rating plate on unit to verify that power supply meets available electric power at point of installation.
3. Inspect unit received for conformance with description of product ordered (including specifications where applicable).

! CAUTION

Do not remove outlet fan guard from vertical type unit heaters.
Use caution not to overtighten connections.

Steam horizontal and vertical delivery unit heaters are available in both standard and low-outlet temperature models. Low outlet temperature models are recommended primarily for installation on heating systems with steam pressures of 30 to 150 PSI. When used at these steam pressures they provide lower outlet air temperatures for longer heat throw and, because of wider fin spacing, they are less susceptible to clogging in dusty atmospheres.

The model number of each unit heater indicates its rated Btu/Hr. capacity/1000 at 2 lbs. steam pressure and 60°F entering air temperature. For example an HSB 63 has an output of 63,000 Btu/Hr. at 2 lbs. steam and 60°F entering air.

SPECIAL PRECAUTIONS / TABLE OF CONTENTS / SI (METRIC) CONVERSION FACTORS

SPECIAL PRECAUTIONS

THE INSTALLATION AND MAINTENANCE INSTRUCTIONS IN THIS MANUAL MUST BE FOLLOWED TO PROVIDE SAFE, EFFICIENT AND TROUBLE-FREE OPERATION. IN ADDITION, PARTICULAR CARE MUST BE EXERCISED REGARDING THE SPECIAL PRECAUTIONS LISTED BELOW. FAILURE TO PROPERLY ADDRESS THESE CRITICAL AREAS COULD RESULT IN PROPERTY DAMAGE OR LOSS, PERSONAL INJURY, OR DEATH. THESE INSTRUCTIONS ARE SUBJECT TO ANY MORE RESTRICTIVE LOCAL OR NATIONAL CODES.

HAZARD INTENSITY LEVELS

- DANGER:** Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.
- WARNING:** Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.
- CAUTION:** Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.
- IMPORTANT:** Indicates a situation which, if not avoided, MAY result in a potential safety concern.



DANGER

Appliances with power codes 01, 02, 04, 05, and 10 must not be installed where they may be exposed to a potentially explosive or flammable atmosphere.



WARNING

- Disconnect power supply before making wiring connections to prevent electrical shock and equipment damage.
- All appliances must be wired strictly in accordance with wiring diagram furnished with the appliance. Any wiring different from the wiring diagram could result in a hazard to persons and property.
- Any original factory wiring that requires replacement must be replaced with wiring material having a temperature rating of at least 105°C.
- Ensure that the supply voltage to the appliance as indicated on the serial plate, is not 5% greater than the rated voltage.
- When servicing or repairing this equipment, use only factory-approved service replacement parts. A complete replacement parts list may be obtained by contacting Modine Manufacturing Company. Refer to the rating plate on the appliance for complete appliance model number, serial number, and company address. Any substitution of parts or controls not approved by the factory will be at the owner's risk.



CAUTION

- Do not remove outlet fan guard from vertical type unit heaters.
- Do not install units below 8 feet measured from the bottom of the unit to the floor.
- Service or repair of this equipment must be performed by a qualified service agency.
- Do not reuse any electrical component which has been wet. Replace component.
- Ensure that the supply voltage to the appliance, as indicated on the serial plate is not 5% less than the rated voltage.
- Heaters are designed for use in heating applications with ambient temperatures between 0°F and 100°F in hot water applications and -10°F to 100°F in steam applications.

IMPORTANT

- Start-up and adjustment procedures must be performed by a qualified service agency.
- To check most of the Possible Remedies in the troubleshooting guide listed in Table 15.1, refer to the applicable sections of the manual.

Table of Contents

General Information.....	1
Special Precautions.....	2
SI (Metric) Conversion Factors.....	2
Unit Location.....	3
Unit Mounting	3-4
Unit Suspension	5
Installation	5-6
Piping	5
Electrical Connections	5
Operation.....	6
Prior to Operation.....	6
Initial Start-up.....	6
Automatic Control Operations	6
General	7
Performance Data	8-11
Dimensional Data	12-13
Service.....	14
Service / Troubleshooting	15
Warranty	Back Page

SI (METRIC) CONVERSION FACTORS

Table 2.1

To Convert	Multiply By	To Obtain	To Convert	Multiply By	To Obtain
"W.C.	0.249	kPa	feet	0.305	m
°F	(°F-32) x 5/9	°C	Gal/Hr.	0.00379	m³/hr
Btu	1.06	kJ	Gal/Hr.	3.79	l/hr
Btu/ft ²	37.3	kJ/m ²	gallons	3.79	l
Btu/hr	0.000293	kW	Horsepower	746	W
CFH (ft/hr)	0.000472	m³/min	inches	25.4	mm
CFH (ft/hr)	0.00000787	m³/s	pound	0.454	kg
CFM (ft/min)	0.0283	m³/min	psig	6.89	KPa
CFM (ft/min)	0.000472	m³/s	psig	27.7	"W.C.

UNIT LOCATION / UNIT MOUNTING

UNIT LOCATION

DANGER

Appliances with power codes 01, 02, 04, 05, and 10 must not be installed where they may be exposed to a potentially explosive or flammable atmosphere.

1. Units should not be installed in atmospheres where corrosive fumes or sprays are present.
2. Be sure no obstructions block air intake or air discharge of unit heater.
3. Locate horizontal delivery unit heaters so air streams of individual units wipe the exposed walls of the building with either parallel or angular flow without blowing directly against the walls. Heaters should be spaced so the air stream from one supports the air stream from another heater. See Figure 3.1.
4. Columns, machinery, partitions, and other obstacles should not interfere with air streams from unit heaters.
5. Unit heaters installed in a building exposed to a prevailing wind should be located to direct a major volume of heated air along the windward wall of the building.
6. Large expanses of glass, or large doors that are frequently opened, should be covered by long-throw unit heaters such as large horizontal delivery of "Power-Throw" unit heaters.
7. Vertical delivery unit heaters should generally be located in the central area of the space to be heated. Place horizontal delivery units along the walls of the same building where heat loss is usually greatest. See Figure 3.3.
8. Arrange horizontal delivery units so they do not blow directly at occupants. Air streams from this type of unit should be directed down aisles, into open spaces on the floor, or along exterior walls.
9. When only vertical delivery units are installed, they should be located so exposed walls are blanketed by their air streams. See Figure 3.2.

Figure 3.1 - Horizontal Delivery Unit Location

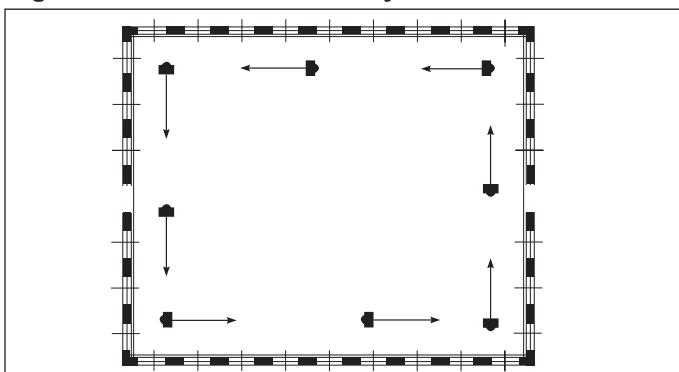


Figure 3.2 - Unit Locations of Vertical Units In Narrow Buildings


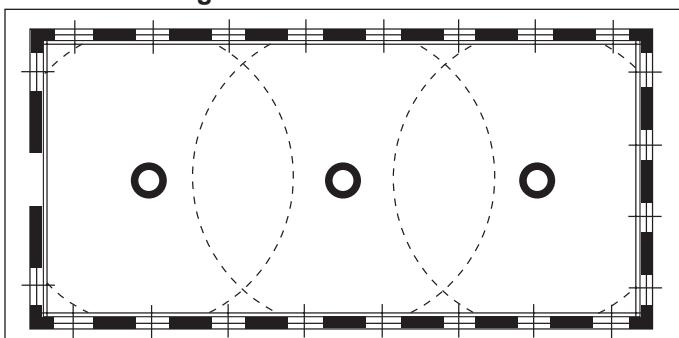


Figure 3.3 - Combination Horizontal and Vertical Delivery Unit Installation

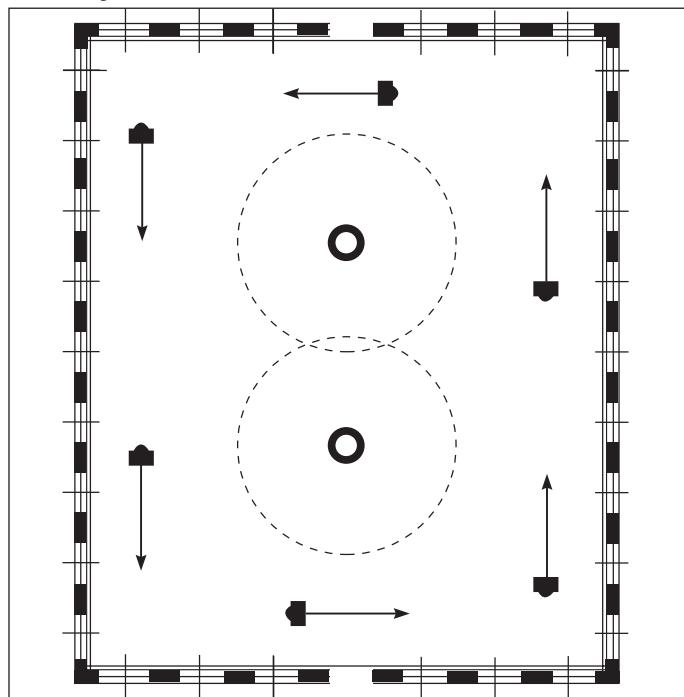

UNIT MOUNTING

CAUTION

Do not install units below 8 feet measured from the bottom of the unit to the floor.

Do not install unit above recommended maximum mounting heights. Height at which unit heaters are installed is critical. Maximum mounting heights for all units are listed in Table 4.1 and the height dimensions are shown in Figures 4.3 through 4.7. Maximum mounting heights for vertical models are given for units with or without optional air deflectors. The data in Table 4.1 is based on operating conditions of 2 lbs. steam or 220°F entering water with 60°F entering air. When operating conditions are other than those above, refer to Figure 4.2 for maximum mounting height correction factor. To obtain the maximum mounting at actual operating conditions, multiply the appropriate factor from Figure 4.2 by the mounting height in Table 4.1. The maximum mounting height for all units is that height above which the unit heater will not deliver heated air to the floor at standard rating conditions.

Deflector Mounting

If an optional air deflector has been furnished for vertical units, it is always shipped separately and can be attached to the unit before suspension. Vertical louvers for horizontal units and horizontal louvers for "Power-Throw" units can also be added and positioned before installation. Cone-jet and louver-type deflectors must be attached with angle brackets and machine screws to the bottom cover of the unit. Refer to mounting instructions which are furnished with each deflector.

Depending on supply or return piping arrangement, there is a possibility of interference between certain anemostat air deflectors and piping on some vertical air delivery unit heaters. Check dimensions.

UNIT MOUNTING


Table 4.1 - Maximum Mounting Heights

Horizontal Type ①			Power-Throw Type ②			Vertical Type with Deflectors ②								
						No Deflector		Cone-Jet		Truncone		Louvers		
Model No.	Height (ft)		Model No.	Height (ft)		Model No.	Height (ft)		Model No.	Height (ft)		Model No.	Height (ft)	
	Std.	L.O.T.		Std.	L.O.T.		Std.	L.O.T.		Std.	L.O.T.		Std.	L.O.T.
HSB/HC 18	8	9	—	—	—	V/VN 42 ②	11	13	15	17	8	9	13	15
HSB/HC 24	9	11	—	—	—	V/VN 59 ②	14	16	19	22	9	11	16	18
HSB/HC 33	10	12	—	—	—	V/VN 78 ②	15	19	20	26	11	14	17	22
HSB/HC 47	12	14	—	—	—	V/VN 95 ②	15	19	20	26	11	14	17	22
HSB/HC 63	14	16	—	—	—	V/VN 139 ②	18	23	24	31	13	17	21	26
HSB/HC 86	15	17	—	—	—	V/VN 161 ②	20	26	27	35	14	18	23	30
HSB/HC 108	17	19	—	—	—	V/VN 193 ②	22	27	30	36	16	19	25	31
HSB/HC 121	16	18	—	—	—	V/VN 212 ②	22	27	30	36	16	19	25	31
HSB/HC 165	19	21	—	—	—	V/VN 247 ②	26	32	34	42	17	21	30	37
HSB/HC 193	18	—	PT/PTN 279 ②	16	—	V/VN 279 ②	30	36	37	45	18	22	35	41
HSB/HC 258	19	22	PT/PTN 333 ②	17	—	V/VN 333 ②	30	36	37	45	17	20	35	41
HSB/HC 290	20	23	PT/PTN 385 ②	17	—	V/VN 385 ②	30	36	36	43	17	20	35	41
HSB/HC 340	20	23	PT/PTN 500 ②	18	—	V/VN 500 ②	37	45	44	54	19	24	42	51
—	—	—	PT/PTN 610 ②	20	22	V/VN 610 ②	36	44	43	52	19	24	41	50
—	—	—	PT 952 ②	21	—	V 952 ②	37	45	—	—	—	—	—	—

① With horizontal louvers opened 30° from the vertical plane. HSB units have top and bottom piping connections, HC units have side connections. All have copper tubes.

② V and PT models have copper tubes, VN and PTN models have cupronickel tubes. Mounting heights are maximum for heaters operating at standard conditions (2 lbs. steam or 220°F water with 60°F entering air). Heights listed for Louver or Cone-Jet are with deflectors in fully-opened position. Refer to Figure 4.2 for correction of mounting heights under other operating conditions. Maximum mounting height will be reduced as entering air temperatures exceed 60°F.

Figure 4.2 - Maximum Mounting Heights Correction Factors

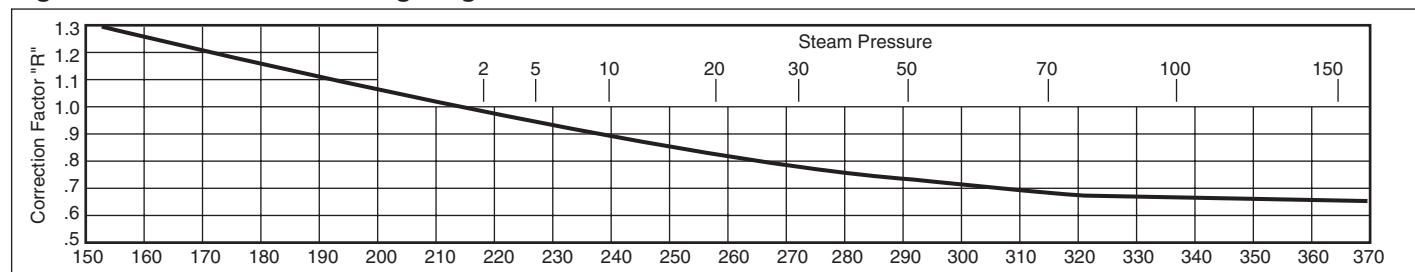

These correction factors are to be used as multipliers to correct the maximum recommended mounting heights of unit heaters when operated with steam pressures other than 2 pounds or with water at other than average temperature of 220°F.

Figure 4.3 - Horizontal Unit Delivery

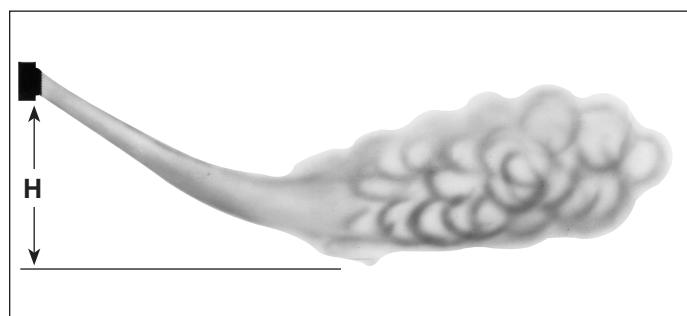


Figure 4.4 - Vertical One-Way & Two-Way Louvers

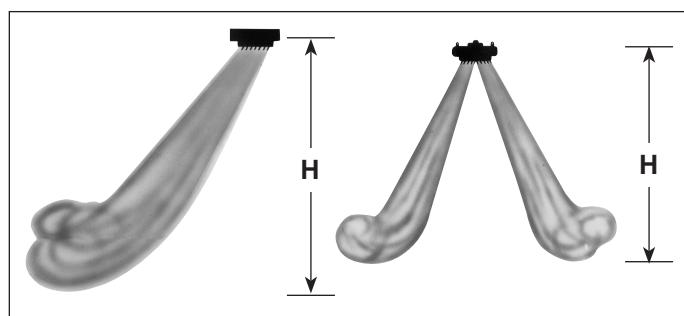


Figure 4.3 - Vertical Cone Jet


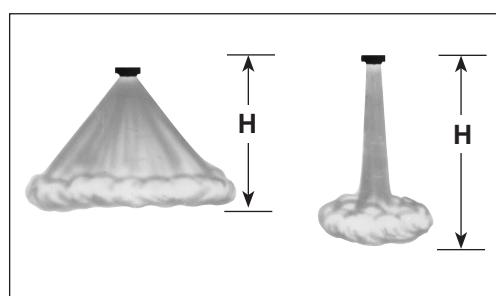


Figure 4.6 - Vertical Truncone

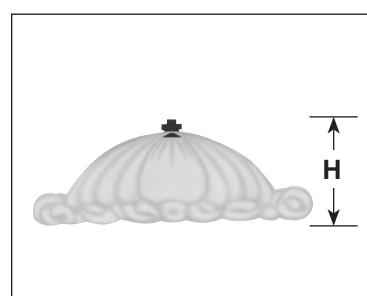

UNIT SUSPENSION / INSTALLATION

UNIT SUSPENSION


Horizontal delivery units, Model HSB/HC Series. All horizontal delivery units, except Models HSB 18 and HSB 24, have two tapped holes in the top for unit suspension. HSB 18 and HSB 24 models do not require independent suspension and are installed directly on their supply piping. Models HSB 33-86 and HC 18-86 have 3/8"-16 tapped holes, model sizes 108 and larger have 1/2"-13 tapped holes. Piping support hangers or clamps are recommended and should be placed as close to the unit heater as possible. For other models, independent suspension can be made with threaded rods, pipes, or ceiling hanger brackets. See Figure 5.1.

Vertical delivery units. Vertical delivery Models V/VN 42 through V/VN 279 have four tapped holes (1/2"-13) in the top cover for unit suspension. Unit suspension for these models can be made with threaded rods, pipes or ceiling hanger brackets. Models V/VN 333 through V/VN 952 are equipped with an angle-iron mounting bracket that has eight 5/8" diameter hanger holes permitting hook-hoisting and suspension with cables, if desired. A 1/2" x 3" center U-bolt can be inserted in the two holes at each end of the bracket to accommodate suspension with four threaded rods, pipes or hanger brackets.

"Power-Throw" horizontal delivery units. "Power-Throw" units are designed for horizontal air delivery and are equipped with hanger brackets for suspension. Three hanger brackets are supplied for Model PT/PTN 279, one on the front, and two on the rear panel for three-point suspension. Only two hanger brackets are furnished on the front panel of Models PT/PTN 333 through PT/PTN 952 (for required four-point suspension use the two hanger brackets on the front panel and the two holes on the ends of the upper angle supports at the rear of the unit). Each hanger bracket has a 5/8" diameter mounting hole for hook-hoisting and suspension with threaded rods, pipes, or cables.

Note: A pipe hanger adapter kit as illustrated in Figure 5.1 is available as an accessory from Modine. The kit consists of two drilled 3/4" I.P.S. pipe caps and two capscrews to facilitate threaded-pipe suspension. One kit will mount applicable HSB or HC models, two kits are required for V/VN models.

Figure 5.1 - Unit Suspension

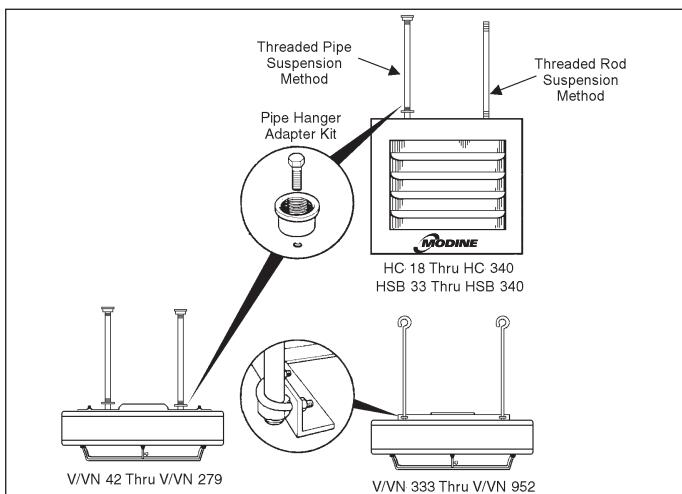

Piping - See Figure 6.1

- Branch piping to and from unit heater should include swing joints to allow for expansion and contraction of the piping without placing a strain on the unit heater element. On steam systems, the branch piping should be taken off and returned above the centerline of the supply and return lines.
- Install pipe unions and shut-off valves in lines to and from each unit heater to allow maintenance or replacement of unit without shutting down and draining entire system. For hot

water systems, include a balancing valve in return line for water flow regulation. A drain valve should also be provided below each unit heater to allow removal of water from the heating coil if located in an area subject to freezing.

- In steam or hot water systems, rapid air removal is required because entrained air is a cause of corrosion. Hot water systems should be equipped with suitable air vent valves for rapid and complete removal of air at the high points and ends of both supply and return mains. Proper air venting for steam systems can be achieved by use of a steam trap with an internal air vent.
- Traps must be located below the outlet of the unit. Consult trap manufacturer for specific recommendations. Each steam unit heater should be provided with a trap of sufficient size and capacity to pass a minimum of two times the normal condensate released by the unit at the minimum differential pressure in the system. Trap capacity is based on the pressure differential between supply and return mains. Steam systems should be equipped with a float and thermostatic trap or an inverted bucket trap with an air bypass.
- It is advisable to use a pipe line strainer before each steam trap draining a unit heater. This protection will reduce the maintenance of the steam trap. When strainers are used they should be installed between the unit heater and the trap and be the same size as the trap tapping. In order to catch dirt and scale, the strainer should have a screen perforation size smaller than the trap orifices.
- On systems where the steam supply to the unit heater is modulated or controlled by a motorized valve, a vacuum breaker should be installed between unit outlet and the trap. If a vacuum breaker is used, it should be in conjunction with a float and thermostatic trap.
- Install a scale pocket at bottom of unit heater to collect dirt and scale as shown in illustrations. Pipe diameter must be the same size as unit connections and about 6" long.
- Provide adequate pipe hangers, supports, or anchors to secure the piping system independently of the unit heater.

Electrical Connections

WARNING


- Disconnect power supply before making wiring connections to prevent electrical shock and equipment damage.
- All appliances must be wired strictly in accordance with wiring diagram furnished with the appliance. Any wiring different from the wiring diagram could result in a hazard to persons and property.
- Any original factory wiring that requires replacement must be replaced with wiring material having a temperature rating of at least 105°C.
- Ensure that the supply voltage to the appliance as indicated on the serial plate is not 5% greater than the rated voltage.

CAUTION

- Do not install units below 8 feet measured from the bottom of the unit to the floor.
 - Do not reuse any electrical component which has been wet. Replace component.
 - Ensure that the supply voltage to the appliance, as indicated on the serial plate is not 5% less than the rated voltage.
- Installation of wiring must conform with local building codes, or in the absence of local codes, with the National Electric Code ANSI/NFPA 70 - Latest Edition. Unit must be electrically grounded in conformance to this code. In Canada, wiring must comply with CSA C22.1, Electrical Code.

INSTALLATION / OPERATION

Figure 6.1 - Suggested Piping Arrangements ①

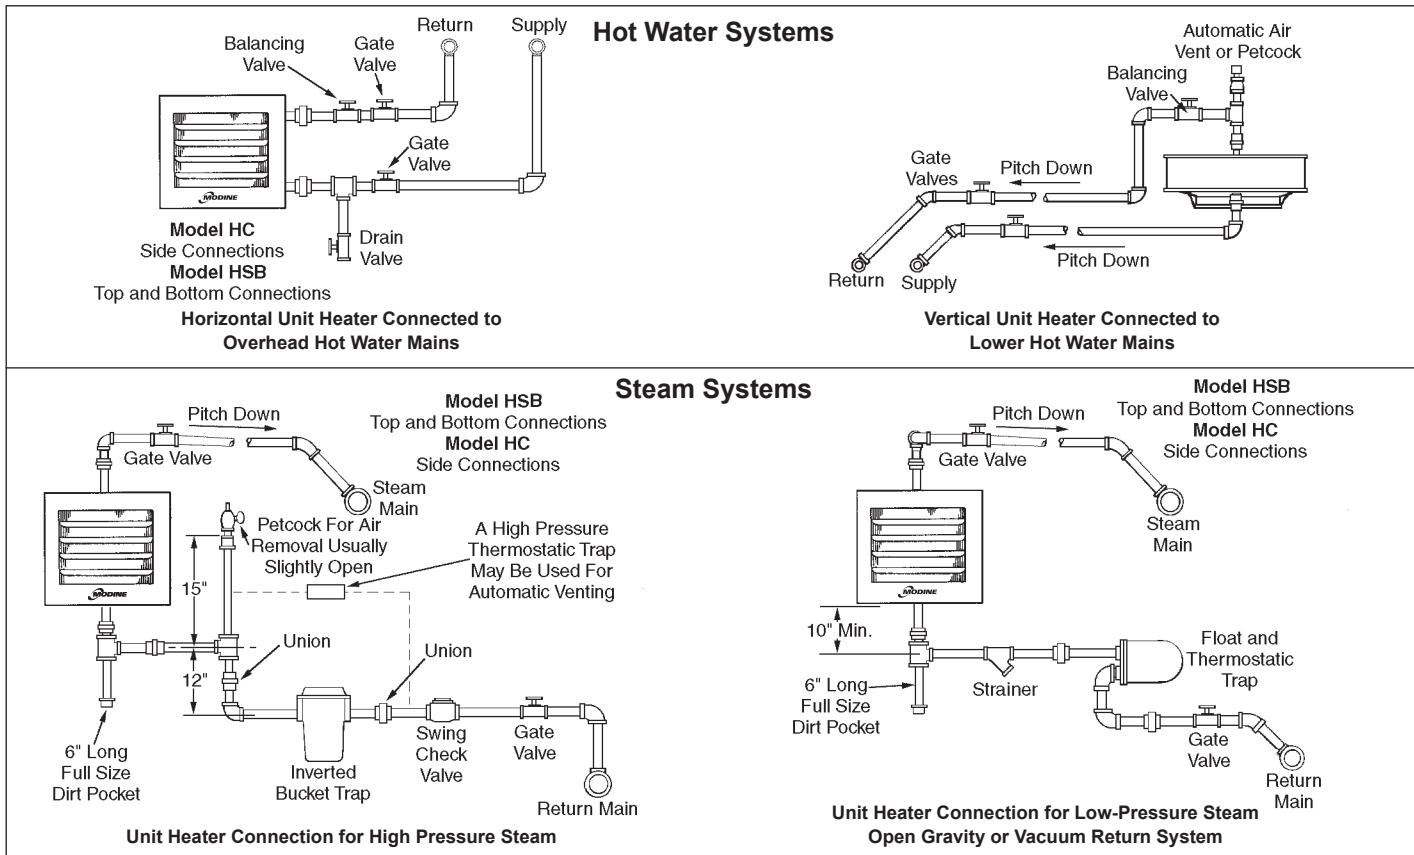

① Arrangements shown are recommendations only. Where horizontal units are shown, vertical units can be substituted or vice versa. For modifications to piping suggestions shown, refer to your local plumbing authority.

Electrical Connections (Cont.)

- Electric wiring must be sized to carry the full load amp draw of the motor, starter, and any controls that are used with the unit heater. All units with power codes 04, 05, 09, or 10 (polyphase motors) must be provided with suitable overcurrent protection in circuit supplying heater at installation. Overcurrent protectors should be sized based on motor current rating shown on the unit serial plate, and applicable national electric code procedures.
- All units are provided with an electrical junction box. Junction boxes are either integral to the motor or attached to the unit casing. Units with explosion-proof motors have an explosion-proof junction box attached to the motor. Any damage to or failure of Modine units caused by incorrect wiring of the units is not covered by Modine's standard warranty.
- Location of room thermostat, when supplied, should be in the natural circulating path of room air. Mount thermostat about five feet above floor level where it will not be affected by heat from the unit or other sources of drafts that would prevent it from properly controlling room temperature. See instructions packed with the thermostat.
- Speed controllers furnished with specified unit heater fan motors, are packed separately and must be connected according to wiring diagram with each controller.

OPERATION

Prior to Operation

- Make sure fuses are installed in fused disconnect switches.
- Check all electrical connections to assure they are secure.
- Check rigidity of unit mounting. Tighten all fasteners, if necessary.
- Inspect piping, strainers, traps, fittings, etc.

Initial Start-Up

- Set thermostat to lowest position.
- Turn on power supply to unit.
- Open return gate valve, and then open supply gate valve to unit.
- Raise thermostat setting to desired position.
- Adjust louvers (if provided) for desired heat distribution.
- To insure proper sequence of operation, cycle unit on and off a few times by raising and lowering thermostat setting.
- Check for proper rotation of fan. All fans must rotate in a counterclockwise direction when viewed from the back (HSB/HC, PT/PTN) or top (V/VN) of the unit heater.

Automatic Control Operations

Install one of the following operating systems for continuous automatic control.

Intermittent Fan Operation — Hot Coil

A room thermostat starts and stops the fan motor. An aquastat is sometimes strapped to the return piping to prevent fan operation when heat is not being supplied to the unit heater.

Continuous Fan Operation — Intermittent Hot/Cold Coil

A room thermostat controls a valve which opens to allow steam or hot water to supply the unit and closes to shut off the supply when the thermostat is satisfied.

OPERATION

Figure 7.1 - Horizontal Delivery Unit Cutaway

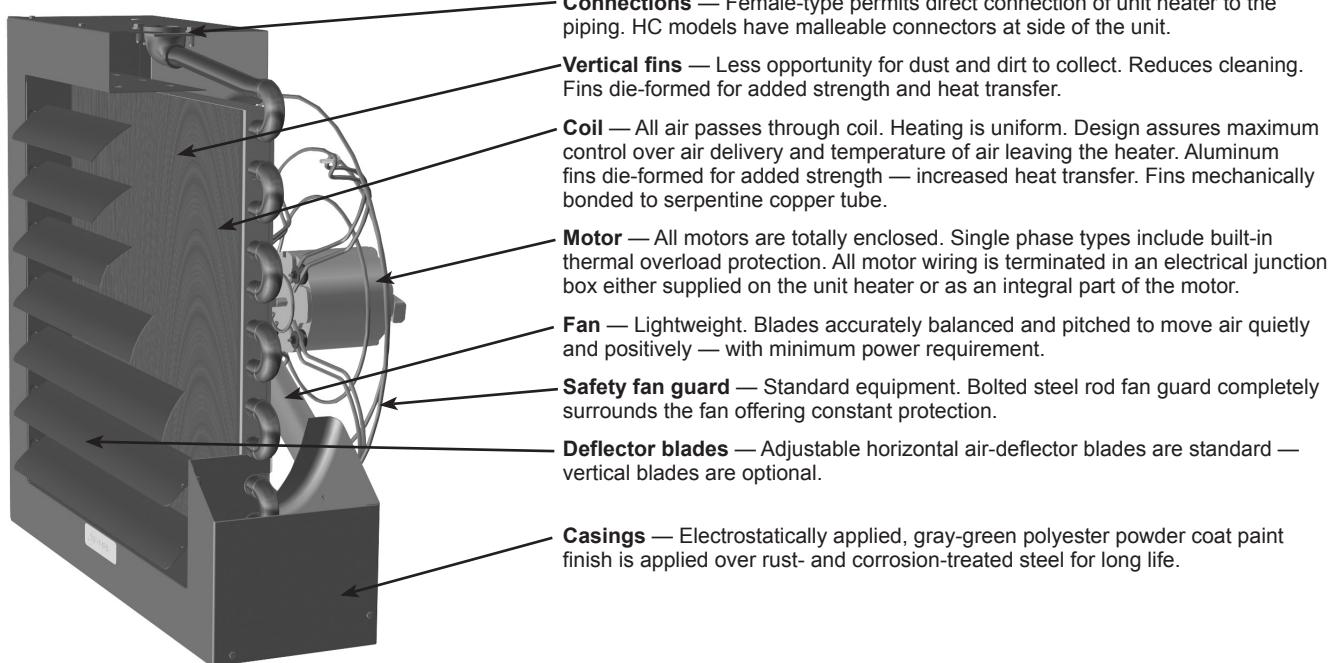


Figure 7.2 - Typical Horizontal Unit with Standard Junction Box

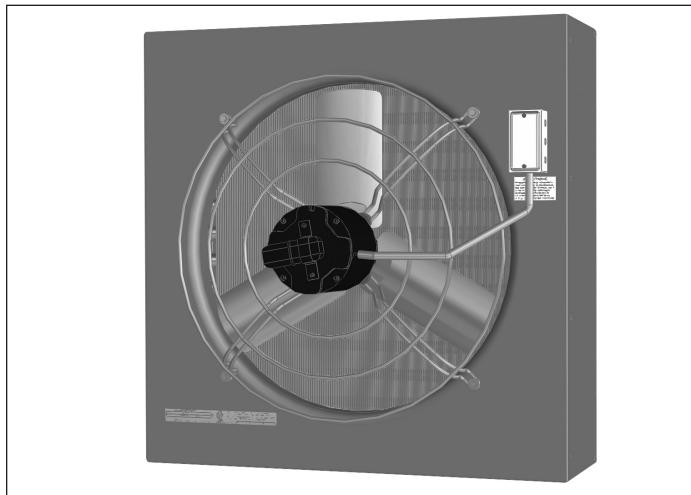


Figure 7.3 - Horizontal Unit with Optional Fingerproof Fan Guard


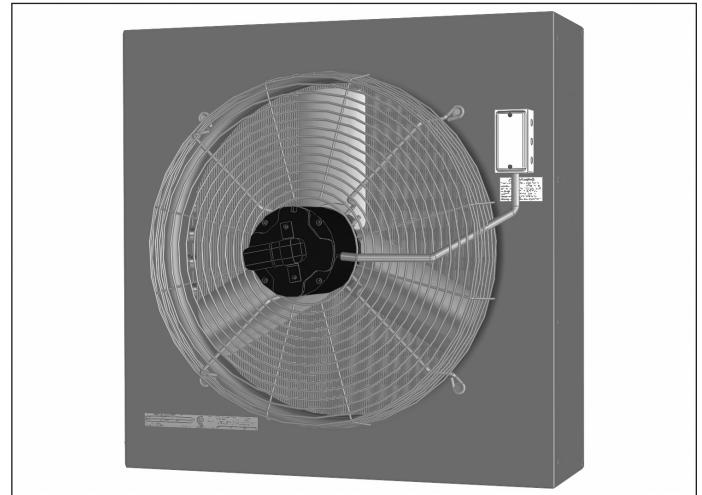


Figure 7.4 - Vertical Delivery Unit Cutaway

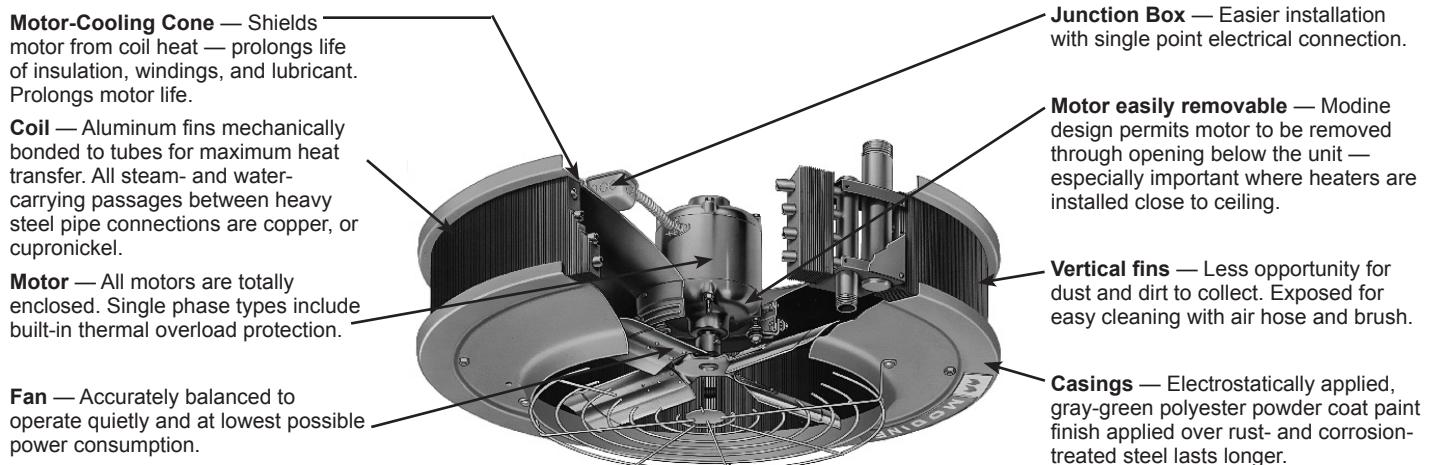

STEAM PERFORMANCE DATA - STANDARD MODELS

**2 lbs.
STEAM**

60° ENT. AIR

**Table 8.1 - Performance Data for Standard Units at Standard Conditions of
2 lb. Steam and 60°F Entering Air High Motor Speed**

Type	Model No.	Btu/hr	Sq. Ft. EDR	Air Data						Motor Data	
				Maximum Mounting Height (ft.) ^①	Heat Throw or Spread @ Max. Height ^①	CFM ^②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Condensate lb/hr	Hp	Approx. RPM
Horizontal Delivery	HSB/HC 18	18,000	75	8	17	340	625	107	19	1/60	1,550
	HSB/HC 24	24,000	100	9	18	370	695	119	25	1/25	1,550
	HSB/HC 33	33,000	138	10	21	630	690	108	34	1/25	1,550
	HSB/HC 47	47,000	196	12	28	730	810	119	49	1/12	1,550
	HSB/HC 63	63,000	263	14	29	1,120	690	111	65	1/12	1,550
	HSB/HC 86	86,000	358	15	31	1,340	835	118	89	1/8	1,625
	HSB/HC 108	108,000	450	17	31	2,010	790	109	112	1/8	1,625
	HSB/HC 121	121,000	504	16	25	1,775	715	122	125	1/5	1,075
	HSB/HC 165	165,000	688	19	40	3,240	880	106	171	1/3	1,075
	HSB/HC 193	193,000	804	18	38	2,900	810	121	200	1/3	1,075
	HSB/HC 258	258,000	1,075	19	44	4,560	750	111	267	1/2	1,075
	HSB/HC 290	290,000	1,208	20	46	4,590	765	117	300	1/2	1,075
	HSB/HC 340	340,000	1,417	20	46	5,130	735	120	352	1/2	1,075
Power- Throw™ ^③	PT/PTN 279	279,000	1,163	16	100	5,460	2,165	111	289	1/2	1,075
	PT/PTN 333	333,000	1,388	17	110	5,980	2,165	116	345	3/4	1,140
	PT/PTN 385	385,000	1,604	17	115	7,680	1,860	110	398	1	1,140
	PT/PTN 500	500,000	2,083	18	130	10,390	2,520	108	517	1 1/2	1,140
	PT/PTN 610	610,000	2,542	20	140	11,750	2,315	112	631	1 1/2	1,140
	PT 952	952,000	3,967	21	145	12,170	2,321	139	985	2	1,140
Vertical Delivery ^④	V/VN 42	42,000	175	11 15	17 11	950	825	103	43	1/30	1,050
	V/VN 59	59,000	246	14 19	21 14	1,155	1,005	111	61	1/30	1,050
	V/VN 78	78,000	325	15 20	23 15	1,590	1,065	109	81	1/15	1,050
	V/VN 95	95,000	396	15 20	23 15	1,665	1,120	118	98	1/15	1,050
	V/VN 139	139,000	579	18 24	27 18	2,660	1,285	112	144	1/6	1,075
	V/VN 161	161,000	671	20 27	30 20	2,945	1,420	115	167	1/3	1,075
	V/VN 193	193,000	804	22 30	33 22	3,500	1,690	116	200	1/3	1,075
	V/VN 212	212,000	883	22 30	33 22	3,610	1,740	120	219	1/3	1,075
	V/VN 247	247,000	1,029	26 34	39 26	4,820	1,910	111	256	1/2	1,075
	V/VN 279	279,000	1,163	30 37	45 30	5,460	2,165	111	289	1/2	1,075
	V/VN 333	333,000	1,388	30 37	45 30	5,980	2,165	116	345	3/4	1,140
	V/VN 385	385,000	1,604	30 36	45 30	7,680	1,860	110	398	1	1,140
	V/VN 500	500,000	2,083	37 44	56 37	10,390	2,520	108	517	1 1/2	1,140
	V/VN 610	610,000	2,542	36 43	54 36	11,750	2,315	112	631	1 1/2	1,140
	V 952	952,000	3,967	37	56	12,170	2,321	139	985	2	1,140

**Table 8.2 - Performance Data for Standard Units at Standard Conditions of
2 lb. Steam and 60°F Entering Air Reduced Motor Speed ^④**

Type	Model No.	Btu/hr	Sq. Ft. EDR	Air Data						Motor Data	
				Maximum Mounting Height (ft.) ^①	Heat Throw or Spread @ Max. Height ^①	CFM ^②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Condensate lb/hr	Hp	Approx. RPM
Horizontal Delivery	HSB/HC 18	14,000	58	8	10	220	415	118	14	1/60	1,000
	HSB/HC 24	18,000	75	9	11	230	440	131	19	1/25	1,000
	HSB/HC 33	25,000	104	10	13	395	440	118	26	1/25	1,000
	HSB/HC 47	38,000	158	12	17	450	515	137	39	1/12	1,000
	HSB/HC 63	47,000	195	14	17	685	430	122	49	1/12	1,000
	HSB/HC 86	64,000	265	15	19	825	525	131	66	1/8	1,000
	HSB/HC 108	81,000	340	17	19	1,255	500	119	84	1/8	1,000

^① Horizontal units with horizontal louvers open 30° from vertical plane. Vertical types equipped with cone jet deflector, blades fully opened are shown in bold.

^② CFM for horizontal types is entering CFM. CFM for vertical and "Power-Throw" types is leaving CFM.

^③ V and PT models have copper tubes, VN and PTN models have 90/10 cupro-nickel tubes.

^④ Requires Solid State Motor Speed Controller.

STEAM PERFORMANCE DATA - LOW OUTLET TEMPERATURE MODELS

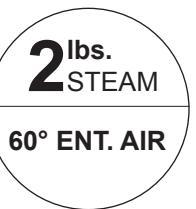


Table 9.1 - Performance Data for Low Outlet Temperature Units at Standard Conditions of 2 lb. Steam and 60°F Entering Air High Motor Speed

Type	Model No.	Btu/hr	Sq. Ft. EDR	Air Data								Motor Data	
				Maximum Mounting Height (ft.) ^①	Heat Throw or Spread @ Max. Height ^①	CFM ^②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Condensate lb/hr	Hp	Approx. RPM		
Horizontal Delivery	HSB/HC 18L	15,900	66	9	20	364	655	100	16	1/60	1,550		
	HSB/HC 24L	19,300	80	11	21	435	795	100	20	1/25	1,550		
	HSB/HC 33L	29,500	123	12	24	695	745	99	31	1/25	1,550		
	HSB/HC 47L	32,000	133	14	32	855	910	94	33	1/12	1,550		
	HSB/HC 63L	52,500	219	16	33	1,170	710	101	54	1/12	1,550		
	HSB/HC 86L	61,500	256	17	36	1,510	910	97	64	1/8	1,625		
	HSB/HC 108L	86,500	360	19	36	2,150	825	97	90	1/8	1,625		
	HSB/HC 121L	88,000	367	18	29	2,070	800	98	91	1/5	1,075		
	HSB/HC 165L	143,000	596	21	45	3,480	930	97	148	1/3	1,075		
	HSB/HC 258L	190,000	792	22	51	4,655	750	98	197	1/2	1,075		
	HSB/HC 290L	207,000	863	23	53	5,040	805	94	214	1/2	1,075		
	HSB/HC 340L	255,000	1,063	23	53	5,575	775	102	264	1/2	1,075		
Power-Throw™ ^③	PT/PTN 610L	470,000	1,958	22	154	2,400	2,445	97	486	1-1/2	1,140		
Vertical Delivery ^③	V 42L	33,000	138	13	17	20	13	960	835	94	34	1/30	1,050
	V 59L	44,000	183	16	22	24	16	1,190	1,035	96	45	1/30	1,050
	V 78L	62,000	258	19	26	29	19	1,740	1,070	95	65	1/15	1,050
	V 95L	71,000	296	19	26	29	19	1,760	1,180	99	73	1/15	1,050
	V/VN 139L	103,000	429	23	31	35	23	2,860	1,380	95	106	1/6	1,075
	V/VN 161L	127,000	529	26	35	39	26	3,400	1,640	96	132	1/3	1,075
	V/VN 193L	149,000	621	27	36	41	27	3,710	1,790	99	154	1/3	1,075
	V/VN 212L	163,000	679	27	36	41	27	3,830	1,845	102	169	1/3	1,075
	V/VN 247L	190,000	792	32	42	48	32	5,110	2,030	96	197	1/2	1,075
	V/VN 279L	215,000	896	36	45	54	36	5,790	2,300	96	222	1/2	1,075
	V/VN 333L	256,000	1,067	36	45	54	36	6,340	2,300	100	265	3/4	1,140
	V/VN 385L	296,000	1,233	36	43	54	36	8,140	1,970	95	307	1	1,140
	V/VN 500L	385,000	1,604	45	54	68	45	11,000	2,670	94	400	1-1/2	1,140
	V/VN 610L	470,000	1,958	44	52	66	44	12,400	2,445	97	485	1-1/2	1,140
	V 952L	733,000	3,055	45	-	68	-	12,940	2,450	115	759	2	1,140

Table 9.2 - Performance Data for Low Outlet Temperature Units at Standard Conditions of 2 lb. Steam and 60°F Entering Air Reduced Motor Speed ^④

Type	Model No.	Btu/hr	Sq. Ft. EDR	Air Data								Motor Data	
				Maximum Mounting Height (ft.) ^①	Heat Throw or Spread @ Max. Height ^①	CFM ^②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Condensate lb/hr	Hp	Approx. RPM		
Horizontal Delivery	HSB/HC 18L	12,000	51	9	12	230	425	108	12	1/60	1,000		
	HSB/HC 24L	14,400	60	11	13	265	490	109	15	1/25	1,000		
	HSB/HC 33L	22,000	92	12	14	430	470	107	23	1/25	1,000		
	HSB/HC 47L	24,300	101	14	19	540	580	101	25	1/12	1,000		
	HSB/HC 63L	39,500	164	16	20	725	445	109	41	1/12	1,000		
	HSB/HC 86L	46,000	192	17	22	925	565	105	48	1/8	1,000		
	HSB/HC 108L	65,000	270	19	22	1,330	520	104	67	1/8	1,000		

^① Horizontal units with horizontal louvers open 30° from vertical plane. Vertical types equipped with cone jet deflector, blades fully opened are shown in bold.

^② CFM for horizontal types is entering CFM. CFM for vertical and "Power-Throw" types is leaving CFM.

^③ V and PT models have copper tubes, VN and PTN models have 90/10 cupro-nickel tubes.

^④ Requires Solid State Motor Speed Controller.

HOT WATER PERFORMANCE DATA - STANDARD MODELS

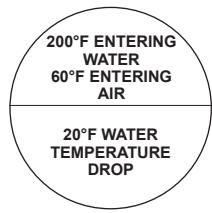


Table 10.1 - Performance Data for Standard Units at Standard Conditions of 200°F Entering Water and 60°F Entering Air High Motor Speed

Type	Model No.	Btu/hr	Water Data			Air Data					Motor Data			
			GPM	Pressure Drop (Ft. of Water)	Min/Max GPM	Maximum Mounting Height (ft.) ①	Heat Throw or Spread @ Max. Height ①	CFM ②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Hp	Approx. RPM		
Horizontal Delivery	HSB/HC 18	12,600	1.3	0.5	0.3 / 5.0	9	18	340	615	93	1/60	1,550		
	HSB/HC 24	16,200	1.7	0.8	0.3 / 5.0	10	19	370	675	100	1/25	1,550		
	HSB/HC 33	21,700	2.3	0.2	0.4 / 10.0	11	23	630	675	91	1/25	1,550		
	HSB/HC 47	30,900	3.2	0.4	0.4 / 10.0	13	30	730	785	98	1/12	1,550		
	HSB/HC 63	45,600	4.7	0.6	0.5 / 20.0	15	31	1,120	680	97	1/12	1,550		
	HSB/HC 86	60,200	6.3	1.0	0.5 / 20.0	16	33	1,340	820	101	1/8	1,625		
	HSB/HC 108	83,700	8.7	2.8	0.5 / 30.0	18	33	2,010	775	98	1/8	1,625		
	HSB/HC 121	93,000	9.7	3.3	0.7 / 30.0	17	27	1,775	700	107	1/5	1,075		
	HSB/HC 165	130,900	13.6	8.6	2.0 / 30.0	20	43	3,240	870	96	1/3	1,075		
	HSB/HC 193	143,000	14.9	1.4	2.0 / 50.0	19	41	2,900	790	105	1/3	1,075		
	HSB/HC 258	201,900	21.0	5.7	2.5 / 70.0	20	47	4,560	740	100	1/2	1,075		
	HSB/HC 290	228,600	23.8	7.1	2.5 / 70.0	22	50	4,590	750	105	1/2	1,075		
	HSB/HC 340	271,100	28.2	11.3	2.8 / 70.0	22	50	5,130	720	108	1/2	1,075		
Power-Throw™ ③	PT/PTN 279	192,300	20.0	0.2	4.5 / 60.0	17	108	5,460	2,165	94	1/2	1,075		
	PT/PTN 333	238,500	24.8	0.4	4.5 / 100.0	18	117	5,980	2,165	99	3/4	1,140		
	PT/PTN 385	276,100	28.8	0.6	4.5 / 100.0	18	124	7,680	1,860	95	1	1,140		
	PT/PTN 500	358,000	37.3	0.5	6.0 / 100.0	19	138	10,390	2,520	93	1 1/2	1,140		
	PT/PTN 610	450,400	46.9	1.0	6.0 / 100.0	22	151	11,750	2,315	97	1 1/2	1,140		
	PT 952	721,600	75.2	1.1	14.0 / 200.0	23	150	12,166	2,321	120	2	1,140		
Vertical Delivery ③	V/VN 42	30,100	3.1	0.6	0.5 / 10.0	12	16	18	12	950	825	90	1/30	1,050
	V/VN 59	42,600	4.4	0.5	0.8 / 15.0	15	20	22	15	1,155	1,005	96	1/30	1,050
	V/VN 78	57,000	5.9	0.5	1.0 / 20.0	16	22	24	16	1,590	1,065	95	1/15	1,050
	V/VN 95	69,300	7.2	0.5	1.3 / 25.0	16	22	24	16	1,665	1,120	101	1/15	1,050
	V/VN 139	106,600	11.1	2.6	1.0 / 30.0	19	26	29	19	2,660	1,285	99	1/6	1,075
	V/VN 161	123,200	12.8	2.2	1.3 / 40.0	21	29	32	22	2,945	1,420	101	1/3	1,075
	V/VN 193	147,200	15.3	2.2	1.5 / 50.0	23	32	35	24	3,500	1,690	101	1/3	1,075
	V/VN 212	161,700	16.8	1.5	2.0 / 60.0	23	32	35	24	3,610	1,740	104	1/3	1,075
	V/VN 247	188,700	19.7	2.1	2.0 / 60.0	28	37	41	28	4,820	1,910	98	1/2	1,075
	V/VN 279	212,600	22.2	2.1	2.3 / 75.0	32	40	48	32	5,460	2,165	98	1/2	1,075
	V/VN 333	260,100	27.1	3.8	2.8 / 75.0	32	40	48	32	5,980	2,165	102	3/4	1,140
	V/VN 385	302,100	31.5	5.0	3.3 / 75.0	32	39	48	32	7,680	1,860	98	1	1,140
	V/VN 500	391,700	40.8	4.8	3.0 / 100.0	39	47	59	40	10,390	2,520	96	1 1/2	1,140
	V/VN 610	450,400	46.9	1.0	6.0 / 100.0	38	46	57	39	11,750	2,315	97	1 1/2	1,140
	V 952	721,600	75.2	1.1	14.0 / 200.0	39		59		12,166	2,321	120	2	1,140

Table 10.2 - Performance Data for Standard Units at Standard Conditions of 200°F Entering Water and 60°F Entering Air Reduced Motor Speeds ④

Type	Model No.	Btu/hr	Water Data			Air Data					Motor Data	
			GPM	Pressure Drop (Ft. of Water)	Maximum Mounting Height (ft.) ①	Heat Throw or Spread @ Max. Height ①	CFM ②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Hp	Approx. RPM	
Horizontal Delivery	HSB/HC 18	9,900	1.3	0.5	9	11	220	400	101	1/60	1,000	
	HSB/HC 24	12,400	1.7	0.8	10	12	230	425	109	1/25	1,000	
	HSB/HC 33	16,700	2.3	0.2	11	14	395	430	98	1/25	1,000	
	HSB/HC 47	23,600	3.2	0.4	13	18	450	490	107	1/12	1,000	
	HSB/HC 63	34,600	4.7	0.6	15	18	685	420	106	1/12	1,000	
	HSB/HC 86	45,900	6.3	1.0	16	20	825	515	110	1/8	1,000	
	HSB/HC 108	64,300	8.7	2.8	18	20	1,255	490	106	1/8	1,000	

① Horizontal units with horizontal louvers open 30° from vertical plane. Vertical types equipped with cone jet deflector, blades fully opened are shown in bold.

Non-bolded mounting height/spread data is for units without deflectors.

② CFM for horizontal types is entering CFM. CFM for vertical and "Power-Throw" types is leaving CFM.

③ V and PT models have copper tubes, VN and PTN models have 90/10 cupro-nickel tubes.

④ Requires Solid State Motor Speed Controller.

HOT WATER PERFORMANCE DATA - LOW OUTLET TEMPERATURE MODELS

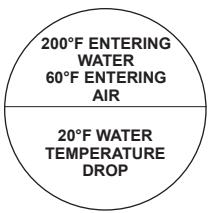


Table 11.1 - Performance Data for Low Outlet Temperature Units at Standard Conditions of 200°F Entering Water and 60°F Entering Air – High Motor Speed

Type	Model No.	Btu/hr	Water Data			Air Data						Motor Data		
			GPM	Pressure Drop (Ft. of Water)	Min/Max GPM	Maximum Mounting Height (ft.) ①	Heat Throw or Spread @ Max. Height ①	CFM ②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Hp	Approx. RPM		
Horizontal Delivery	HSB/HC 18L	11,300	1.2	0.4	0.3 / 5.0	10	21	364	650	88	1/60	1,550		
	HSB/HC 24L	13,700	1.4	0.6	0.3 / 5.0	12	22	435	775	88	1/25	1,550		
	HSB/HC 33L	19,300	2.0	0.2	0.4 / 10.0	13	26	695	730	85	1/25	1,550		
	HSB/HC 47L	21,100	2.2	0.2	0.4 / 10.0	15	34	855	890	82	1/12	1,550		
	HSB/HC 63L	37,900	4.0	0.4	0.5 / 20.0	17	35	1,170	695	89	1/12	1,550		
	HSB/HC 86L	44,600	4.6	0.6	0.5 / 20.0	18	38	1,510	890	87	1/8	1,625		
	HSB/HC 108L	66,100	6.9	1.8	0.8 / 30.0	20	38	2,150	815	88	1/8	1,625		
	HSB/HC 121L	66,700	6.9	1.9	0.8 / 30.0	19	31	2,070	785	89	1/5	1,075		
	HSB/HC 165L	113,200	11.8	6.6	2.0 / 30.0	23	48	3,480	920	89	1/3	1,075		
	HSB/HC 258L	147,400	15.4	3.2	2.5 / 70.0	23	54	4,655	735	89	1/2	1,075		
	HSB/HC 290L	161,100	16.8	3.7	2.5 / 70.0	25	57	5,040	800	89	1/2	1,075		
	HSB/HC 340L	200,900	20.9	6.6	2.5 / 70.0	25	57	5,575	760	93	1/2	1,075		
Power-Throw™ ③	PT/PTN 610L	344,900	35.9	0.6	6.0 / 100.0	24	158	12,400	2,445	86	1-1/2	1,140		
Vertical Delivery ③	V 42L	23,000	2.4	0.4	0.5 / 10.0	14	18	21	14	960	835	83	1/30	1,050
	V 59L	32,600	3.4	0.3	0.8 / 15.0	17	23	25	17	1,190	1,035	86	1/30	1,050
	V 78L	43,600	4.5	0.3	1.0 / 20.0	20	28	31	21	1,740	1,170	84	1/15	1,050
	V 95L	53,100	5.5	0.3	1.3 / 25.0	20	28	31	21	1,760	1,180	89	1/15	1,050
	V/VN 139L	81,200	8.5	1.6	1.0 / 30.0	24	33	37	25	2,860	1,380	87	1/6	1,075
	V/VN 161L	93,900	9.8	1.3	1.3 / 40.0	28	37	41	28	3,400	1,640	86	1/3	1,075
	V/VN 193L	112,500	11.7	1.3	1.5 / 50.0	29	38	43	29	3,710	1,790	89	1/3	1,075
	V/VN 212L	123,400	12.9	0.9	2.0 / 60.0	29	38	43	29	3,830	1,845	91	1/3	1,075
	V/VN 247L	143,600	15.0	1.2	2.0 / 60.0	34	45	51	35	5,110	2,030	87	1/2	1,075
	V/VN 279L	162,200	16.9	1.2	2.3 / 75.0	38	48	57	39	5,790	2,300	87	1/2	1,075
	V/VN 333L	198,300	20.7	2.3	2.3 / 75.0	38	48	57	39	6,340	2,300	90	3/4	1,140
	V/VN 385L	229,100	23.9	3.0	2.3 / 75.0	38	46	57	49	8,140	1,970	87	1	1,140
	V/VN 500L	295,000	30.7	2.8	3.0 / 100.0	48	57	72	49	11,000	2,670	85	1-1/2	1,140
	V/VN 610L	344,900	35.9	0.6	6.0 / 100.0	47	55	70	48	12,400	2,445	86	1-1/2	1,140
	V 952L	546,700	56.9	0.7	14.0 / 100.0	48	-	72	-	12,800	2,440	102	2	1,140

Table 11.2 - Performance Data for Low Outlet Temperature Units at Standard Conditions of 200°F Entering Water and 60°F Entering Air – Reduced Motor Speeds ④

Type	Model No.	Btu/hr	Water Data			Air Data					Motor Data	
			GPM	Pressure Drop (Ft. of Water)	Max. Mounting Height (ft.) ①	Heat Throw or Spread @ Max. Height ①	CFM ②	Outlet Velocity (Fpm)	Final Air Temp. (°F)	Hp	Approx. RPM	
Horizontal Delivery	HSB/HC 18L	8,700	1.2	0.4	10	13	230	410	94	1/60	1,000	
	HSB/HC 24L	10,400	1.4	0.6	12	14	265	475	95	1/25	1,000	
	HSB/HC 33L	14,700	2.0	0.2	13	16	430	455	91	1/25	1,000	
	HSB/HC 47L	16,300	2.2	0.2	15	21	540	570	87	1/12	1,000	
	HSB/HC 63L	29,000	4.0	0.4	17	21	725	435	96	1/12	1,000	
	HSB/HC 86L	33,900	4.6	0.6	18	23	925	550	93	1/8	1,000	
	HSB/HC 108L	50,500	6.9	1.8	20	23	1,330	510	94	1/8	1,000	

① Horizontal units with horizontal louvers open 30° from vertical plane. Vertical types equipped with cone jet deflector, blades fully opened are shown in bold.
Non-bolded mounting height/spread data is for units without deflectors.

② CFM for horizontal types is entering CFM. CFM for vertical and "Power-Throw" types is leaving CFM.

③ V and PT models have copper tubes, VN and PTN models have 90/10 cupro-nickel tubes.

④ Requires Solid State Motor Speed Controller.

DIMENSIONAL DATA

Horizontal Air Delivery Models — Two Styles

Figure 12.1 - Model Dimensions HSB 18-193

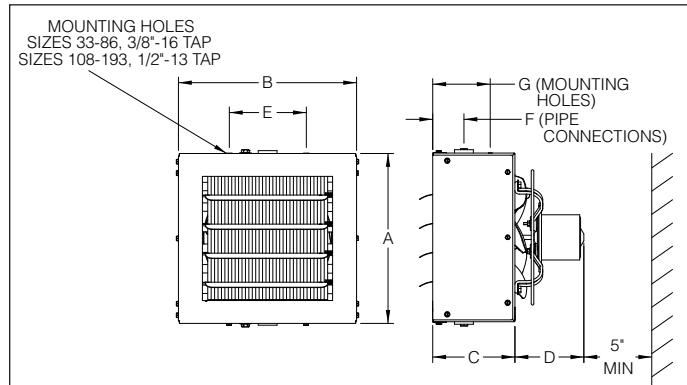


Figure 12.3 - Model Dimensions HC 18-165

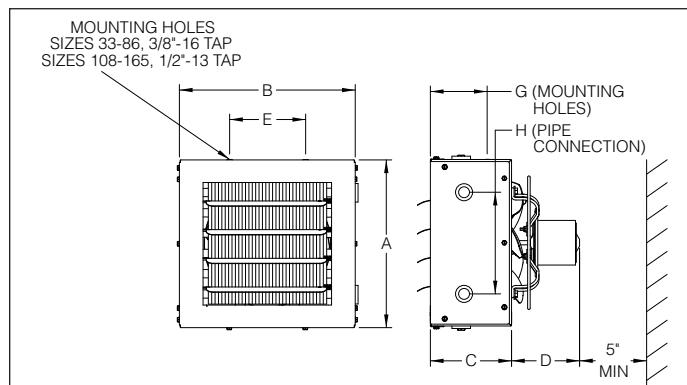


Figure 12.2 - Model Dimensions HSB 258-340


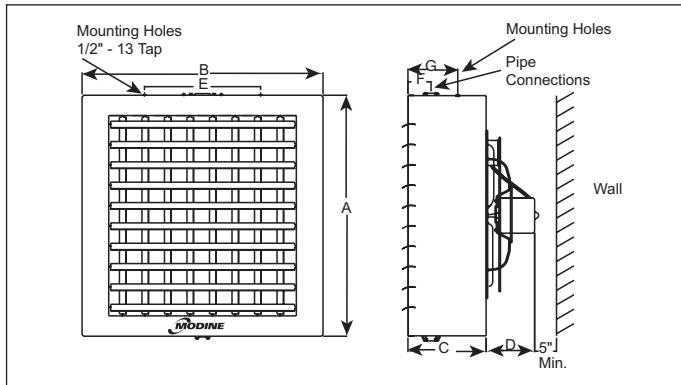


Figure 12.4 - Model Dimensions HC 193-340 ①

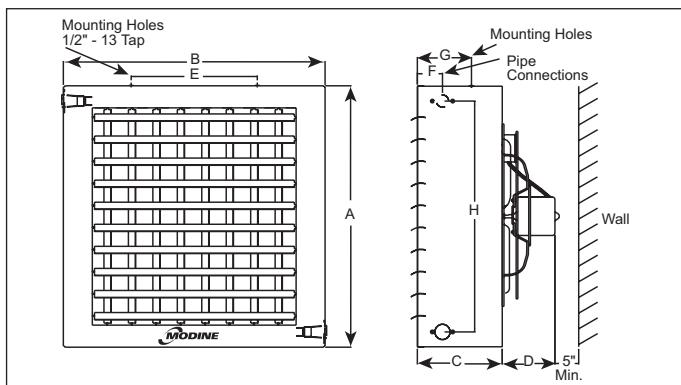

① Vertical deflector blades shown are standard on models HC 258-340 and optional on model HC 193.

Table 12.1 - Model HSB and HC Dimensions ① ②

Model Number	A	B	C	D		E	F	G	H	Female Connections NPT	Fan Diameter	Approx. Shipping Wt. lb.
				115 Std. Motor	115V Exp. Motor							
HSB 18	12-3/8	13	6	5	12	-	3	-	-	3/4	9	16
HSB 24	12-3/8	13	6	6-1/2	12	-	3	-	-	3/4	9	20
HSB 33	16-3/8	17-1/2	8-3/4	6-1/2	12-1/4	11	3-5/8	6	-	1-1/4	12	34
HSB 47	16-3/8	17-1/2	8-3/4	8	12-1/4	11	3-5/8	6	-	1-1/4	12	36
HSB 63	20-7/16	21-1/2	8-3/4	8	12-3/4	15	3-5/8	6	-	1-1/4	14	48
HSB 86	20-7/16	21-1/2	8-3/4	9	12-3/4	15	3-5/8	6	-	1-1/4	14	52
HSB 108	24-7/16	25-1/2	9-1/2	8	11-1/2	18	3-3/4	6-3/8	-	1-1/4	18	74
HSB 121	24-7/16	25-1/2	9-1/2	7-1/2	11	18	3-3/4	6-3/8	-	1-1/4	18	76
HSB 165	30-1/2	30-1/2	9-1/4	9-1/2	14	21-1/4	3-3/4	6-3/8	-	1-1/4	22	92
HSB 193	30-1/2	30-1/2	9-1/4	9-1/2	14	21-1/4	3-3/4	6-3/8	-	1-1/4	22	98
HSB 258	38-1/2	38-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	7-7/8	-	1-1/4	22	162
HSB 290	38-1/2	38-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	7-7/8	-	1-1/4	24	168
HSB 340	38-1/2	44-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	7-7/8	-	1-1/4	24	176
HC 18	11-1/2	12-3/4	6	5	12	5-5/8	2-1/4	4-1/8	7-1/2	1/2	9	16
HC 24	11-1/2	12-3/4	6	6-1/2	12	5-5/8	2-1/4	4-1/8	7-1/2	1/2	9	20
HC 33	15	17-1/2	8-3/4	6-1/2	12-1/4	11	3-5/8	6	10	3/4	12	34
HC 47	15	17-1/2	8-3/4	8	12-1/4	11	3-5/8	6	10	3/4	12	35
HC 63	18-1/2	21-1/2	8-3/4	8	12-3/4	15	3-5/8	6	14	3/4	12	48
HC 86	18-1/2	21-1/2	8-3/4	9	12-3/4	15	3-5/8	6	14	3/4	14	52
HC 108	22-1/2	25-1/2	9-1/2	8	11-1/2	18	3-5/8	6-3/8	18	3/4	18	74
HC 121	22-1/2	25-1/2	9-1/2	7-1/2	11	18	3-5/8	6-3/8	18	3/4	18	76
HC 165	26-1/2	29-1/2	9-1/4	9-1/2	14	21-1/4	3-5/8	6-3/8	22	3/4	22	92
HC 193	30-1/2	32-1/2	9-1/4	9-1/2	14	21-1/4	3-5/8	4-3/4	26	1-1/4	22	98
HC 258	38-1/2	38-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	8	34	1-1/4	22	163
HC 290	38-1/2	38-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	8	34	1-1/4	24	168
HC 340	38-1/2	44-1/2	12-1/2	10-1/2	14	18-1/2	3-5/8	8	34	1-1/4	24	176

① All dimensions in inches.

② Dimensions shown are for Standard and Low Outlet Temperature Models.

DIMENSIONAL DATA

Figure 13.1 - Model Dimensions V/VN and PT/PTN

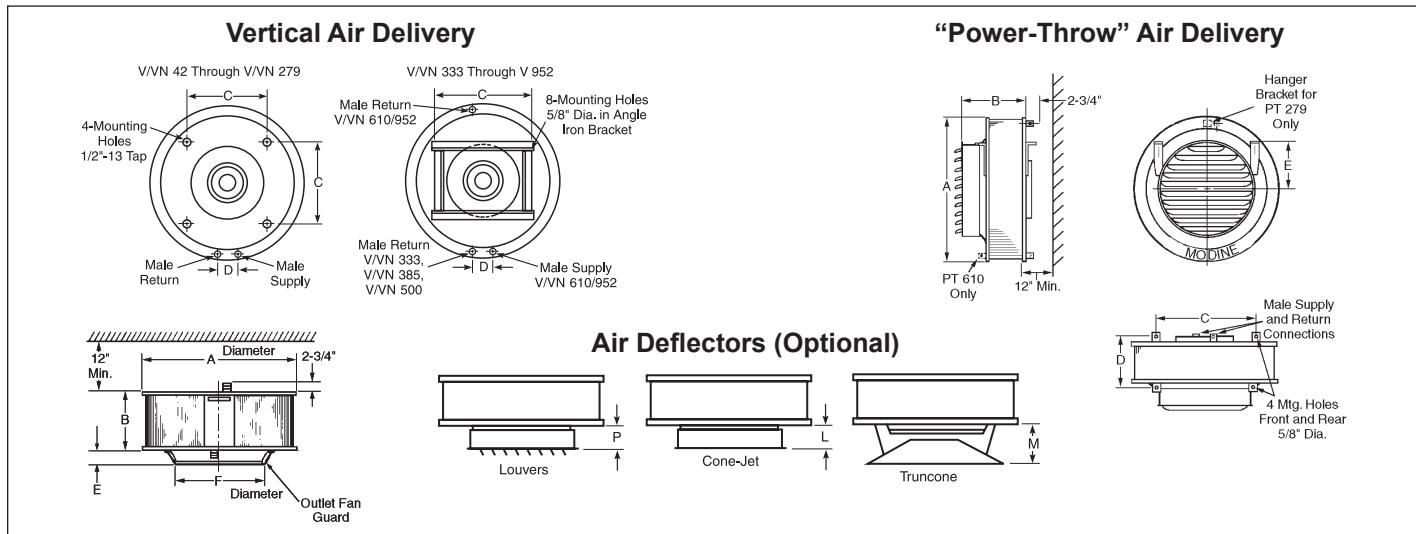


Table 13.1 - Model V/VN and PT/PTN Dimensions ① ② ③

Model Number	A	B	C	D	E	F	G	Fan Diameter	Male Connections NPT		Approx. Shipping Wt. (lb.)
									Top	Bottom	
V/VN 42	24-3/4	3-5/8	11-3/8	2-1/8	4-3/8	14-1/2	-	14	1-1/4	1-1/4	36
V/VN 59	24-3/4	5-1/8	11-3/8	2-1/8	4-3/8	14-1/2	-	14	1-1/4	1-1/4	42
V/VN 78	24-3/4	6-5/8	11-3/8	2-1/8	2-5/8	16-1/2	-	16	1-1/4	1-1/4	46
V/VN 95	24-3/4	8-1/8	11-3/8	2-1/8	2-5/8	16-1/2	-	16	1-1/4	1-1/4	48
V/VN 139	34-3/4	6-7/8	18-3/8	2-1/8	3	19-1/2	-	19	1-1/2	1	70
V/VN 161	34-3/4	8-3/8	18-3/8	2-1/8	3	19-1/2	-	19	1-1/2	1	80
V/VN 193	34-3/4	9-7/8	18-3/8	2-1/8	3	19-1/2	-	19	1-1/2	1	86
V/VN 212	34-3/4	12-7/8	18-3/8	2-1/2	3	19-1/2	-	19	2	1-1/4	94
V/VN 247	34-3/4	12-7/8	18-3/8	2-1/2	3	21-1/2	-	21	2	1-1/4	108
V/VN 279	34-3/4	14-3/8	18-3/8	2-1/2	3	21-1/2	-	21	2	1-1/4	112
V/VN 333	43-1/4	14-5/8	31-1/2	2-7/8	3-1/8	22-1/2	18-1/5	22	2-1/2	1-1/2	166
V/VN 385	43-1/4	14-1/2	31-1/2	2-7/8	3-1/2	27-1/2	18-1/5	27	2-1/2	1-1/2	168
V/VN 500	43-1/4	19	31-1/2	2-7/8	3-1/2	27-1/2	18-1/5	27	2-1/2	1-1/2	360
V/VN 610	51-1/2	19-1/8	31-3/8	-	3-3/4	30-1/2	31-3/8	30	2-1/2	1-1/2	450
V 952	53-3/4	21-1/8	30	-	3-1/2	31	30	30	3	3	487
PT/PTN 279	34-3/4	22-5/8	25-1/4	16-3/4	16-3/4	-	-	21	2	1-1/4	122
PT/PTN 333	43-1/4	23-7/8	30	15-3/4	14-3/8	-	-	22	2-1/2	1-1/2	176
PT/PTN 385	43-1/4	25-3/4	30	15-3/4	14-3/8	-	-	27	2-1/2	1-1/2	184
PT/PTN 500	43-1/4	29	30	20-1/4	14-3/8	-	-	27	2-1/2	1-1/2	376
PT/PTN 610	51-1/2	29-5/8	30	20-3/8	21	-	-	30	2-1/2	1-1/2	472
PT 952	53-3/4	26-3/8	30	23-1/8	26-7/8	-	-	30	3	3	487

① All dimensions in inches.

② Dimensions shown are for Standard and Low Outlet Temperature Models.

③ See Table 13.2 for optional air outlet accessory dimensions.

Table 13.2 - Vertical Air Outlet Accessories Dimensions ①

Model Number	Cone-Jet		Truncone		Louvers	
	L	T	M	X	P	Z
V 42, V 59	6-1/2	18-7/8	12	22	6-1/2	16-7/8
V 78, V 95	6-1/2	18-7/8	12	22	6-1/2	16-7/8
V 139, V 212	7-1/2	24-3/4	13	27	7-1/2	19-3/4
V 247, V 279	8	26-7/8	16	34	8	22-3/4
V 333	8-1/2	28	16	34	8-1/2	22-3/4
V 385, V 500	10	22-3/4	21	41	10	27-3/4
V 610	10-1/2	36-3/4	21	41	10-1/2	30-3/4
V 952	-	-	-	-	19-1/2	32

① All dimensions in inches.

MOTOR DATA / SERVICE

SERVICE

WARNING

When servicing or repairing this equipment, use only factory-approved service replacement parts. A complete replacement parts list may be obtained by contacting Modine Manufacturing Company. Refer to the rating plate on the unit for complete unit substitution of parts or controls not approved by the factory will be at the owner's risk.

CAUTION

1. Service or repair of this equipment must be performed by a qualified service agency.
2. Do not reuse any electrical component which has been wet. Replace component.

IMPORTANT

To check most of the Possible Remedies in the troubleshooting guide listed in Table 15.1, refer to the applicable sections of the manual.

Heating equipment should be serviced before each heating season to assure proper operations. The following items may be required more frequently based on the environment in which the unit is installed and frequency of equipment operation.

All installation and service of these units must be performed by a qualified installation and service agency.

Before any service, BE SURE TO TURN OFF THE STEAM OR WATER SUPPLY AT THE MANUAL SHUT-OFF VALVES AND TURN OFF ALL ELECTRIC POWER TO THE HEATER.

Motors

1. Remove grease and dirt on motor during each inspection or lubrication. Open frame motors should be blown clean every heating season, or whenever coils are cleaned, whichever is sooner.
2. Lubricate motor according to manufacturer's instructions located on the motor. When no motor oiling instructions are on the motor, oil the motor every two thousand hours of operation with SAE20 motor oil for units in normal applications. Adjust oiling according to usage and atmosphere.
3. Some motors do not have oil fittings. These motors are lubricated for long life and do not require further lubrication.
4. A change in line voltage higher or lower than motor nameplate rating may cause overheating and serious motor damage. Check plant voltage conditions. A separate manual starter with thermal overload protection device is recommended for those units that do not have motors with built-in overload protection.

Coils

1. Clean coil at least once a year; more often under unfavorable conditions. Unless coil is kept reasonably free of dirt, lint and grease, its original heating capacity will be reduced — possibly to a serious degree, and motor damage may result.

Two commonly used cleaning methods are:

- Loosen dirt by brushing fins on side where air enters coil and then turn on fan to blow dirt from unit.
- Use high pressure air hose to loosen dirt by blowing from side where air leaves coil (side adjacent to louvers on blow-through units; side adjacent to fan on draw-through units).

SERVICE / TROUBLESHOOTING

2. For thorough cleaning of coil, remove motor and fan and spray a mild alkaline cleaning solution over the coil. After a few minutes, follow by a hot water rinse. (A steam gun can be used for spraying cleaning solution and hot water.)
3. Coils subjected to corrosive fumes should be checked and cleaned frequently.
4. Provide controlled water treatment — don't use excess of boiler compounds. Contact your boiler compound supplier for proper usage or the services of a water treatment laboratory.
5. Periodic internal flushing of the coils is recommended in areas where water supply is suspected of causing scale. Use an alkaline-chelant solution and introduce it at the main pump of the hydronic system. Flush thoroughly.

WARNING: USING INORGANIC OR MINERAL ACIDS SUCH AS MURIATIC (HYDROCHLORIC) ACID, EVEN THOUGH INHIBITED, MAY LEAD TO SEVERE DAMAGE, INCLUDING CORROSION AND LEAKAGE.

6. De-aerate boiler feed-water (particularly if large amount of new water is used).
7. Ensure rapid continuous and adequate condensate drainage by properly sized and installed traps and piping. Check traps for sticking. Clean strainers ahead of traps. (When traps don't work, condensate accumulates in unit heater coil; water hammer results.)
8. Adequately vent each unit.

9. Use low pressure steam when possible.

Table 15.1 - Troubleshooting

Fails to Maintain Temperature <ol style="list-style-type: none">1. Undersized unit heater, boiler, pump or piping.2. Unit heater operating at low speed when sized for high speed.3. Unit heater mounted too high — heated air not delivered to floor.4. Thermostat — improper location or setting, or not functioning.5. Dirty or clogged coil. Unit Blows Cold Air <ol style="list-style-type: none">1. Manual shut-off valve closed.2. Insufficient steam pressure or lack of hot water.3. Aquastat not functioning.4. Improper venting.5. Steam trap not functioning.6. Drip leg too short (steam system).7. Return line plugged (steam system).8. Pump undersized or not operating (hot water system). Does Not Operate When Heat Needed <ol style="list-style-type: none">1. Defective motor or electrical connections.2. Thermostat, aquastat or pressure limit control not functioning. Fails to Deliver Heat to Floor <ol style="list-style-type: none">1. Units mounted too high.2. Operating on low speed.3. Final air temperature too high.4. Louvers not adjusted properly.5. Wrong type of diffuser (on verticals).6. Undersized unit heater (insufficient air delivery).7. Wrong type of unit (may require vertical delivery).8. Cross ventilation or drafts.9. Obstructions to air flow.	Noisy Unit <ol style="list-style-type: none">1. Loose bolts or screws.2. Fan blade bent, out of balance.3. Dirt accumulation on fan blades.4. Fan hub or blade rivets loose.5. Motor shaft bearing worn.6. Motor mounting bent, fan not positioned properly in venturi.7. Conduit too rigid, transmits vibration noise.8. BX cable touching unit heater, chatters as casing vibrates. Employees Complain of Hot Blast <ol style="list-style-type: none">1. Air stream aimed directly at employees.2. Louvers not adjusted properly.3. Wrong type of diffuser (on verticals).4. Excessive final air temperature. Unit Operates Too Long <ol style="list-style-type: none">1. Thermostat installed on cold wall or other improper location.2. Aquastat or pressure limit control not functioning properly.3. Unit is undersized. Frequent Motor Failure <ol style="list-style-type: none">1. Voltage fluctuations too high or too low.2. Excessive or insufficient lubrication.3. Wiring to motor undersized.4. Improper electrical connections.5. Motor operating in too high air temperature.6. Restricted air flow due to clogged coil or closed louvers.7. Fan out of balance.8. Unbalanced voltage on 3ϕ power. Coil Failure/Unit Leaks <ol style="list-style-type: none">1. Severe internal corrosion from feedwater.2. Type of boiler treatment.3. Entrained air causing water hammer.4. Continuous operation above 150 PSI (375°F)(steam systems).5. Loose connection.
---	--

COMMERCIAL WARRANTY

Seller warrants its products to be free from defects in material and workmanship, EXCLUSIVE, HOWEVER, of failures attributable to the use of materials substituted under emergency conditions for materials normally employed. This warranty covers replacement of any parts furnished from the factory of Seller, but does not cover labor of any kind and materials not furnished by Seller, or any charges for any such labor or materials, whether such labor, materials or charges thereon are due to replacement of parts, adjustments, repairs, or any other work done. This warranty does not apply to any equipment which shall have been repaired or altered outside the factory of Seller in any way so as, in the judgment of Seller, to affect its stability, nor which has been subjected to misuse, negligence, or operating conditions in excess of those for which such equipment was designed. This warranty does not cover the effects of physical or chemical properties of water or steam or other liquids or gases used in the equipment.

BUYER AGREES THAT SELLER'S WARRANTY OF ITS PRODUCTS TO BE FREE FROM DEFECT IN MATERIAL AND WORKMANSHIP, AS LIMITED HEREIN, SHALL BE IN LIEU OF AND EXCLUSIVE OF ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, WHETHER ARISING FROM LAW, COURSE OF DEALING, USAGE OF TRADE, OR OTHERWISE, THERE ARE NO OTHER WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY OR FITNESS FOR PURPOSE, WHICH EXTEND BEYOND THE PRODUCT DESCRIPTION CONFIRMED BY BUYER AND SELLER AS OF THE DATE OF FINAL AGREEMENT.

This warranty is void if the input to the product exceeds the rated input as indicated on the product serial plate by more than 5% on gas-fired and oil-fired units, or if the product in the judgment of SELLER has been installed in a corrosive atmosphere, or subjected to corrosive fluids or gases, been subjected to misuse, negligence, accident, excessive thermal shock, excessive humidity, physical damage, impact, abrasion, unauthorized alterations, or operation contrary to SELLER'S printed instructions, or if the serial number has been altered, defaced or removed.

BUYER AGREES THAT IN NO EVENT WILL SELLER BE LIABLE FOR COSTS OF PROCESSING, LOST PROFITS, INJURY TO GOODWILL, OR ANY OTHER CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND RESULTING FROM THE ORDER OR USE OF ITS PRODUCT, WHETHER ARISING FROM BREACH OF WARRANTY, NONCONFORMITY TO ORDERED SPECIFICATIONS, DELAY IN DELIVERY, OR ANY LOSS SUSTAINED BY THE BUYER.

BUYER'S REMEDY FOR BREACH OF WARRANTY, EXCLUSIVE OF ALL OTHER REMEDIES PROVIDED BY LAW, IS LIMITED TO REPAIR OR REPLACEMENT AT THE FACTORY OF SELLER, ANY COMPONENT WHICH SHALL, WITHIN THE APPLICABLE WARRANTY PERIOD DEFINED HEREIN AND UPON PRIOR WRITTEN APPROVAL, BE RETURNED TO SELLER WITH TRANSPORTATION CHARGES PREPAID AND WHICH THE EXAMINATION OF SELLER SHALL DISCLOSE TO HAVE BEEN DEFECTIVE; EXCEPT THAT WHEN THE PRODUCT IS TO BE USED BY BUYER AS A COMPONENT PART OF EQUIPMENT MANUFACTURED BY BUYER, BUYER'S REMEDY FOR BREACH, AS LIMITED HEREIN, SHALL BE LIMITED TO ONE YEAR FROM DATE OF SHIPMENT FROM SELLER. FOR GAS-FIRED PRODUCTS INSTALLED IN HIGH HUMIDITY APPLICATIONS AND UTILIZING STAINLESS STEEL HEAT EXCHANGERS, BUYER'S REMEDY FOR BREACH, AS LIMITED HEREIN, SHALL BE LIMITED TO TEN YEARS FROM DATE OF SHIPMENT FROM SELLER.

These warranties are issued only to the original owner-user and cannot be transferred or assigned. No provision is made in these warranties for any labor allowance or field labor participation. Seller will not honor any expenses incurred in its behalf with regard to repairs to any of Seller's products. No credit shall be issued for any defective part returned without proper written authorization (including, but not limited to, model number, serial number, date of failure, etc.) and freight prepaid.

OPTIONAL SUPPLEMENTAL WARRANTY

Provided a supplemental warranty has been purchased, Seller extends the warranty herein for an additional four (4) years on certain compressors. Provided a supplemental warranty has been purchased, Seller extends the warranty herein for an additional four (4) years or nine (9) years on certain heat exchangers.

EXCLUSION OF CONSUMABLES & CONDITIONS BEYOND SELLER'S CONTROL

This warranty shall not be applicable to any of the following items: refrigerant gas, belts, filters, fuses and other items consumed or worn out by normal wear and tear or conditions beyond Seller's control, including (without limitation as to generality) polluted or contaminated or foreign matter contained in the air or water utilized for heat exchanger (condenser) cooling or if the failure of the part is caused by improper air or water supply, or improper or incorrect sizing of power supply.

<u>Component</u>	"APPLICABLE WARRANTY PERIOD"
Applicable Models	
Heat Exchangers Gas-Fired Units	TEN YEARS FROM DATE OF FIRST BENEFICIAL USE BY BUYER OR ANY OTHER USER, WITHIN TEN YEARS FROM DATE OF RESALE BY BUYER OR ANY OTHER USER, WITHIN TEN YEARS FROM DATE OF RESALE BY BUYER IN ANY UNCHANGED CONDITION, OR WITHIN ONE HUNDRED TWENTY-SIX MONTHS FROM DATE OF SHIPMENT FROM SELLER, WHICHEVER OCCURS FIRST
Heat Exchangers Low Intensity Infrared Units Compressors Condensing Units for Cassettes	FIVE YEARS FROM DATE OF FIRST BENEFICIAL USE BY BUYER OR ANY OTHER USER, WITHIN FIVE YEARS FROM DATE OF RESALE BY BUYER OR ANY OTHER USER, WITHIN FIVE YEARS FROM DATE OF RESALE BY BUYER IN ANY UNCHANGED CONDITION, OR WITHIN SIXTY-SIX MONTHS FROM DATE OF SHIPMENT FROM SELLER, WHICHEVER OCCURS FIRST
Burners Low Intensity Infrared Units Other Components excluding Heat Exchangers, Coils, Condensers, Burners, Sheet Metal	TWO YEARS FROM DATE OF FIRST BENEFICIAL USE BY BUYER OR ANY OTHER USER, WITHIN TWO YEARS FROM DATE OF RESALE BY BUYER IN ANY UNCHANGED CONDITION, OR WITHIN THIRTY MONTHS FROM DATE OF SHIPMENT FROM SELLER, WHICHEVER OCCURS FIRST
Heat Exchangers/Coils Indoor and Outdoor Duct Furnaces and System Units, Steam/Hot Water Units, Oil-Fired Units, Electric Units, Cassettes, Vertical Unit Ventilators, Geothermal Units Compressors Vertical Unit Ventilators, Geothermal Units Burners High Intensity Infrared Units Sheet Metal Parts All Products	ONE YEAR FROM DATE OF FIRST BENEFICIAL USE BY BUYER OR ANY OTHER USER, WITHIN ONE YEAR FROM DATE OF RESALE BY BUYER IN ANY UNCHANGED CONDITION, OR WITHIN EIGHTEEN MONTHS FROM DATE OF SHIPMENT FROM SELLER, WHICHEVER OCCURS FIRST

As Modine Manufacturing Company has a continuous product improvement program, it reserves the right to change design and specifications without notice.





Modine Manufacturing Company

1500 Dekoven Avenue
Racine WI 53403
1.800.828.4328 (HEAT)
www.modineheatvac.com

Modèle de la période de garantie applicable	Tout le temps	Modèle de la période de garantie applicable
Échangeurs thermiques séparatifs	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps
Modèle de la période de garantie applicable	Tout le temps	Tout le temps

La barrière-déssus ne s'applique pas aux articles suivants : gaz hydrogène contournés ou dissous dans d'autres articles consommatifs ou normalement utilisés ou conditionnés au-delà de leur durée de vie utile par l'usager. Les articles suivants sont également exclués de la barrière-déssus : condensat de la vapeur d'eau et les articles utilisés pour le refroidissement des compresseurs (sacs filtrants, cartouches d'échangeur thermique, etc.).

GARANTIE SUPPLEMENTAIRE EN OPTION
Sous réserve de l'achat d'une garantie supplémentaire en option dans le cadre du contrat de vente ou de location, la compagnie peut proposer à l'assuré une garantie supplémentaire dans les conditions suivantes :

Ces garanties sont données uniquement au propriétaire utilisateur initial et ne sont pas transférables sans autorisation écrite (y compris mais sans y limiter toute preuve de modèle numéro de série date de la vente etc.) et sans port expédition.

DE DORDONNANCHE OU UTILISATION DE SON PRODUIT SI PROVENANT RUPUTURE
DE GARANTIE NON-COMMUNIQUE A CONDAMNER SPECIFICATIONS RETARD DAN
LA LIVRAISON OU TOUTE AUTRE PERTE SUBIS PAR LACHETEUR.

Pour les appareils fonctionnant au gaz ou au mazout cette garantie est annulée si le pourcentage d'humidité dans l'atmosphère dépasse le plus de 5 % à la température normale. Insistante sur la place importante qu'il accorde à l'air dans le fonctionnement des systèmes de chauffage, la loi oblige à produire un produit qui soit à la fois sûr et économique.

Le gaz est un combustible très efficace mais il faut faire attention à ne pas l'utiliser dans une atmosphère corrodante exposée à l'humidité ou dans un endroit où il peut être en contact avec de l'eau ou de la vapeur. Il est donc recommandé de ne pas utiliser ce type de système dans des zones humides ou sous des pluies abondantes.

Il est également recommandé de ne pas utiliser ce type de système dans des zones où il y a des risques de foudre ou de décharge électrique. Il est recommandé de faire appel à un professionnel qualifié pour l'installation et l'entretien de ce type de système.

GARANTIE COMMERCIALE

Détail d'analyse de l'enroulement / Fuites Unité

- Défaillance de l'ensemble / Fuites Unité**

 - 1. Forte corrosion interne causée par la qualité de l'eau.
 - 2. Type de traitement pour l'eau alimentaire.
 - 3. Fonctionnement continu au-dessus de 150 PSI (375°F).
 - 4. Pression d'air dans le circuit causant des coups de bélier.
 - 5. Connexion desserrée.
 - 6. Débit d'air restreint à cause de la bobine bouchée ou des pertes internes excessives.
 - 7. Ventilateur mal équilibré.
 - 8. Tension mal équilibrée entre les 3 phases.
 - 9. Connexions électriques défectueuses.
 - 10. Température de l'air trop élevée autour du moteur.
 - 11. Débit d'air restreint à cause de la bobine bouchée ou des pertes internes excessives.
 - 12. Tension trop haute ou trop basse.
 - 13. Câblage excessif ou insuffisant.
 - 14. Connexions électriques défectueuses.
 - 15. Température du moteur inadéquate (sélection trop faible).
 - 16. Débit d'air restreint à cause de la bobine bouchée ou des pertes internes excessives.
 - 17. Ventilateur mal équilibré.
 - 18. Tension mal équilibrée entre les 3 phases.
 - 19. Forte corrosion interne causée par la qualité de l'eau.
 - 20. Type de traitement pour l'eau alimentaire.
 - 21. Fonctionnement continu au-dessus de 150 PSI (375°F).
 - 22. Pression d'air dans le circuit causant des coups de bélier.
 - 23. Connexion desserrée.
 - 24. Systèmes à papier.

Défaillances répétées du moteur

- Appareil tourne trop longtemps**

 - 1. Thermosat mal positionné (par exemple contre un mur froid).
 - 2. Ajustast ou limiteur de pression défectueux.
 - 3. Appareil sous-dimensionné.

Les employés se plaignent de courants d'air chaud

- Tonctionnement d'hydrant**

 - 1. Bouillons ou vis desserrées.
 - 2. Places tordues ou mal équilibrées.
 - 3. Accumulation de poussière sur les palefs.
 - 4. Rivets du moyeu ou des plates desserrés.
 - 5. Bague axiale du moteur usée.
 - 6. Supports du moteur trop relâchés helice décentrée dans le venturi.
 - 7. Conduit trop rigide transmet les vibrations.
 - 8. Câble BX touchant l'appareil brûlé cause par les vibrations du carter.

Conclusionement bryant

Systeme consigne

ableau 15.1 - Dépannage

1. Les cartes déviantes érite nettoyées par ordinateur pour enlever la saleté la grasse et les substances corrosives qui risquent d'attacher la peinture. Les zones de rouille ou de corrosion doivent être nettoyées et repenties.

2. Résserrer les fixations de la grille de protection et du support du moteur. Vérifier que l'elice tourne librement avec un jeu suffisant et qu'elle est bien serrée sur l'arbre.

3. A la fin d'une opération d'entretien fixer sur l'équipement une étiquette indiquant la date d'inspection de grissage et de numéro de série. Voir Figure 15.1.

Pour commander des pièces adressez-vous à votre représentant local. Vous aurez besoin du numéro de modèle complet et du numéro de série.

Carters

3. Chaque appareil doit étre convenablement mis à l'air libre.

Lableau 15.1 - Dépannage

AVERTISSEMENT : L'EMPLOI D'ACIDES INORGANIQUES (MINÉRAL) COMME L'ACIDE CHLORHYDRIQUE DOMMAGES GRAVES DE LA CORROSION ET DES FUTS. 6. L'eau alimentaire dé la chaudière doit être désassée (particulièrement lorsqu'on ajoute un gros volume d'eau). 7. Assurer un écoulement rapide et continu du condensat en utilisant des tuyauteries à des purgateurs de diamètre convenable. Vérifier que les purgateurs fonctionnent. Nettoyer les crêpines en somt des purgateurs. (Lorsque le purgateur ne fonctionne pas le condensat s'accumule dans le serpentin et peut provoquer un effet de bétier hydrostatique).

2. Pour nettoyer à fond l'enroulement retirer le moteur et le ventillateur avant de vaporiser une solution modérément alcalin sur les ailettes. Laisser agir quelques minutes et laver à l'eau chaude. (Pour les deux opérations on peut utiliser un pistolet à vapeur.)

3. Les enroulements exposés à des vapeurs corrosives doivent être vérifiés et nettoyés régulièrement.

4. Utiliser le gaufrage sans exagérer la quantité de produits pour chaudir. Le fourisseur du produit détaillant ou un laboratoire de traitement des eaux pourra donner des conseils utiles.

5. Si l'eau utilisée est très calcaire il est recommandé de faire des rinçages périodiques du circuit du serpentin. Utiliser une solution acide-chéante au niveau de la pompe principale du système hydro-électrique. Rincer abondamment.

MAINTENANCE ET DÉPANNAGE

- Moteurs**
1. Rétrier la graisse et la saleté du moteur à chaque inspection ou en même temps que les enroulements si l'intervalle est plus fréquent.
 2. Graisser les moteurs selon les instructions du fabricant (plaques du moteur). En l'absence d'instructions de grasseage utilisation normale. Ajuster la périodicité en fonction de l'utilisation et de l'environnement.
 3. Certains moteurs ne comportent pas d'orifice de lubrification. Il s'agit généralement d'un orifice dans le piston ou dans le corps moteur.
 4. Une variation de la tension du secteur du plus ou moins par rapport à la tension nominale peut causer une surchauffe et par an et plus souvent si l'environnement est défavorable.
 1. Les enroulements doivent être nettoyés au moins une fois par rapport à la tension nominale pour assurer une bonne circulation des dommages sévères au moteur. Vérifier souvent la tension du secteur local. Il est recommandé d'utiliser un démarreur manuel séparé avec protection thermique pour tous les moteurs qui ne comportent pas une protection thermique intégrée.
 2. Brosser les ailettes du côté de l'entrée d'air de l'enroulement et faire fonctionner le ventilateur pour évacuer la poussière. Les deux méthodes de nettoyage les plus courantes sont :
 - Utiliser un jet d'air comprimé sur le côté sortie de l'enroulement (près des volutes sur les modèles où le ventilateur est démonté) (côté ventilateur sur les autres).

AVANT TOUT SERVICE NOUBLIEZ PAS DE COUPER LA VAPEUR	Tous les installations et le service de ces unités doit être effectuée par un installateur qualifié et agencé de service.	À LE CHAUFFE.
D'ABORD ET ENFIN TOUT EN EAU AU MANUEL VANNES	Tous les éléments suivants peuvent être redressés plus souvent basé sur l'environnement dans lequel l'appareil est installé et la fréquence de fonctionnement de l'équipement.	D'EAU OU D'ALIMENTATION EN EAU AU MANUEL VANNES
Équipement de chauffage doit être préparé avant chaque saison dans le tableau de dépannage 15.1 reportez-vous aux sections pour essayer la plupart des solutions possibles suggérées dans le tableau de dépannage 15.1 reportez-vous aux sections correspondantes du manuel.	Équipement de chauffage pour assurer un fonctionnement correct. Les éléments suivants peuvent être redressés plus souvent basé sur l'environnement dans lequel l'appareil est installé et la fréquence de fonctionnement de l'équipement.	AVANT TOUT SERVICE NOUBLIEZ TOUS LES ENERGIE ELECTRIQUE
ATTENTION	IMPORtant	MAINTENANCE
Pour l'entretien et les réparations doivent être confiées à un entrepreneur qualifié.	1. L'entrepreneur doit utiliser un composant électrique qui a été fabriqué par l'eau. Remplacez le composant.	MOTEUR D'ONNEES / ENTRETIEN
AVERTISSEMENT	COMPANY. Toute substitution de pièce ou d'organes de commande non approuvée par le fabricant engage la responsabilité du propriétaire.	MAINTEINANCE

① Toutes les dimensions en po.

de Modèle	Cone-jet	Troncognique	Pristenes	Perstennes	L	T	M	X	P
V 952	53-3/4	26-3/8	30	23-1/8	26-7/8	-	-	30	3
PT/PTN 610	51-1/2	29-5/8	30	20-3/8	21	-	-	30	2-1/2
PT/PTN 500	43-1/4	29	30	20-1/4	14-3/8	-	-	27	1-1/2
PT/PTN 385	43-1/4	25-3/4	30	15-3/4	14-3/8	-	-	27	2-1/2
PT/PTN 333	43-1/4	23-7/8	30	15-3/4	14-3/8	-	-	22	1-1/2
PT/PTN 279	34-3/4	22-5/8	25-1/4	16-3/4	-	-	21	2	1-1/4
V 952	53-3/4	21-1/8	30	-	3-1/2	31	30	3	487
V/VN 610	51-1/2	19-1/8	31-3/8	-	3-3/4	30-1/2	31-3/8	30	2-1/2
V/VN 500	43-1/4	19	31-1/2	27-1/2	3-1/2	27-1/2	18-1/5	27	1-1/2
V/VN 385	43-1/4	31-1/2	27-1/2	27-1/2	18-1/5	27	2-1/2	1-1/2	368
V/VN 333	43-1/4	31-1/2	27-1/2	18-1/5	22	22	2-1/2	1-1/2	166
V/VN 279	34-3/4	12-7/8	2-7/8	3-1/8	22-1/2	18-1/5	22	2	1-1/4
V/VN 247	34-3/4	12-2-7/8	18-3/8	18-3/8	2-1/2	3	21-1/2	2	1-1/4
V/VN 212	34-3/4	12-7/8	18-3/8	2-1/2	3	19-1/2	-	19	1-1/2
V/VN 193	34-3/4	9-7/8	18-3/8	2-1/8	3	19-1/2	-	19	1
V/VN 161	34-3/4	6-7/8	18-3/8	2-1/8	3	19-1/2	-	19	1-1/2
V/VN 139	34-3/4	6-7/8	18-3/8	2-1/8	3	19-1/2	-	19	1
V/VN 95	24-3/4	8-1/8	11-3/8	2-1/8	2-5/8	16-1/2	-	16	1-1/4
V/VN 78	24-3/4	5-1/8	11-3/8	2-1/8	4-3/8	14-1/2	-	14	1-1/4
V/VN 59	24-3/4	5-1/8	11-3/8	2-1/8	4-3/8	14-1/2	-	14	1-1/4
V/VN 42	24-3/4	3-5/8	11-3/8	2-1/8	4-3/8	14-1/2	-	14	1-1/4
Dimensions des modèles V/VN et PT/PTN ① ② ③									

Tableau 13.2 - Dimensions des Déflecteurs d'air Vertical

① Toutes les dimensions en po.
② Dimensions pour les modèles standard et à base température de sortie.
③ Voir le tableau 13.2 pour les dimensions de sorte d'air en option accessoire.

de Modèle	A	B	C	D	E	F	G	Haut	Bas	d'expédition approx. (livres)
V/VN 42 à V/VN 279	4 trous de montage	12 po min.	12 po min.	Diamètre Npt	Racc. male	Diamètre de la fente	Diamètre grille de la sortie	12 po min.	12 po min.	2-3/4 po
V/VN 333 à V/VN 952	4 trous de montage	12 po min.	12 po min.	Alimentation male	Alimentation male	Alimentation male	Alimentation male	12 po min.	12 po min.	2-3/4 po
V/VN 610 à V/VN 610/952	4 trous de montage	12 po min.	12 po min.	PT 610	PT 610	PT 610	PT 610	12 po min.	12 po min.	2-3/4 po
V/VN 500 à V/VN 500	4 trous de montage	12 po min.	12 po min.	PT 79	PT 79	PT 79	PT 79	12 po min.	12 po min.	2-3/4 po
Dimensions des modèles V/VN et PT/PTN ① ② ③										

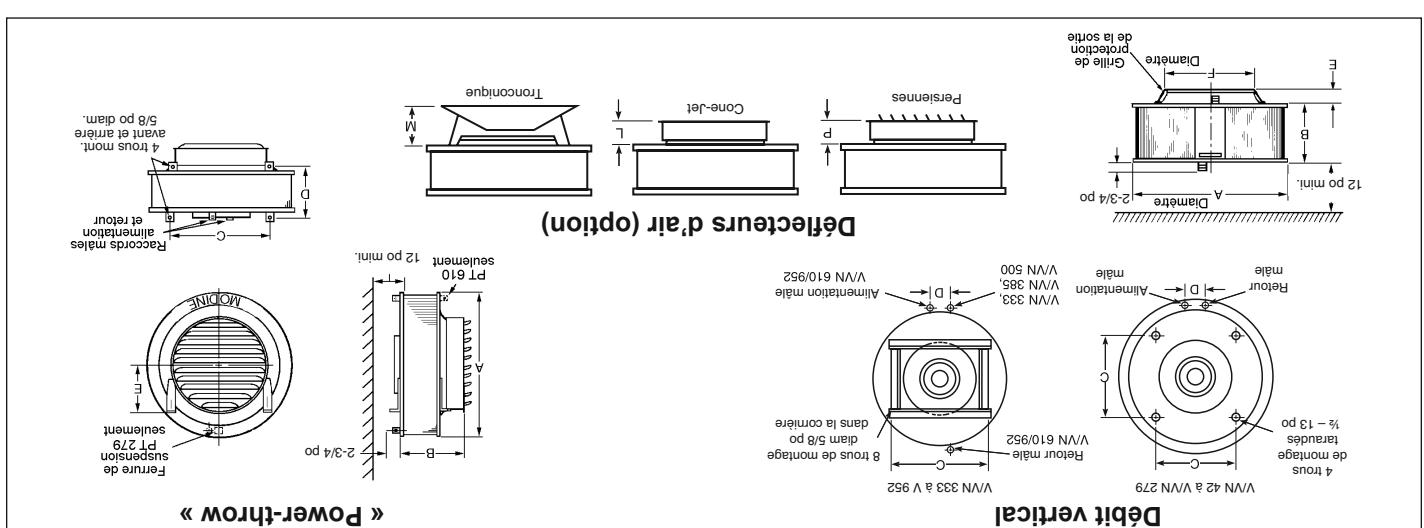


Figure 13.1 - Dimensions des modèles V/VN et PT/PTN

DIMENSIONS DONNÉES

② Dimensions pour les modèles standard à base de température de sortie.
① Toutes dimensions sont en po.

Numéro de modèle	A	B	C	115V Motor std	115V antidefr. 115V Motor std	E	F	G	H	femelles NPT	Raccords de montage	Diamètre ventilateur	Poids approx. exécutif lbs.	
HSB 18	12-3/8	13	6	5	12									
HSB 24	12-3/8	13	6	6-1/2	-	3	-	-	3/4	9	20			
HSB 33	16-3/8	17-1/2	8-3/4	6-1/2	12	-	-	-	-					
HSB 47	16-3/8	17-1/2	8-3/4	8	12-1/4	11	3-5/8	6	-	1-1/4	12	36		
HSB 63	20-7/16	21-1/2	8-3/4	8	12-3/4	15	3-5/8	6	-	1-1/4	14	48		
HSB 86	20-7/16	21-1/2	8-3/4	9	12-3/4	15	3-5/8	6	-	1-1/4	14	52		
HSB 108	24-7/16	25-1/2	9-1/2	8	11-1/2	18	3-3/8	-	-	1-1/4	18	74		
HSB 121	24-7/16	25-1/2	9-1/2	9	11-1/2	18	3-3/8	6	-	1-1/4	18	74		
HSB 165	30-1/2	30-1/2	9-1/4	9-1/2	14	21-1/4	14	3-3/4	6-3/8	-	1-1/4	22	92	
HSB 193	30-1/2	30-1/2	9-1/4	9-1/2	14	21-1/4	14	3-3/4	6-3/8	-	1-1/4	22	98	
HSB 258	38-1/2	38-1/2	9-1/4	9-1/2	14	21-1/4	14	3-5/8	6-3/8	-	1-1/4	22	162	
HSB 290	38-1/2	38-1/2	9-1/4	9-1/2	14	21-1/2	14	3-5/8	7-7/8	-	1-1/4	24	168	
HSB 340	38-1/2	44-1/2	12-1/2	12-1/2	14	18-1/2	14	3-5/8	7-7/8	-	1-1/4	24	176	
HC 24	11-1/2	12-3/4	6-1/2	6	5	12	5-5/8	2-1/4	4-1/8	7-1/2	1/2	9	16	
HC 18	11-1/2	12-3/4	6-1/2	6	5-5/8	12	5-5/8	2-1/4	4-1/8	7-1/2	1/2	9	16	
HC 33	15	17-1/2	8-3/4	8	11	12	5-5/8	3-5/8	6	14	3/4	12	35	
HC 47	15	17-1/2	8-3/4	8	11	12	5-5/8	3-5/8	6	14	3/4	12	34	
HC 63	18-1/2	21-1/2	8-3/4	8	15	15	3-5/8	6	14	3/4	12	48		
HC 86	18-1/2	21-1/2	8-3/4	9	12-3/4	15	3-5/8	6	14	3/4	12	48		
HC 108	22-1/2	25-1/2	9-1/2	8	18	18	3-5/8	6-3/8	18	3/4	18	74		
HC 121	22-1/2	25-1/2	9-1/2	9	11	18	3-5/8	6-3/8	18	3/4	18	76		
HC 165	26-1/2	29-1/2	9-1/4	9-1/2	14	21-1/4	14	3-5/8	6-3/8	22	3/4	22	92	
HC 193	30-1/2	32-1/2	9-1/4	9-1/2	14	21-1/2	14	3-5/8	6-3/8	22	3/4	22	98	
HC 258	38-1/2	38-1/2	9-1/4	9-1/2	14	21-1/2	14	3-5/8	4-3/4	26	1-1/4	22	92	
HC 290	38-1/2	38-1/2	9-1/4	9-1/2	14	18-1/2	14	3-5/8	8	34	1-1/4	24	168	
HC 340	38-1/2	44-1/2	12-1/2	12-1/2	14	18-1/2	14	3-5/8	8	34	1-1/4	24	176	

Tableau 12.1 - Dimensions des modèles HSB et HC ①

① Perçages verticaux indiqués sont standard sur les modèles HC 258-340 et

en option sur modèles HC 193.

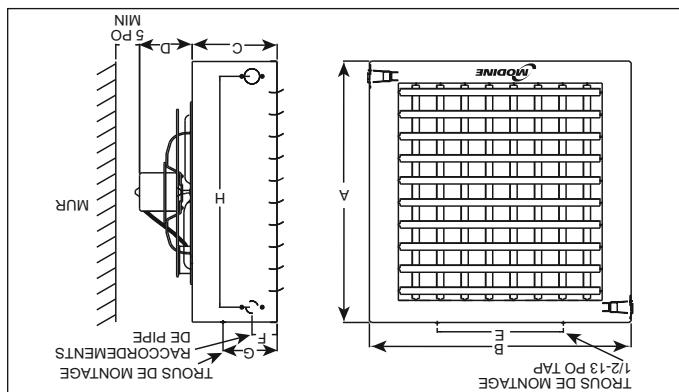


Figure 12.4 - Modèle Dimensionne HC 18-16

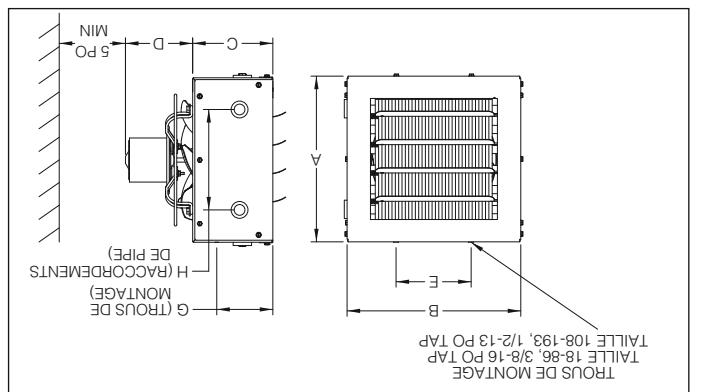


Figure 12.3 - Modèle Dimensionne HC 18-34

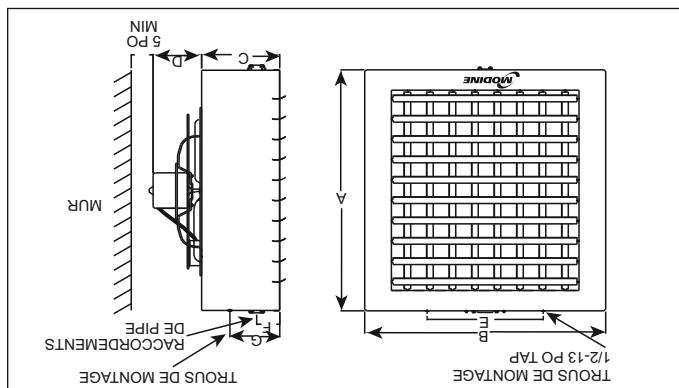


Figure 12.2 - Modèle Dimensionne HSB 258-340

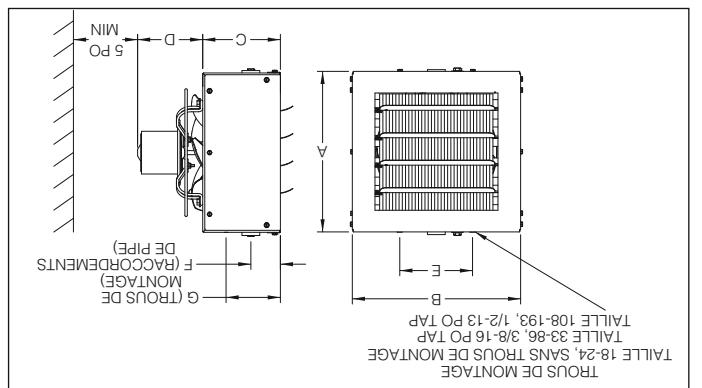


Figure 12.1 - Modèle Dimensionne HSB 18-193

DIMENSIONS DONNÉES

Modèles à débit horizontal - Deux styles

PERFORMANCES NOMINALES DES MODÈLES EAU CHAude -

Tableau 11.1 - Performances des modèles à basse température de sortie en conditions normales :

Type	Modèle N°	Btu/h	Données eau						Données air						Moteur																			
			GPM	Perce de charge (pi d'eau)	Hauter de maximum de montage (pi)	Air entrant de montage (pi)	Vitesse de sortie (pi/min)	Temp, °C	Vitesse appr., (tr/min)	HP	Btu/hr	Modèle N°	GPM	Perce de charge (pi d'eau)	Hauter de maximum de montage (pi)	Air entrant de montage (pi)	Vitesse de sortie (pi/min)	Temp, °C	Vitesse appr., (tr/min)	HP														
Debit horizontal	HSB/HC 108L	50500	6,9	1,8	20	23	1330	510	94	1/8	1000	HSB/HC 108L	50500	6,9	1,8	20	23	1330	510	94	1/8	1000												
Debit horizontal	HSB/HC 86L	33900	4,6	0,6	18	23	925	550	93	1/8	1000	HSB/HC 86L	33900	4,6	0,6	18	23	925	550	93	1/8	1000												
Debit horizontal	HSB/HC 63L	29000	4,0	0,4	17	21	725	435	96	1/12	1000	HSB/HC 63L	29000	4,0	0,2	15	21	540	570	87	1/12	1000												
Debit horizontal	HSB/HC 47L	16300	2,2	0,2	13	16	430	455	91	1/25	1000	HSB/HC 47L	16300	2,0	0,2	12	14	265	475	95	1/25	1000												
Debit horizontal	HSB/HC 33L	10400	1,4	0,6	12	14	430	455	91	1/25	1000	HSB/HC 33L	10400	1,4	0,6	10	13	280	410	94	1/60	1000												
Debit horizontal	HSB/HC 24L	8700	1,2	0,4	10	10	1330	510	94	1/60	1000	HSB/HC 24L	8700	1,2	0,4	10	10	1330	510	94	1/60	1000												
Debit horizontal	HSB/HC 18L	546700	56,9	0,7	14,0 / 100,0	48	72	12800	2440	102	2	1140	HSB/HC 18L	546700	56,9	0,7	14,0 / 100,0	48	72	12800	2440	102	2	1140										
Debit vertical	V/VN 610L	344900	35,9	0,6	6,0 / 100,0	47	55	70	48	12400	2445	86	V/VN 610L	344900	35,9	0,6	6,0 / 100,0	47	55	70	48	12400	2445	86	1 1/2	1140								
Debit vertical	V/VN 500L	295000	30,7	2,8	3,0 / 100,0	48	57	72	49	11000	2670	85	V/VN 500L	295000	30,7	2,8	3,0 / 100,0	48	57	72	49	11000	2670	85	1 1/2	1140								
Debit vertical	V/VN 385L	229100	23,9	3,0	2,3 / 75,0	38	46	57	49	8140	1970	87	V/VN 385L	229100	23,9	3,0	2,3 / 75,0	38	46	57	49	8140	1970	87	1 1/2	1140								
Debit vertical	V/VN 333L	198300	20,7	1,2	2,3 / 75,0	38	48	57	39	6340	2300	87	V/VN 333L	198300	20,7	1,2	2,3 / 75,0	38	48	57	39	6340	2300	87	1/2	1075								
Debit vertical	V/VN 279L	162200	16,9	1,2	2,0 / 60,0	34	45	51	35	5110	2030	87	V/VN 279L	162200	16,9	1,2	2,0 / 60,0	34	45	51	35	5110	2030	87	1/2	1075								
Debit vertical	V/VN 247L	143600	15,0	1,2	2,0 / 60,0	29	38	43	29	3830	1845	91	V/VN 247L	143600	15,0	1,2	2,0 / 60,0	29	38	43	29	3830	1845	91	1/3	1075								
Debit vertical	V/VN 212L	123400	12,9	0,9	1,5 / 50,0	29	37	41	28	3710	1790	89	V/VN 212L	123400	12,9	0,9	1,5 / 50,0	29	37	41	28	3710	1790	89	1/3	1075								
Debit vertical	V/VN 193L	93900	9,8	1,3	1,3 / 40,0	24	33	37	25	3400	1640	86	V/VN 193L	93900	9,8	1,6	1,0 / 30,0	24	33	37	25	2860	1380	87	1/6	1075								
Debit vertical	V/VN 161L	81200	8,5	1,6	1,3 / 25,0	20	28	31	21	1760	1180	89	V/VN 161L	81200	8,5	0,3	1,0 / 20,0	20	28	31	21	1760	1180	89	1/15	1050								
Debit vertical	V/VN 139L	53100	5,5	0,3	1,0 / 20,0	20	28	31	21	1170	1035	86	V/VN 139L	53100	4,5	0,3	0,8 / 15,0	17	25	17	23	960	835	83	1/30	1050								
Debit vertical	V/VN 78L	43600	3,4	0,3	0,8 / 15,0	17	23	25	17	1190	1035	86	V/VN 78L	32600	3,4	0,4	0,5 / 10,0	14	18	21	14	960	835	83	1/30	1050								
Debit vertical	V/VN 42L	23000	2,4	0,4	0,5 / 10,0	14	18	21	14	960	835	83	V/VN 42L	23000	2,4	0,4	0,5 / 10,0	14	18	21	14	960	835	83	1/30	1050								
Debit vertical	PT/PTN 610L	344900	35,9	0,6	6,0 / 100,0	24	158	12400	2445	86	1 1/2	1140	PT/PTN 610L	344900	35,9	0,6	6,0 / 100,0	24	158	12400	2445	86	1 1/2	1140										
Debit vertical	HSB/HC 340L	200900	20,9	6,6	2,5 / 70,0	25	57	575	760	93	1/2	1075	HSB/HC 340L	161100	16,8	3,7	2,5 / 70,0	25	57	5040	800	89	1/2	1075										
Debit vertical	HSB/HC 290L	147400	15,4	3,2	2,0 / 30,0	23	54	4655	735	89	1/2	1075	HSB/HC 290L	147400	15,4	3,2	2,0 / 30,0	23	54	48	3480	920	89	1/3	1075									
Debit vertical	HSB/HC 258L	113200	11,8	6,6	2,0 / 30,0	23	48	2070	785	89	1/5	1075	HSB/HC 258L	113200	11,8	1,9	0,8 / 30,0	19	31	2150	815	88	1/8	1625										
Debit vertical	HSB/HC 165L	66700	6,9	1,8	0,8 / 30,0	20	38	2150	815	88	1/8	1625	HSB/HC 165L	66700	6,9	1,8	0,8 / 30,0	20	38	2150	815	88	1/8	1625										
Debit vertical	HSB/HC 121L	66100	6,9	1,8	0,8 / 30,0	20	38	2150	815	88	1/8	1625	HSB/HC 121L	66100	6,9	1,8	0,8 / 30,0	20	38	2150	815	88	1/8	1625										
Debit vertical	HSB/HC 108L	44600	4,6	0,6	0,5 / 20,0	18	38	1510	890	87	1/8	1625	HSB/HC 108L	44600	4,6	0,6	0,5 / 20,0	17	25	17	23	66100	835	86	1 1/2	1140								
Debit vertical	HSB/HC 63L	37900	4,0	0,4	0,4 / 10,0	15	34	855	890	82	1/12	1550	HSB/HC 63L	37900	4,0	0,4	0,4 / 10,0	15	34	855	890	82	1/12	1550										
Debit vertical	HSB/HC 47L	21100	2,2	0,2	0,4 / 10,0	13	22	435	775	88	1/25	1550	HSB/HC 47L	21100	2,0	0,2	0,4 / 10,0	12	22	435	775	88	1/25	1550										
Debit vertical	HSB/HC 33L	19300	1,4	0,6	0,3 / 5,0	12	22	435	775	88	1/25	1550	HSB/HC 33L	19300	1,4	0,6	0,3 / 5,0	10	21	364	88	1/60	1550	HSB/HC 18L	11300	1,2	0,4	0,3 / 5,0	10	21	364	88	1/60	1550
Debit vertical	HSB/HC 24L	13700	1,4	0,6	0,3 / 5,0	12	22	435	775	88	1/25	1550	HSB/HC 24L	13700	1,4	0,6	0,3 / 5,0	10	21	364	88	1/60	1550											
Debit vertical	HSB/HC 24L	11100	2,0	0,2	0,4 / 10,0	13	26	435	775	88	1/25	1550	HSB/HC 24L	11100	2,0	0,2	0,4 / 10,0	13	26	435	775	88	1/60	1550										
Debit vertical	HSB/HC 18L	11300	1,2	0,4	0,3 / 5,0	10	21	364	88	1/60	1550	HSB/HC 18L	11300	1,2	0,4	0,3 / 5,0	10	21	364	88	1/60	1550												

Tableau 11.1 - Performances des modèles à basse température de sortie en conditions normales :

Type	Modèle N°	Btu/h	Données eau						Données air						Moteur									
			GPM	Perce de charge (pi d'eau)	Hauter de maximum de montage (pi)	Air entrant de montage (pi)	Vitesse de sortie (pi/min)	Temp, °C	Vitesse appr., (tr/min)	HP	GPM	Perce de charge (pi d'eau)	Hauter de maximum de montage (pi)	Air entrant de montage (pi)	Vitesse de sortie (pi/min)	Temp, °C	Vitesse appr., (tr/min)	HP						
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 108L	50500	6,9	1,8	20	23	1330	510	94	HSB/HC 108L	50500	6,9	1,8	20	23	1330	510	94	1/8	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 86L	33900	4,6	0,6	18	23	925	550	93	HSB/HC 86L	33900	4,6	0,6	18	23	925	550	93	1/8	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 63L	29000	4,0	0,4	17	21	725	435	96	HSB/HC 63L	29000	4,0	0,2	15	21	540	570	87	1/12	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 47L	14700	2,0	0,2	13	16	430	455	91	HSB/HC 47L	14700	2,0	0,2	13	16	430	455	91	1/25	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 33L	10400	1,4	0,6	12	14	430	455	91	HSB/HC 33L	10400	1,4	0,6	10	13	280	410	94	1/60	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 24L	8700	1,2	0,4	10	10	1330	510	94	HSB/HC 24L	8700	1,2	0,4	10	10	1330	510	94	1/60	1000		
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 18L	546700	56,9	0,7	14,0 / 100,0	48	72	12800	2440	102	HSB/HC 18L	546700	56,9	0,7	14,0 / 100,0	48	72	12800	2440	102	2	1140
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 86L	344900	35,9	0,6	6,0 / 100,0	47	55	12400	2445	86	HSB/HC 86L	344900	35,9	0,6	6,0 / 100,0	47	55	12400	2445	86	1 1/2	1140
Debit vertical	CHUTE DE 20°F ENTREE A 60°F	EAU D'ENTREE	HSB/HC 63L	295000	30,7	2,8	3,0 / 100,0	48	57	11000	2670	85	HSB/HC 63L	295000	30,7									

PERFORMANCES NOMINALES DES MODELES A VAPEUR - BASEE TEMPERATURE DE SORTE

Vapeur à 2 lbs. et air froid à 60°F Moteur à la vitesse rapide

Type	Modèle N°	Btu/h	PI ²	EDR	Données air						Moteur	
					Hauter montage (pi)	maximum de montage (pi)	① Vitesse air finale (pi/min)	② montage (pi) de sortie (pi/min)	Temp. air finale	Condensat	lb/h	
HSB/HC 18L	15900	66	9	20	364	655	100	16	1/60	1550	1550	
HSB/HC 24L	19300	80	11	21	435	795	100	20	1/25	1550	1550	
HSB/HC 33L	29500	123	14	24	695	745	94	31	1/25	1550	1550	
HSB/HC 47L	32000	133	14	32	855	910	94	33	1/12	1550	1550	
HSB/HC 63L	52500	16	16	435	910	99	31	1/25	1550	1550	1550	
HSB/HC 86L	61500	219	16	33	1170	710	101	54	1/12	1550	1550	
HSB/HC 108L	86500	360	17	36	1510	910	97	64	1/8	1625	1625	
HSB/HC 121L	88000	367	18	29	2070	800	98	90	1/8	1625	1625	
HSB/HC 165L	143000	596	19	26	1760	1180	99	73	1/15	1050	1050	
HSB/HC 258L	190000	258	19	29	1740	1070	95	65	1/15	1050	1050	
HSB/HC 290L	207000	863	21	22	1900	1035	96	45	1/30	1050	1050	
HSB/HC 340L	255000	863	23	26	2070	1380	95	106	1/6	1075	1075	
HSB/HC 47L	149000	621	27	36	3400	1640	96	132	1/3	1075	1075	
HSB/HC 193L	127000	529	26	35	35	2860	1380	95	106	106	106	
HSB/HC 161L	127000	529	26	35	35	2860	1380	95	106	106	106	
HSB/HC 212L	163000	679	27	36	41	3710	1790	99	154	1/3	1075	
HSB/HC 247L	190000	896	36	42	48	5110	2030	96	197	1/2	1075	
HSB/HC 279L	215000	792	32	42	48	3830	1845	102	169	1/3	1075	
HSB/HC 333L	256000	896	36	42	48	5790	2300	96	222	1/2	1075	
HSB/HC 385L	296000	1067	36	45	54	8140	2300	100	265	3/4	1140	
HSB/HC 500L	385000	1233	36	43	54	8140	1970	95	307	1	1140	
HSB/HC 610L	470000	1604	45	54	68	8140	11000	94	400	1/12	1140	
HSB/HC 610L	470000	1958	44	52	66	94	11000	94	400	1/12	1140	
HSB/HC 63L	39500	164	16	20	725	445	109	25	1/12	1000	1000	
HSB/HC 47L	24300	101	14	430	470	107	23	1/25	1000	1000	1000	
HSB/HC 33L	22000	92	11	13	265	490	109	15	1/25	1000	1000	
HSB/HC 24L	14400	60	11	13	265	490	109	15	1/25	1000	1000	
HSB/HC 18L	12000	51	9	12	230	425	108	12	1/60	1000	1000	
Debit horizontal												
HSB/HC 108L	65000	270	19	22	1330	520	104	67	1/8	1000	1000	
HSB/HC 86L	46000	192	17	22	925	565	105	48	1/8	1000	1000	
HSB/HC 63L	39500	164	16	20	725	445	109	41	1/12	1000	1000	
HSB/HC 47L	24300	101	14	430	470	107	23	1/25	1000	1000	1000	
HSB/HC 33L	22000	92	11	13	265	490	109	15	1/25	1000	1000	
HSB/HC 24L	14400	60	11	13	265	490	109	15	1/25	1000	1000	
HSB/HC 18L	12000	51	9	12	230	425	108	12	1/60	1000	1000	
Debit vertical												
V/VN 247L	733000	3055	45	45	68	12940	2450	115	759	2	1140	
V/VN 610L	470000	1958	44	52	66	97	2445	97	485	1/12	1140	
V/VN 500L	385000	1604	45	54	68	11000	2670	94	400	1/12	1140	
V/VN 385L	296000	1233	36	43	54	8140	1970	95	307	1	1140	
V/VN 333L	256000	1067	36	45	54	8140	2300	100	265	3/4	1140	
V/VN 279L	215000	896	36	42	48	5790	2030	96	197	1/2	1075	
V/VN 247L	190000	792	32	42	48	3830	1845	102	169	1/3	1075	
V/VN 212L	163000	679	27	36	41	3710	1790	99	154	1/3	1075	
V/VN 193L	149000	621	27	36	41	3400	1640	96	132	1/3	1075	
V/VN 161L	127000	529	26	35	39	2860	1380	95	106	106	106	
V/VN 193L	103000	429	23	29	26	1760	1180	99	73	1/15	1050	
V/VN 78L	71000	296	19	26	29	1740	1070	95	65	1/15	1050	
V/VN 95L	62000	258	19	26	29	1740	1070	95	65	1/15	1050	
V/VN 144L	44000	183	16	22	24	16	1190	96	45	1/30	1050	
V/VN 42L	33000	138	13	17	20	13	960	835	34	1/30	1050	
Debit vertical												
PT/PTN 610L	470000	1958	22	154	2400	2445	97	486	1/12	1140		
Power throw™												
V 952L	733000	3055	45	45	68	12940	2450	115	759	2	1140	
V/VN 610L	470000	1958	44	52	66	97	2445	97	485	1/12	1140	
V/VN 500L	385000	1604	45	54	68	11000	2670	94	400	1/12	1140	
V/VN 385L	296000	1233	36	43	54	8140	1970	95	307	1	1140	
V/VN 279L	215000	896	36	42	48	5790	2030	96	197	1/2	1075	
V/VN 247L	190000	792	32	42	48	3830	1845	102	169	1/3	1075	
V/VN 193L	149000	621	27	36	41	3710	1790	99	154	1/3	1075	
V/VN 161L	127000	529	26	35	39	2860	1380	95	106	106	106	
V/VN 193L	103000	429	23	29	26	1760	1180	99	73	1/15	1050	
V/VN 78L	71000	296	19	26	29	1740	1070	95	65	1/15	1050	
V/VN 95L	62000	258	19	26	29	1740	1070	95	65	1/15	1050	
V/VN 144L	44000	183	16	22	24	16	1190	96	45	1/30	1050	
V/VN 42L	33000	138	13	17	20	13	960	835	34	1/30	1050	

Tableau 9.1 - Performances des modèles à basee température de sortie en conditions normales :

Vapeur à 2 lbs. et air froid à 60°F Moteur à la vitesse rapide

Type	Modèle N°	Btu/h	PI ²	EDR	Données air						Moteur	
					Hauter montage (pi)	maximum de montage (pi)	① Air entraînement de sortie (pi/min)	② montage (pi) de sortie (pi/min)	Temp. air finale	Condensat	lb/h	
HSB/HC 18L	15900	66	9	20	364	655	100	16	1/60	1550	1550	
HSB/HC 24L	19300	80	11	21	435	795	100	20	1/25	1550	1550	
HSB/HC 33L	29500	123	14	24	695	745	99	31	1/25	1550	1550	
HSB/HC 47L	32000	133	14	32	855	910	94	33	1/12	1550	1550	
HSB/HC 63L	52500	16	16	435	910	99	31	1/25	1550	1550	1550	
HSB/HC 86L	61500	176	16	33	1170	710	101	54	1/12	1550	1550	
HSB/HC 108L	86500	360	17	36	1510	910	97	64	1/8	1625	1625	
HSB/HC 121L	88000	367	19	29	2070	800	98	90	1/8	1625	1625	
HSB/HC 165L	143000	596	19	26	1760	1180	99	73	1/15	1050	1050	
HSB/HC 258L	190000	219	19	26	1740	1070	95	65	1/15	1050	1050	
HSB/HC 290L	207000	792	22	51	4655	750	98	197	1/2	1075	1075	
HSB/HC 340L	255000	863	23	53	5040	805	94	214	1/2	1075	1075	
HSB/HC 47L	207000	792	22	51	45	3480	930	97	148	1/3	1075	
HSB/HC 165L	143000	367	18	29	2070	800	98	90	1/8	1625	1625	
HSB/HC 121L	88000	360	19	36	1510	910	97	64	1/8	1625	1625	
HSB/HC 108L	86500	256	17	36	1170	710	101	54	1/12	1550	1550	
HSB/HC 63L	52500	16	16	435	910	99	31	1/25	1550	1550	1550	
HSB/HC 47L	24300	101	14	24	695	745	99	31	1/25	1550	1550	
HSB/HC 33L	22000	113	14	32	855	910	94	33	1/12	1550	1550	
HSB/HC 24L	19300	80	11	21	435	795	100	20	1/25	1550	1550	
HSB/HC 18L	15900											

Type	Modèle N°	Btu/h	Pi ²	EDR	Hauter	maximum de montagne (pi)	maximum de montagne (pi) ①	Air entrant de temp.	Vitesse de finale air sortie ②	Condensat	lb/h	Hp	Vitesse approx. (tr/min)	Moteur
Vapeur à 2 lbs. et air froid à 60°F Moteur à la vitesse rapide														
HSB/HC 18	18000	75	8	17	340	625	107	19	107	19	1550	1/60	1550	1550
HSB/HC 24	24000	100	9	18	370	695	119	25	1/25	1550	1/25	1550	1550	1550
HSB/HC 47	47000	138	10	21	630	690	108	34	1/25	1550	1/25	1550	1550	1550
HSB/HC 63	63000	1263	14	29	1120	690	111	65	1/12	1625	1/12	1625	1625	1625
HSB/HC 86	86000	358	15	31	1340	835	118	89	1/8	1625	1/8	1625	1625	1625
HSB/HC 108	108000	450	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 121	121000	504	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 165	165000	688	19	40	3240	880	106	171	1/3	1075	1/5	1075	1075	1075
HSB/HC 193	193000	688	19	40	3240	880	106	171	1/3	1075	1/3	1075	1075	1075
HSB/HC 258	258000	1075	19	44	4560	750	111	200	1/2	1075	1/2	1075	1075	1075
HSB/HC 290	290000	1208	20	46	4590	765	117	300	1/2	1075	1/2	1075	1075	1075
PT/PTN 333	333000	1388	17	110	5980	2165	116	345	3/4	1140	1/2	1075	1075	1075
PT/PTN 385	385000	1604	20	27	18	2660	1285	112	144	1/6	1075	1/6	1075	1075
PT/PTN 500	500000	2083	30	30	20	2945	1420	115	167	1/3	1075	1/3	1075	1075
VWN 193	193000	671	20	27	18	2660	1285	112	144	1/5	1050	1/5	1050	1050
VWN 161	161000	579	18	24	27	18	1665	1120	118	98	1/15	1/15	1050	1050
VWN 139	139000	396	15	20	23	15	1590	1065	109	81	1/30	1/30	1050	1050
VWN 78	78000	325	15	20	23	15	1155	1005	111	61	1/30	1/30	1050	1050
VWN 59	59000	246	14	19	21	14	950	825	103	43	1/30	1/30	1050	1050
VWN 42	42000	175	11	15	17	11	950	825	103	43	1/30	1/30	1050	1050
VWN 212	212000	883	22	30	33	22	3610	1740	120	219	1/3	1075	1075	1075
VWN 193	193000	804	22	30	33	22	3500	1690	116	200	1/3	1075	1075	1075
VWN 161	161000	671	20	27	18	2660	1285	112	144	1/6	1075	1/6	1075	1075
VWN 139	139000	579	18	24	27	18	1665	1120	118	98	1/15	1/15	1050	1050
VWN 95	95000	396	15	20	23	15	1590	1065	109	81	1/15	1/15	1050	1050
VWN 78	78000	325	15	20	23	15	1155	1005	111	61	1/30	1/30	1050	1050
VWN 59	59000	246	14	19	21	14	950	825	103	43	1/30	1/30	1050	1050
VWN 42	42000	175	11	15	17	11	950	825	103	43	1/30	1/30	1050	1050
PT 952	952000	3967	21	145	145	12170	2321	139	985	2	1140			
VWN 610	610000	2542	36	43	54	36	11750	2315	112	631	1 1/2	1140		
VWN 500	500000	2083	37	44	56	37	10390	2520	108	517	1 1/2	1140		
VWN 385	385000	1604	30	36	45	30	7680	1860	110	398	1	1140		
VWN 333	333000	1388	30	37	45	30	5980	2165	111	289	1/2	1075		
VWN 279	279000	1163	30	37	45	30	5460	1910	111	256	1/2	1075		
VWN 247	247000	1029	26	34	39	26	4820	1740	120	219	1/3	1075		
VWN 212	212000	883	22	30	33	22	3610	1740	120	219	1/3	1075		
VWN 193	193000	804	22	30	33	22	3500	1690	116	200	1/3	1075		
VWN 161	161000	671	20	27	18	2660	1285	112	144	1/6	1075			
VWN 139	139000	579	18	24	27	18	1665	1120	118	98	1/15	1/15	1050	
VWN 95	95000	396	15	20	23	15	1590	1065	109	81	1/15	1/15	1050	
VWN 78	78000	325	15	20	23	15	1155	1005	111	61	1/30	1/30	1050	
VWN 59	59000	246	14	19	21	14	950	825	103	43	1/30	1/30	1050	
VWN 42	42000	175	11	15	17	11	950	825	103	43	1/30	1/30	1050	
PT 952	952000	3967	20	46	5130	735	120	352	1/2	1075				
VWN 610	610000	2542	20	40	140	11750	2315	112	631	1 1/2	1140			
PT/PTN 500	500000	2083	18	115	7680	1860	110	398	1	1140				
PT/PTN 385	385000	1604	17	110	5980	2165	116	345	3/4	1140				
PT/PTN 279	279000	1163	16	100	5460	2165	111	289	1/2	1075				
VWN 42	42000	175	11	15	17	11	950	825	103	43	1/30	1/30	1050	
VWN 212	212000	883	22	30	33	22	3610	1740	120	219	1/3	1075		
VWN 193	193000	804	22	30	33	22	3500	1690	116	200	1/3	1075		
VWN 161	161000	671	20	27	18	2660	1285	112	144	1/6	1075			
VWN 139	139000	579	18	24	27	18	1665	1120	118	98	1/15	1/15	1050	
VWN 95	95000	396	15	20	23	15	1590	1065	109	81	1/15	1/15	1050	
VWN 78	78000	325	15	20	23	15	1155	1005	111	61	1/30	1/30	1050	
VWN 59	59000	246	14	19	21	14	950	825	103	43	1/30	1/30	1050	
VWN 42	42000	175	11	15	17	11	950	825	103	43	1/30	1/30	1050	
HSB/HC 18	18000	75	8	17	340	625	107	19	19	1550	1/60	1550	1550	1550
HSB/HC 24	24000	100	9	18	370	695	119	25	1/25	1550	1/25	1550	1550	1550
HSB/HC 47	47000	138	10	21	630	690	108	34	1/25	1550	1/25	1550	1550	1550
HSB/HC 63	63000	1263	14	29	1120	690	111	65	1/12	1625	1/12	1625	1625	1625
HSB/HC 86	86000	358	15	31	1340	835	118	89	1/8	1625	1/8	1625	1625	1625
HSB/HC 108	108000	450	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 121	121000	504	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 165	165000	688	19	40	3240	880	106	171	1/3	1075	1/5	1075	1075	1075
HSB/HC 193	193000	688	19	40	3240	880	106	171	1/3	1075	1/3	1075	1075	1075
HSB/HC 258	258000	1075	19	44	4560	750	111	200	1/2	1075	1/2	1075	1075	1075
HSB/HC 290	290000	1208	20	46	4590	765	117	300	1/2	1075	1/2	1075	1075	1075
PT/PTN 333	333000	1388	17	110	5980	2165	116	289	1/2	1075				
PT/PTN 385	385000	1604	17	110	5980	2165	111	289	1/2	1075				
VWN 193	193000	804	20	46	4590	765	117	300	1/2	1075				
VWN 161	161000	671	20	46	4590	765	117	300	1/2	1075				
VWN 139	139000	579	18	44	4560	750	111	200	1/2	1075				
VWN 95	95000	396	15	40	3240	880	106	171	1/3	1075				
VWN 78	78000	325	15	40	3240	880	106	171	1/3	1075				
VWN 59	59000	246	14	49	340	625	107	19	19	1550	1/60	1550	1550	1550
VWN 42	42000	175	11	15	17	340	625	107	19	19	1/60	1550	1550	1550
HSB/HC 18	18000	75	8	17	340	625	107	19	19	1550	1/60	1550	1550	1550
HSB/HC 24	24000	100	9	18	370	695	119	25	1/25	1550	1/25	1550	1550	1550
HSB/HC 47	47000	138	10	21	630	690	108	34	1/25	1550	1/25	1550	1550	1550
HSB/HC 63	63000	1263	14	29	1120	690	111	65	1/12	1625	1/12	1625	1625	1625
HSB/HC 86	86000	358	15	31	1340	835	118	89	1/8	1625	1/8	1625	1625	1625
HSB/HC 108	108000	450	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 121	121000	504	17	31	2010	790	109	112	1/8	1625	1/8	1625	1625	1625
HSB/HC 165	1													

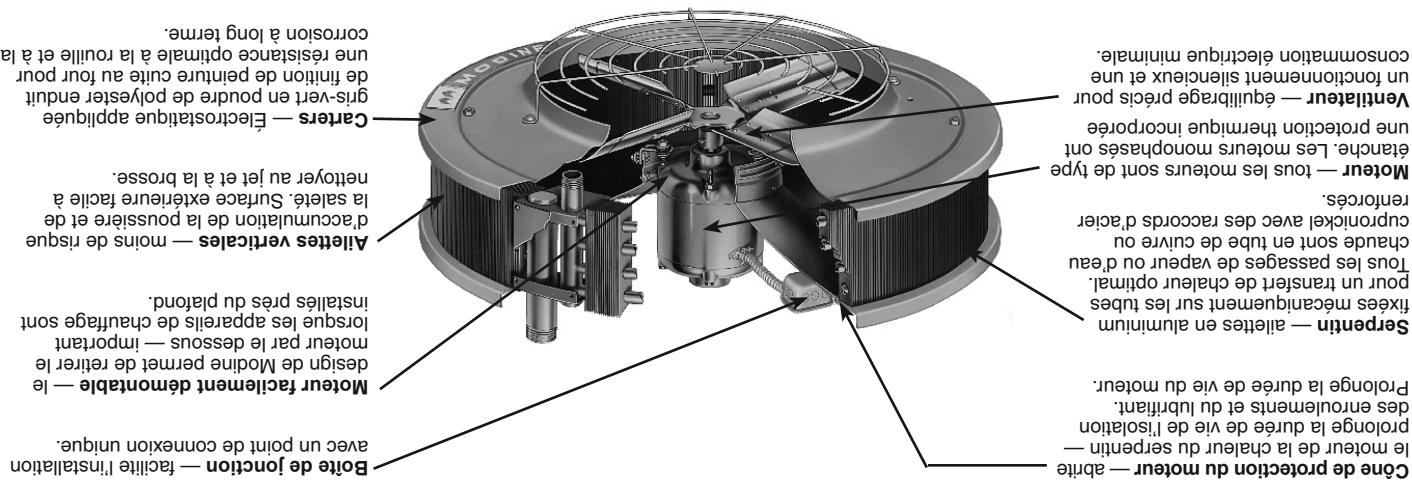


Figure 7.4 - Coupe d'un appareil à débit vertical



Figure 7.3 - Appareil à débit horizontal standard avec grille de protection du ventilateur

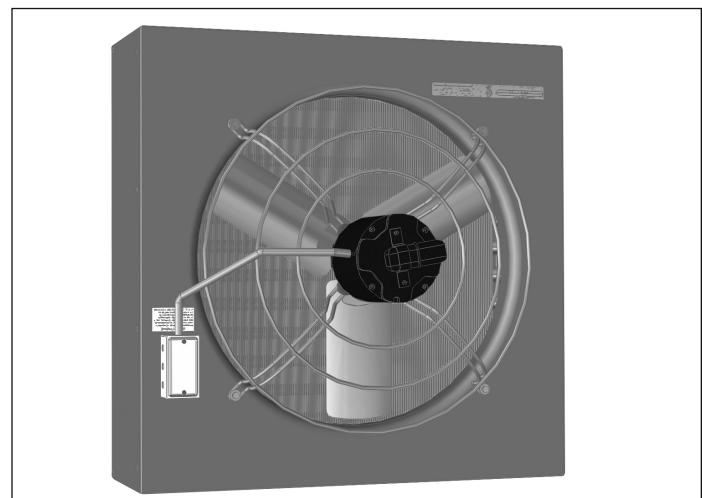


Figure 7.2 - Boîte de jonction standard pour appareil à débit horizontal

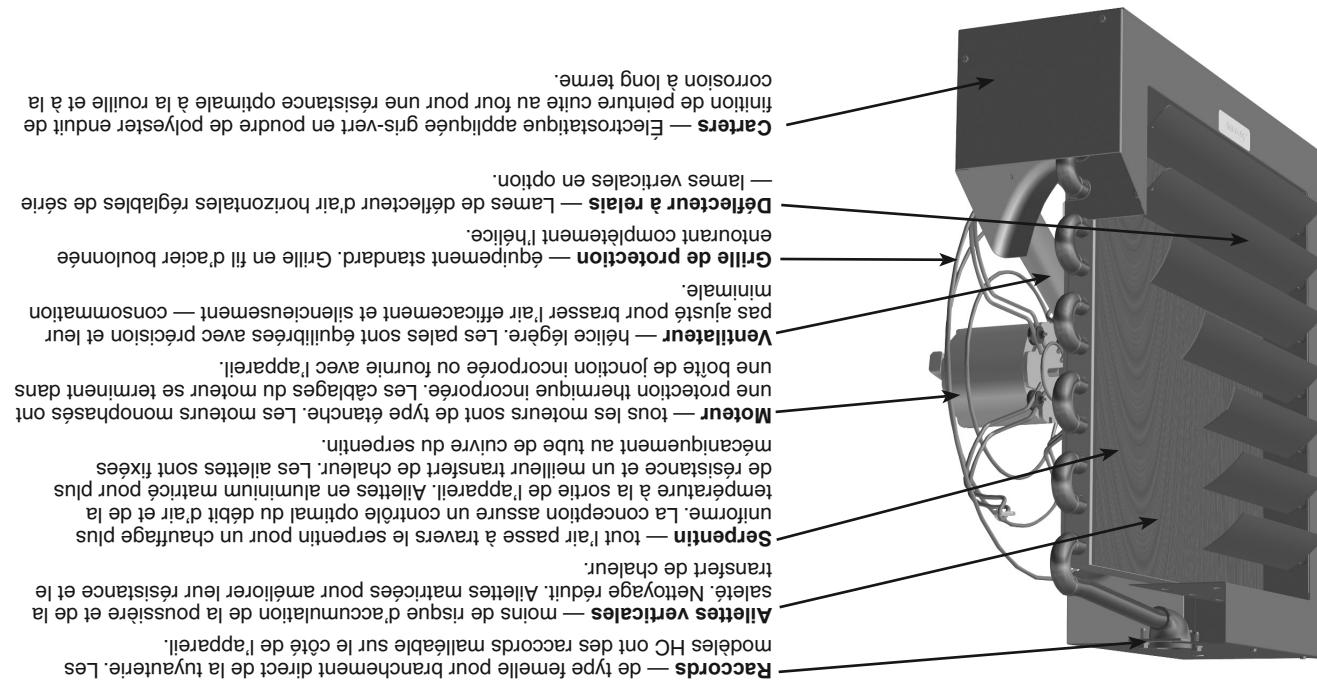


Figure 7.1 - Coupe d'un appareil à débit horizontal

Caractéristiques générales

18099-4

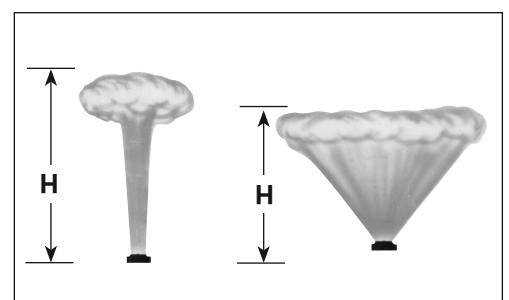


Figure 4.6 - Débit tronconique vertical

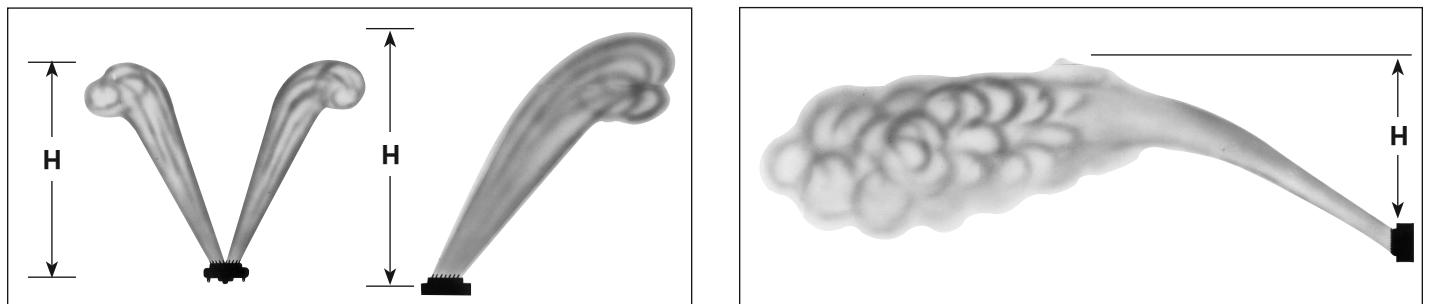


Figure 4.4 - Débit vertical orienté ou divisé par les volets

Ces facteurs sont des multiplicateurs de correction des hauteurs de montagne maximum à utiliser si la pression de vapeur est différente de 2 lbf/in². Ces facteurs moyenne autre que 220°F.

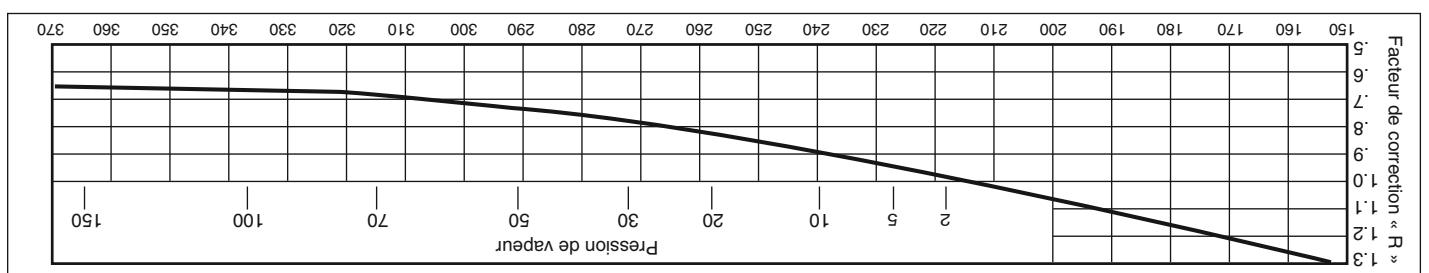


Tableau 4.2 - Fauteurs de correction pour les hauteur de montage maximum

② **Modèles VN et VT** : ces modèles sont équipés de turbines en cuivre. Les matériaux utilisés pour la construction des turbines sont le cuivre et l'acier inoxydable. Ces matériaux sont résistants à la corrosion et ont une bonne conductivité thermique.

Type horizontal ①		« Power-Throw » ②		Type vertical avec deflecteurs ③		Sans deflecteur		Jet continue		Diffracteur tronconique		Volute			
Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)	Modèle N°	Hauter (pi)		
HSB/HC 18	8	9	—	V/N 42 ②	11	13	15	17	8	9	13	15	—		
HSB/HC 24	9	11	—	V/N 59 ②	14	16	19	22	9	11	14	16	18		
HSB/HC 33	10	12	—	V/N 78 ②	15	19	20	26	11	14	17	22	HSB/HC 47		
HSB/HC 47	12	14	—	V/N 95 ②	15	19	20	26	11	14	17	22	HSB/HC 63		
HSB/HC 63	14	16	—	V/N 95 ②	15	19	20	26	11	14	17	22	HSB/HC 86		
HSB/HC 86	15	17	—	V/N 139 ②	18	23	24	31	13	17	21	26	HSB/HC 108		
HSB/HC 108	17	19	—	V/N 161 ②	20	26	27	35	14	18	23	30	HSB/HC 121		
HSB/HC 121	16	18	—	V/N 193 ②	22	27	30	36	16	19	25	31	HSB/HC 165		
HSB/HC 165	19	21	—	V/N 247 ②	26	32	34	42	17	21	30	37	HSB/HC 193		
HSB/HC 193	18	—	—	V/N 279 ②	30	36	37	45	18	22	35	41	HSB/HC 258		
HSB/HC 258	19	22	PT/PTN 333 ②	16	—	V/N 329 ②	30	36	37	45	17	20	35	HSB/HC 290	
HSB/HC 290	20	23	PT/PTN 385 ②	17	—	V/N 385 ②	30	36	37	45	17	20	35	HSB/HC 340	
HSB/HC 340	20	23	PT/PTN 500 ②	18	—	V/N 500 ②	37	36	43	44	19	24	42	—	
—	—	—	—	V/N 610 ②	20	22	V/N 610 ②	36	43	44	43	19	24	41	50
—	—	—	—	V/N 952 ②	21	—	V/N 952 ②	37	45	—	—	—	—	—	

Tableau 4.1 - Hauteurs de montage maximum

MONTAGE DE L'APPAREIL

Le numéro de modèle de chaque unité indique sa capacité nominale en milliers de BTU/hr pour une pression de vapeur à 2 lbs. et de l'air froid à 60°F. Le modèle HSB 63 a une capacité de 63000 BTU/hr pour de la vapeur à 2 lbs. et de l'air froid à 60°F. Par exemple 2 lbs. et une température d'environ de l'air de 60°F. Pour déterminer le nombre de modèles de vapeur nécessaires pour chauffer un bâtiment, il faut diviser la puissance totale nécessaire par la puissance nominale de chaque appareil.

Sur les appareils de type vertical il ne faut pas relier la grille de protection du ventilateur. Utiliser la prudence pour ne pas trop serrer les raccords.

ATTENTION

Les unités de chauffage sont homologuées par l'Association canadienne de normalisation et les normes CSA. Ces appareils sont calibrés pour un service continu. Ils peuvent tourner ainsi jusqu'à une température ambiante maximum de 104°F (40°C). Les moteurs sont possibles de cerner les unités standard et les unités de chauffage de laisser de l'espace de 32°F pour une homologation T3B limitant la température en présence de poussière de céréales. Code national des installations de l'électricité exige une distance de séparation entre les appareils et les surfaces de 400°F. Les tubes en cuivre sont garantis pour des pressions de vapor et d'eau de 150 PSIG et/ou des températures de 375°F; Les enroulements de cuivre sont garantis pour des pressions de vapor et d'eau de 250 PSIG et/ou des températures de 400°F. Association canadienne de normalisation (CSA) exige que les unités standard soient garantis pour des températures de vapor et d'eau de 250 PSIG et/ou des températures de 400°F. Les appareils sont garantis pour des températures de 375°F; Les appareils sont garantis pour des températures de 400°F; Les instructions d'installation et d'entretien contenues dans ce manuel s'appliquent à trois types d'appareils de chauffage à la vapeur ou à l'eau chaude qui devraient être installés selon leurs applications spécifiques de chauffage au plafond de façon à assurer le meilleur rendement possible.

Renseignements généraux



Appareils de chauffage à la vapeur et à l'eau chaude MANUEL D'INSTALLATION ET D'ENTRETIEN

1. L'appareil doit être inspecté à la livraison. Signaler immédiatement tout dommage au transporteur et aviser le représentant de votre distributeur local.
2. Vérifier la plaque signalétique au point d'installation. Caractéristiques de l'appareil correspondant à l'installation électrique disponibles pour déterminer si les spécifications sont correctes.
3. À la description du produit qu'il est conforme à la réglementation applicable pour vérifier qu'il est conforme à la description du produit commandé (y compris aux caractéristiques de l'appareil correspondant à l'installation).

Inspection à la réception

IMPORTANT

Ce manuel est spécialement destiné à une personne d'entretien. Toutes les opérations d'installation et d'entretien doivent être effectuées à une entreprise qualifiée.

Modèles PT/PTN Modèles V/VN

Debit vertical « Power-throw »




Modèle HSB Modèle HC

Debit horizontal Entrée et sortie en haut et en bas