

Data Sheet

ABN A5 Actuator for AB-QM, ON/OFF

Application



The ABN A5 on/off thermal actuator has been specifically designed for use with AB-QM valves DN10-32/½-1¼ inch in heating and cooling applications.

Actuator convincing features are:

- · Stroke 5.0 mm
- Available as normally closed (NC) or normally open (NO)
- Power consumption 1/1.2 W
- Plug-in cable
- Simple snap-on installation
- IP54 in any installation position
- First-Open function
- · Compact size, small dimensions
- All round function indicator
- · Noiseless and maintenance-free
- Certified by TÜV

The actuator can be controlled with an on/off or PWM controller which is provided either by a room thermostat or by a central direct digital control (DDC) system.

Function

The actuator mechanism of the ABN A5 actuator uses a positive temperature coefficient (PTC) resistor heated wax element and a compression spring. The wax element is heated by applying the operating voltage and moves the integrated piston. The force generated by this movement is transferred to the piston, thus opening or closing the valve.

First open function (for NC versions only)

In its delivery condition, the ABN A5 is kept open when de-energized due to the first open function (filling). This enables heating/cooling operation during the carcass construction phase even when the electric wiring is not yet complete. During the later electrical start-up, the first open function is unlocked by applying the operating voltage for more than 6 minutes and the ABN A5 will then be completely operable.

Version NC "normally closed" (valve closed)

In case of the normally closed version, the valve is opened steadily by the ram motion upon switching on the operating voltage and after expiry of the dead time.

After the operating voltage is cut and after expiry of the hold time, the valve is closed evenly by the closing force of the compression spring. The closing force of the actuator is matched to AB-QM DN10-32 valves and keeps the valve closed when de-energised.

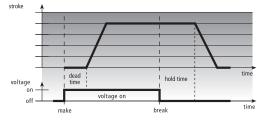


Fig. 1: Example of opening curve.

Version NC with end switch (082F1154)

The integrated micro switch is switched at a travel path of approx. 2 mm.

After the operating voltage is cut and after expiry of the hold time the valve is closed evenly by the closing force of the compression spring. The integrated switch is closed after an actuator travel of approx. 2 mm.

The closing force of the compression spring is matched to the closing force of commercially available valves and keeps the valve closed when de-energised.

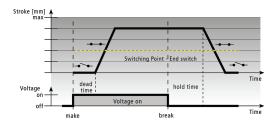


Fig. 2: Example of opening curve.

VDSKI202 © Danfoss 01/2014



Version NO "normally open"

In case of the normally open version, the valve is closed steadily by the ram motion upon switching on the operating voltage and after expiry of the dead time.

After the operating voltage is cut and after expiry of the hold time, the valve is opened evenly by the compressive force of the valve spring.

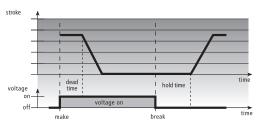
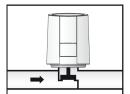


Fig. 3: Example of closing curve.

Function display

The function display of the ABN A5 (all-round display) allows identifying the operating condition (valve open or closed) at a glance.



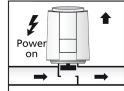
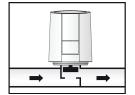


Fig. 4: Function display for NC versions extends proportionally with actuator opening from 0 mm to 5-6 mm.



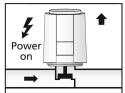


Fig. 5: Function display for NO versions extends only when valve is fully closed by approx. 0.5 mm.

Ordering

| Туре | Supply voltage | Normally Open/ Normally Closed | Cable | End Switch | Code no. |
|---|-------------------|-----------------------------------|--------------------------|---------------|----------|
| ABN A5, with VA 41 adapter, without cable | 24 VAC/DC | NC | Plug-in, not included | No | 082F1150 |
| | 24 VAC/DC | NO | Plug-in, not included | No | 082F1151 |
| | 230 VAC | NC | Plug-in, not included | No | 082F1152 |
| | 230 VAC | NO | Plug-in, not included | No | 082F1153 |
| | 24 VAC/DC | NC | Fixed, 1 m | Yes | 082F1154 |
| | 120 VAC | NC | Plug-in, not included | No | 082F1156 |
| | 120 VAC | NO | Plug-in, not included | No | 082F1157 |

Cables

Cables are not included and should be ordered separately (not valid version with end switch). It is

possible to select between different lengths and standard or halogen free material.

| Cables | Material | Code no. |
|-----------|----------------|----------|
| 1 meter | Standard (PVC) | 082F1144 |
| 5 metres | Standard (PVC) | 082F1145 |
| 10 metres | Standard (PVC) | 082F1146 |
| 1 meter | Halogen free | 082F1147 |
| 5 metres | Halogen free | 082F1148 |
| 10 metres | Halogen free | 082F1149 |




Data

| ABN A5 type | 24 V | 230 V | |
|-------------------------------------|--|--|--|
| Version | NC/NO | NC/NO | |
| Voltage | 24 V AC/DC, +20%10%, 0-60 Hz | 230 V AC, +10%10%, 50/60 Hz | |
| Max. inrush current | < 300 mA during max. 2 min. | < 550 mA during max. 200 ms | |
| Operating power | 1 W (5 mm), 1.2 W (6.5 mm) ¹⁾ | 1 W (5 mm), 1.2 W (6.5 mm) ¹⁾ | |
| Control voltage | On/Off | On/Off | |
| Actuator travel | 5 mm | 5 mm | |
| Actuating force | 100 N | 100 N | |
| Closing and opening time | ~4 min. | ~4 min. | |
| Fluid temperature | 0 - 100° C | 0 - 100° C | |
| Storage temperature | -25 to 65° C | -25 to 65° C | |
| Ambient temperature | 0 to 60° C | 0 to 60° C | |
| Degree/class of protection | IP54 ²⁾ /III safety extra-low voltage | IP54 ²⁾ /II | |
| CE conformity according to | EN60730, UL60730 | EN60730, UL60730 | |
| Housing/housing colour | Polyamid/White RAL9003 | Polyamid/White RAL9003 | |
| Connecting cable | 2 x 0.75 mm² PVC, or halogen free | 2 x 0.75 mm² PVC, or halogen free | |
| Adapter (included) | VA 41 | VA 41 | |
| Overvoltage resistance EN60730-1 | min. 2.5 kV | min. 2.5 kV | |
| Weight | 0.1 kg | 0.1 kg | |

¹⁾ Measured with precision reference instrument LMG95.

Connections

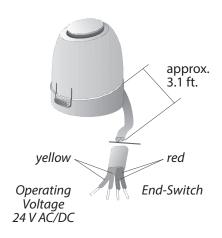

Cable connection of version with end switch 082F1154.

VDSKI202 © Danfoss 01/2014 3

²⁾ In all installation positions.


Data Sheet

ABN A5 Actuator for AB-QM, ON/OFF

Installation

Installation with valve adapter




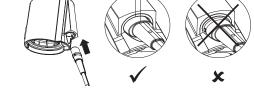

Screw the valve adapter manually onto the valve.

Connect cable and actuator.




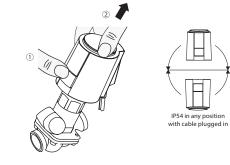


Place the actuator vertically on the valve adapter.

The actuator snaps onto the valve adapter with a "click" when pressed down vertically by hand.

Dimensions

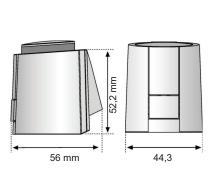

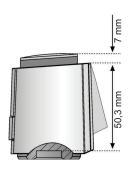

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.