

INSTRUCTIONS





PTC CRANKCASE HEATER INSTALLATION

PTC CRANKCASE HEATER INSTALLATION

1 - The kit contains :






2- Open the heat conductive paste tube

3- Put inside the past inside the heater well (press on the tube)



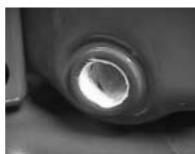

4- Insure a good paste distribution

5- Insert the PTC



6- Insert the PTC at the maximum

7- Insert the PTC lock ring (small diameter of conical ring ahead)





8- Push lock ring in the PTC block (until contact with PTC)



9- Result



Danfoss Commercial Compressors

BP 331 F-01603 Trévoux France Tél. 04 74 00 28 29 - + 33 4 74 00 28 29 Fax 04 74 00 52 44 - + 33 4 74 00 52 44 http://cc.danfoss.com