

⚠ WARNING

THESE INSTRUCTIONS ARE INTENDED TO GUIDE QUALIFIED SERVICE PERSONNEL IN REPLACING THE TXV. IT IS VITAL THAT STEPS INCLUDED IN THESE INSTRUCTIONS BE FOLLOWED FOR THE SAFE OPERATION OF THE EQUIPMENT.

PRODUCT MANUALS MUST BE READ AND UNDERSTOOD PRIOR TO THE SERVICE AND OPERATION OF EQUIPMENT. REMOVE ELECTRICAL POWER BEFORE SERVICING. FAILURE TO FOLLOW PRODUCT WARNINGS AND THESE INSTRUCTIONS CAN RESULT IN SERIOUS BODILY INJURY OR DEATH.

Use New Gaskets - Remove and discard the old gaskets. New gaskets are included in the envelope provided with this kit. Lubricate both sides of the new gaskets with refrigerant oil and place one gasket on the distributor and the other gasket on the liquid line connection fitting.

Strainer Replacement (Optional) - The strainer is included in the liquid line assembly. In the event it is necessary to replace the strainer, replace the old liquid line assembly with the new one included with the kit.

Apply Anti-Seize Compound – Apply the anti-seize compound included with this kit to the threads of the aluminum distributor. Do not allow anti-seize compound to enter inside the distributor.

Torque Requirements - Tighten the two liquid line connections to 20 ft.-lbs. Tighten the equalizer tube connection fitting to 4 ft.-lbs.

Caution: Read all instructions completely before starting the process. For further information contact your local distributor or service representative.