

# Thermostat Instruction Sheet

## TH-ET5 Single Stage Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

### TH-ET5 Specifications

**Range:** 35° to 75°F (2° to 24°C)

**Operation:** Single stage, high voltage, low voltage

**Electrical Rating:** 22 amp non-inductive, 24/277 VAC

**Contact Action:** Opens on rise

**Differential:** Heat approximately 2°F (17°C)


**Dimensions:** 4.75" x 2.75" x 2.75"

**Additional Features:** Rugged plastic construction, quick response, non-adjustable, bi-metal operative snap switch, UL Listed, and CSA Certified

### Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover onto base.

Figure 1 • TH-ET5 Thermostat

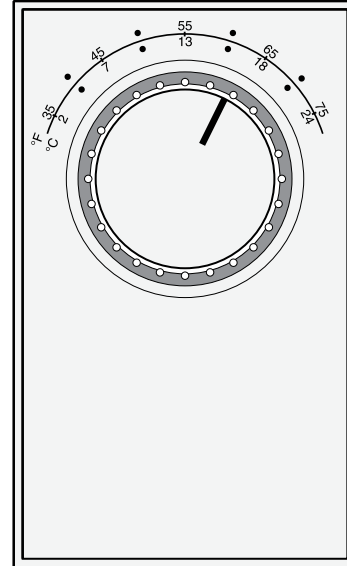

### WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • TH-ET5 Thermostat Wiring

Reference the heater specific installation and operation manual for field wiring.

