

Thermostat Instruction Sheet

TH-PSPLV Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

Parts List

TH-PSPLV Single Stage, Line Voltage, Programmable Thermostat

TH-PSPLV Specifications

Range: 45°-90°F

Differential: ±1°F Adjustable

Operation: Single stage; line voltage

Electrical Rating: 120-240 VAC; 16 Amp max; non-inductive

Contact Action: Opens on rise.

Dimensions: 4.7" x 2.7" x 2.4"

Additional Features: Separate 5-day (weekday) and 2-day (weekend) programming, program override with vacation hold, UL Listed.

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Feed wires through the rectangle slot (Figure 2).
- 6 Connect wires to terminal screws (Figure 2).
- 7 Confirm that wiring does not interfere with thermostat operation.
- 8 Replace the cover.

Figure 1 • TH-PSPLV Thermostat


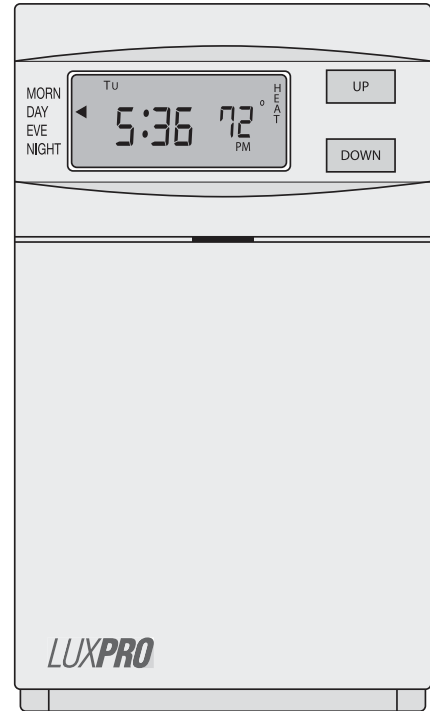


Figure 2 • TH-PSPLV Typical Field Wiring - 120V



L2 not used in 120V scenario.

Figure 3 • TH-PSPLV Typical Field Wiring - 220V

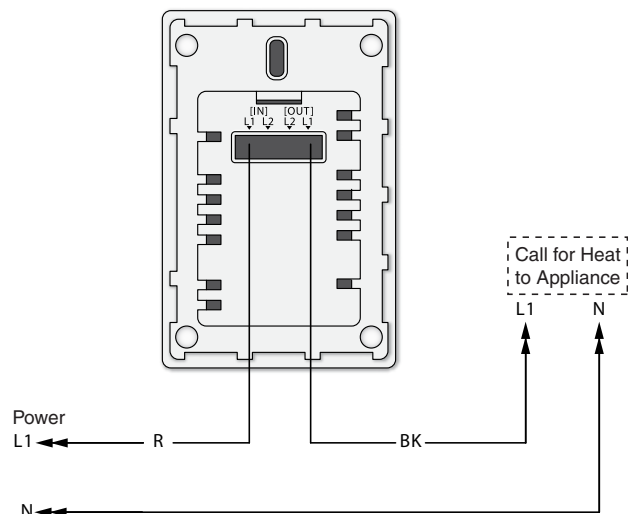