

Thermostat Instruction Sheet

TH-BR22 Programmable Thermostat

See thermostat manufacturer's instructions for specific information or requirements.

TH-BR22 Specifications

Range: 45°F to 90°F (7°C to 32°C)

Differential: Adjustable temperature differential (0.5°, 1°, or 2°)

Operation: Single or two stage operation

Electrical Rating: 24 VAC (18–30 VAC)

1 amp maximum load per terminal

4 amp total maximum load (all terminals)


Dimensions: 4.25"(108 mm) x 5.12"(130 mm) x 1"(25 mm)

Additional Features: Bright blue backlight, hardwire or battery powered, installer lock mode, and SpeedSet programming mode

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Replace the cover.
- 6 **NOTE:** Thermostat is pre-set for single stage. Refer to manufacturer's User Manual for instructions to select two stage.

Figure 2 • TH-BR22 Thermostat Wiring

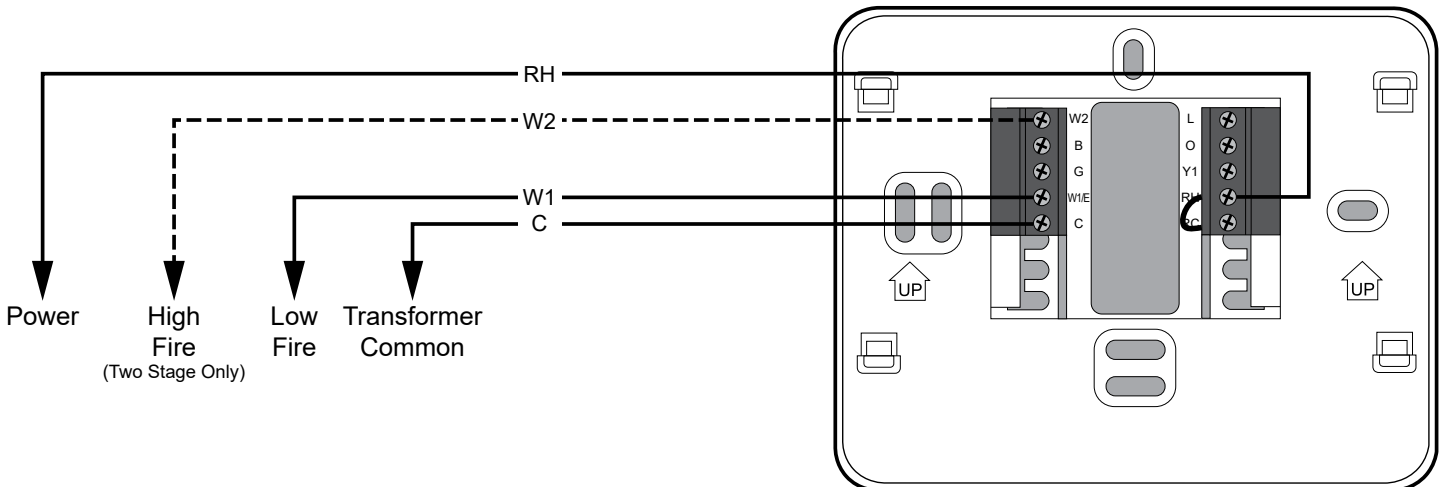

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 1 • TH-BR22 Thermostat

