

Thermostat Instruction Sheet

TH-PTLV Thermostat

See thermostat manufacturer's instructions for specific information and requirements.

Parts List

TH-PTLV Single Stage, Line Voltage, Programmable Thermostat

TH-PSPLV Specifications

Range: 40°–86°F

Accuracy: 1°F

Operation: Single stage; line voltage

Electrical Rating: 120 VAC; 16.7 Amp max; non-inductive

Contact Action: Opens on rise.

Dimensions: 4.9" x 2.8" x 0.9"

Additional Features: Separate 7-day programming, program override with vacation hold, early-start function, CSA & UL Listed.

Installation Instructions

- 1 Remove cover of thermostat from base.
- 2 Disconnect the power source.
- 3 Locate in an area with good air circulation (no outside walls).
- 4 Install the thermostat approximately 5 feet above floor level.
- 5 Connect wires to terminal screws.
- 6 Confirm that wiring does not interfere with thermostat operation.
- 7 Replace the cover.

Figure 3 • TH-PTLV Typical Field Wiring

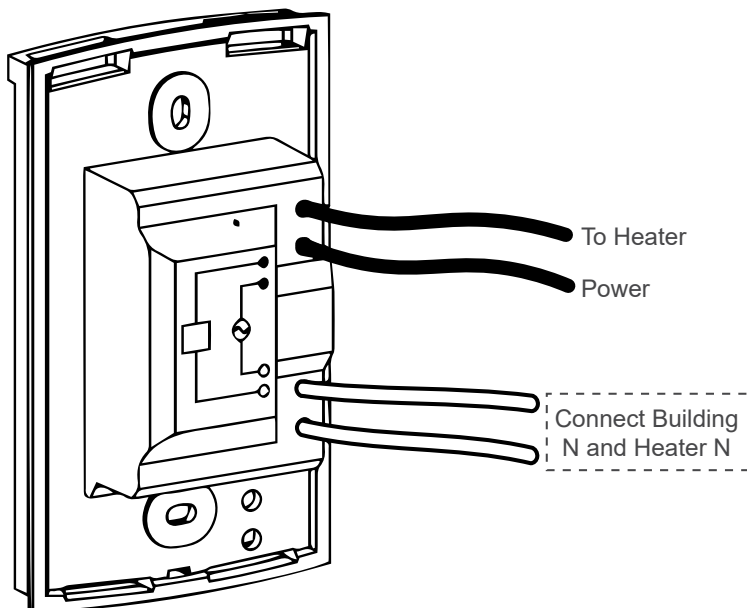


Figure 1 • TH-PTLV Thermostat



Figure 2 • TH-PTLV Operational Buttons

