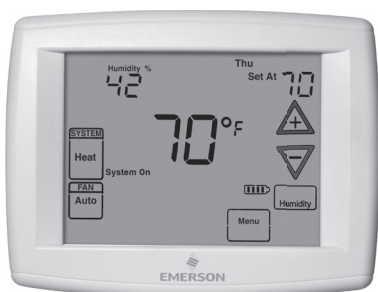


# BLUE 12" TOUCHSCREEN THERMOSTATS

White-Rodgers™

24 VOLT

**1F95-1291****1F95-1277**

**F145-1328**  
Indoor Remote Sensor



**F145-1378**  
Outdoor Remote Sensor

## BLUE 12" TOUCHSCREEN - UNIVERSAL AND SINGLE STAGE THERMOSTATS - 12 SQ. IN. DISPLAY

Blue Models Offer the Ultimate in Comfort, Features, Performance and Visibility

### FEATURES

- Universal models quickly configure for single stage, multi-stage or heat pump and heat pump dual fuel systems - programmable or non-programmable.
- **Humidity control** offers humidification/dehumidification.
- **Commercial** offers occupied damper or economizer control.
- **Staging** control for nearly all conventional and heat pump systems.
- **Single stage** model compatible with all single stage systems low voltage, 750 mV and 3-wire zone systems.
- Heat Pump dual fuel option eliminates the need for a fossil fuel kit.
- Automatic changeover option.
- Program fan options.
- Keypad lockout and setpoint temperature limit options.
- Indoor remote sensor for averaging option.
- Outdoor remote sensor option. Add to Universal models for outdoor temp reading or, on select models, dual fuel balance point and outdoor thermostat functions.
- Dual power – hardwire and/or battery or Tripower – hardwire and/or battery with system assist.

### SPECIFICATIONS

Electrical Rating:

Hardwire . . . . .	20-30 VAC, NEC Class II 50/60Hz
Battery Power . . . . .	mV to 30 VAC, NEC Class II, 50/60 Hz or DC
Terminal Load . . . . .	1.5 A per terminal,

2.5 A maximum all terminals combined

Setpoint Range . . . . . 45 to 99°F (7 to 37°C)

Rated Differentials:

	Fast	Med.	Slow
Heat (Single Stage/Multi-Stage) . . . . .	0.4°F	0.6°F	1.7°F
Cool (Single Stage/Multi-Stage) . . . . .	0.9°F	1.2°F	1.7°F
Heat Pump . . . . .	0.9°F	1.2°F	1.7°F
Emer. Heat . . . . .	0.6°F		1.7°F

Operating Ambient . . . . . 32 to +105°F (0 to +41°C)

Operating Humidity . . . . . 90% non-condensing max.

Shipping Temperature Range . . . . . -4 to +150°F (-20 to 65°C)

Dimension . . . . . 4<sup>9</sup>/<sub>16</sub>" H x 5<sup>13</sup>/<sub>16</sub>" W x 1<sup>13</sup>/<sub>16</sub>" D

### PARTS AND ACCESSORIES See end of thermostats section for additional parts and accessories

- F145-1328 — Indoor remote sensor. See page 33
- F145-1378 — Outdoor remote sensor. See page 33
- F61-2600 — Wallplate 8<sup>1</sup>/<sub>8</sub>" W x 5<sup>3</sup>/<sub>8</sub>" H
- F61-2634 — Wallplate 6<sup>1</sup>/<sub>2</sub>" W x 5" H (or order F61-2648 – 6 pack of F61-2634)
- F29-0198 — Locking Thermostat Guard - Clear Plastic
- F29-0220 — Locking Thermostat Guard - Metal, Solid Base
- Additional Thermostat Guards — see pages 34–35 for quick selection options





**F145-1328**  
**Indoor Remote Sensor**



**F145-1378**  
**Outdoor Remote Sensor**

**WIRED REMOTE SENSORS FOR 24V THERMOSTATS**  
Indoor and Outdoor Sensors for Emerson Blue Digital Thermostats

**FEATURES**

- Digital signal output provides superior temperature control, even over long wire runs.
- No temperature variance caused by wire resistance.
- Perfect for securing the thermostat in one area or room while sensing temperature in the conditioned space.

**SPECIFICATIONS**

Operating Range (based on thermostat range)  
 Indoor Models . . . . . 40 to 99°F  
 Outdoor Models . . . . . -40 to 140°F  
 Operating Humidity Range . . . . . 0 to 90% RH (non-condensing)  
 Maximum Distance from Thermostat . . . . . 300'  
 Recommended Wire . . . . . 20 gauge, 3-conductor cable

**TECHNICAL HELP** See end of thermostats section for additional parts and accessories

Remote Sensor Wiring / Troubleshooting . . . . . See page 167–170



**INDOOR SENSOR**

Model Number	Color	Dimensions	Application
F145-1328	Classic White	2 1/8" x 3 1/2" x 3/4"	Compatible with all Emerson Emerson / White-Rodgers Thermostats with Indoor Remote Sensor

**OUTDOOR SENSOR**

Model Number	Color	Dimensions	Application
F145-1378	Classic White	2 1/8" x 3 1/2" x 3/4"	Compatible with all Emerson Emerson / White-Rodgers Thermostats with Outdoor Remote Sensing. 12 ft. sensor lead

**CONNECTION CROSS REFERENCE - THERMOSTATS & SENSORS**


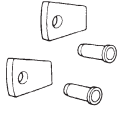
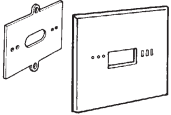
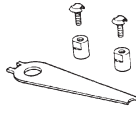
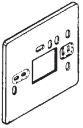

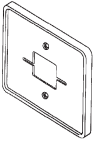
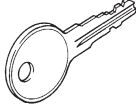
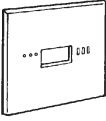









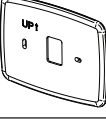
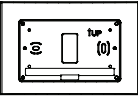
Old Terminal (Thermostat or Remote)	New Terminal (Thermostat or Remote)
S1	+
S2	S
S3	-


**CONTRACTOR TIP:** REMOTE SENSOR TROUBLESHOOTING, WIRING AND AVERAGING INFORMATION IS ON PAGES 167–170.

**REMOTE TERMINAL DESIGNATIONS**

Model Number	Terminal Designation Cross Reference		
F145-1328 , F145-1378	+	S	-
	Sensor Positive	Sensor Return Signal	Sensor Negative

## THERMOSTAT ACCESSORIES

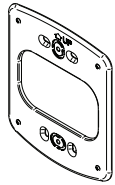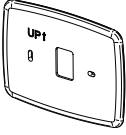
Item Number	Model Number	Description	Item Number	Model Number	Description
	<b>F16-8101</b>	Cover assembly for 1F78-151 programmable.		<b>F75-0176</b>	Temperature knob locking or limiting kit for 1A65-641, 1A65W-641, 1A66-641 and 1A66W-641.
	<b>F61-2301</b>	Wallplate for low voltage standard thermostats (5 <sup>5</sup> / <sub>8</sub> " H x 5 <sup>3</sup> / <sub>4</sub> " W). Beige. Includes adapter for mounting to vertical junction box. Same as F61-2068 except white.		<b>F92-0563</b>	Temperature lever locking or temperature limiting kit for low voltage thermostats except 1C70, 1C20 and 1E26 series.
	<b>F61-2300</b>	Wallplate for all 1F90 series thermostats (except Blue models), (7 <sup>1</sup> / <sub>4</sub> " W x 5 <sup>1</sup> / <sub>2</sub> " H), Classic White color, includes adapter plate for mounting to horizontal or vertical junction box.		<b>F145-1082</b>	Replacement door 1F90/1F97 (-51, -60, -71) 1F91-71, 1F92-71, 1F94-71, 1F95-71.
	<b>F61-2499</b>	Wallplate for 1C20-xxx/1C26-xxx (5 <sup>5</sup> / <sub>8</sub> " H x 5" W)		<b>F145-0999</b>	Replacement key for all thermostat guards, F29 series.
	<b>F61-2500</b>	Wallplate for all 1F80 series thermostats (except Blue models), (7 <sup>5</sup> / <sub>8</sub> " W x 4 <sup>3</sup> / <sub>4</sub> " H), Classic White color, includes adapter plate for mounting to horizontal or vertical junction box.		<b>F145-1328</b>	90 Series Wired Indoor Remote Sensor. Replaces all previous Indoor Remote Sensors.
	<b>F61-2510</b>	Wallplate for all 1F70 series thermostats, 6 <sup>1</sup> / <sub>2</sub> " W x 4 <sup>1</sup> / <sub>2</sub> " H, Classic White color, Includes adapter plate for mounting to horizontal or vertical junction box.		<b>F145-1378</b>	90 Series Wired Outdoor Temperature Sensor, For Models with Outdoor Sensor Option.
	<b>F61-2550</b>	Wallplate for all 1F70 series thermostats, 6 <sup>1</sup> / <sub>2</sub> " W x 4 <sup>1</sup> / <sub>2</sub> " H, Classic White color, does not include adapter plate for mounting to horizontal or vertical junction box.		<b>F61-2648</b>	Same as F61-2634 except 6 pack.
	<b>F61-2593</b>	Wallplate for 1D70 or 1E70 series thermostats, 4 <sup>1</sup> / <sub>2</sub> " W x 6 <sup>19</sup> / <sub>32</sub> " H, Classic White color.		<b>F61-2642</b>	Universal adapter plate for 1E65-144
	<b>F61-2600</b>	Wallplate for 90 series Blue Touchscreen thermostats, 8 <sup>1</sup> / <sub>8</sub> " W x 5 <sup>3</sup> / <sub>8</sub> " H, Classic White color, for use with or without horizontal junction box.		<b>F145RF-1600</b>	Wireless remote sensor for 1F98EZ-1621
	<b>F61-2634</b>	Wallplate for 90 and 80 series Blue thermostats, 6 <sup>1</sup> / <sub>2</sub> " W x 5" H, Classic White color, for use with or without horizontal junction box.			
	<b>F61-2663</b>	Wallplate for Sensi Wi-Fi Thermostat, white, 6 <sup>3</sup> / <sub>4</sub> " W x 4 <sup>1</sup> / <sub>2</sub> " H for use with or without horizontal junction box			

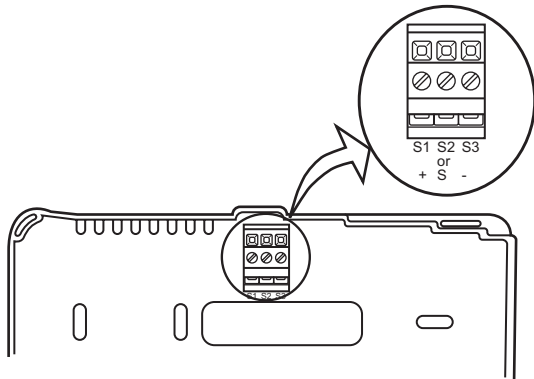


Thermostat Subbase

**Note:** When using shielded cable, connect shield of 18 or 20 gauge 3 connector cable to - or S3 on thermostat subbase.

Remote Sensor

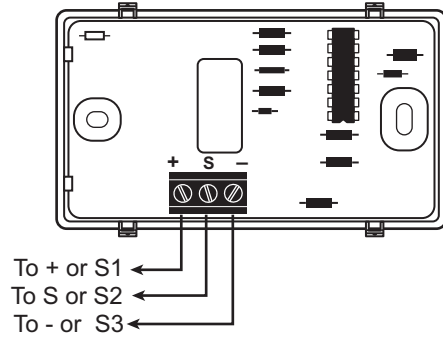



Single Stage Thermostat Remote Sensor Wiring (F145-1328)

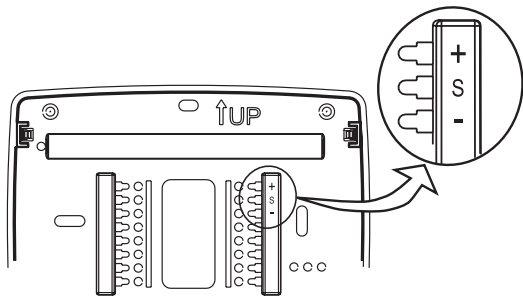


Thermostat Subbase

**Note:** When using shielded cable, connect shield of 18 or 20 gauge 3 connector cable to - or S3 on thermostat subbase.





Remote Sensor

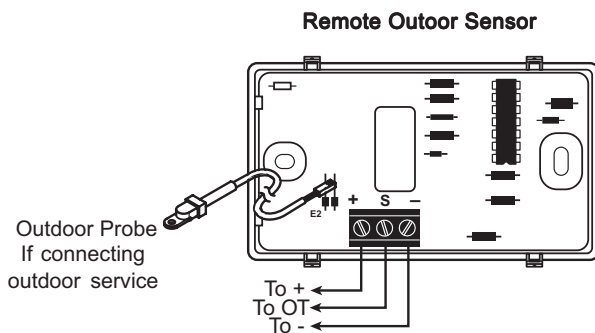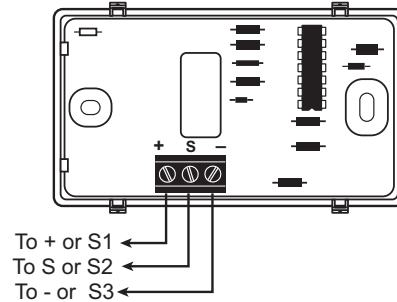


Staging Multi-Stage or Heat Pump Touchscreen Thermostat (1F95-1277) Indoor/Outdoor Remote Sensor Wiring (F145-1328/F145-1378)

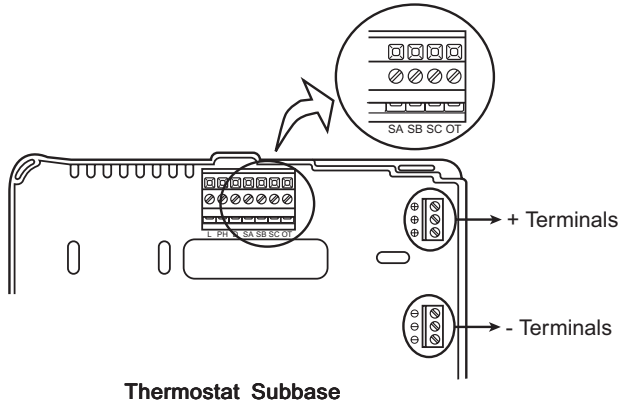



**Note:** When using shielded cable, connect shield of 18 or 20 gauge 3 connector cable to - or S3 on thermostat subbase.

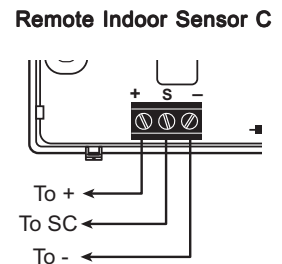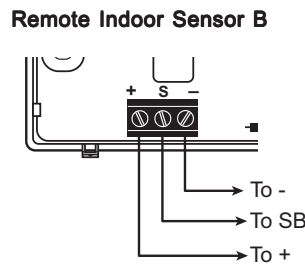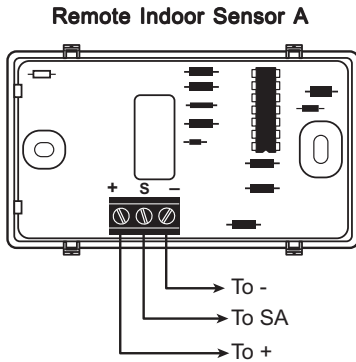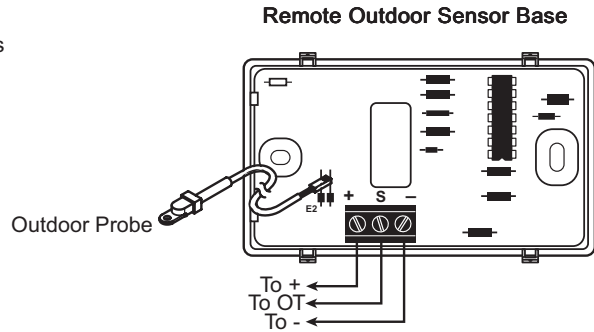

**Staging Thermostat Multi-Stage or Heat Pump Indoor/Outdoor Remote Sensor Wiring (F145-1328/F145-1378)**

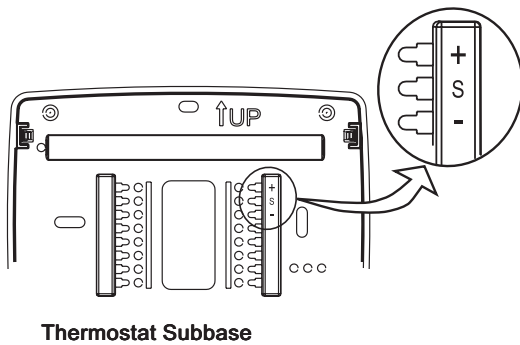

**Note:** When using shielded cable, connect shield of 18 or 20 gauge 3 connector cable to - or S3 on thermostat subbase.

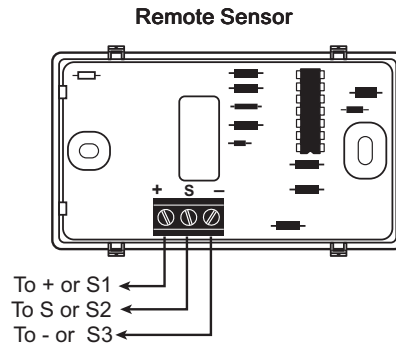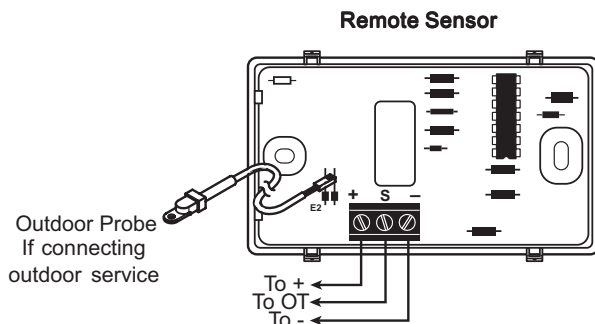

**Single Stage (1F97-1277) Touchscreen Thermostat Indoor/Outdoor Remote Sensor Wiring (F145-1328/F145-1378)**