


TUBE VENTILATION SYSTEM

TUBE ATTACHMENT AND HANGING

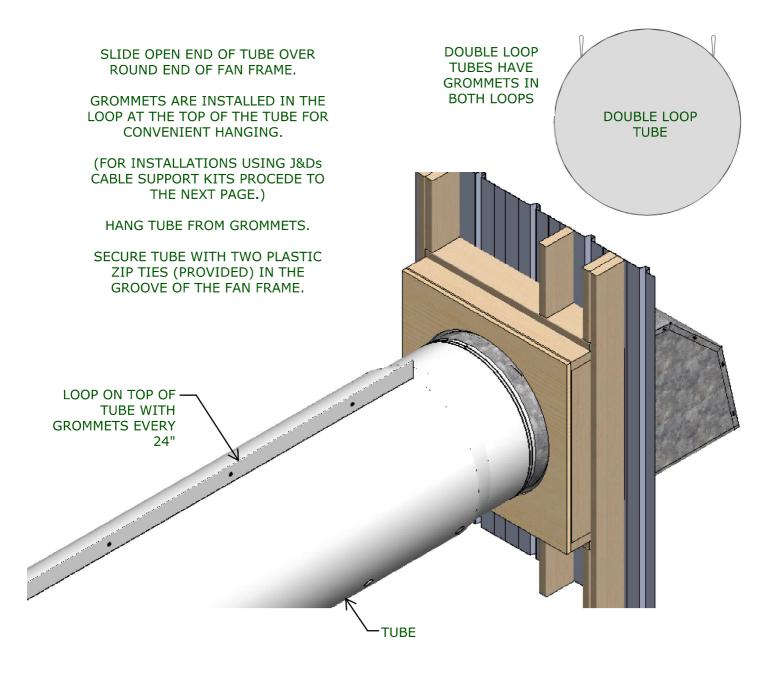



TUBE VENTILATION SYSTEM

TUBE ATTACHMENT WITH CABLE SUPPORT KIT

SECURE EYE BOLT TO FRAMING ABOVE EACH LOOP IN TUBE.

UNSCREW BOTH HOOK AND EYE ENDS OF TURNBUCKLE TO MAKE THE ASSEMBLY AS LONG AS POSSIBLE.

RUN WIRE THROUGH EYE END OF TURNBUCKLE AND ATTACH WIRE TO ITSELF WITH WIRE CLIP (SNUG FIT ONLY).

SLIDE WIRE THIMBLE INTO LOOP (AS SHOWN). SLIDE WIRE CLIP TOWARD THIMBLE UNTIL ASSEMBLY IS TIGHT.

TIGHTEN NUTS ON WIRE CLIP.

HOOK TURNBUCKLE INTO EYE BOLT.





