

## Differential or Static Pressure Transmitter General Instructions

The 2323 Differential or Static Pressure Transmitters have been designed to sense differential or static pressure across fans, coil, filters, or between two reference points, and transmit a 3 to 15 psig signal to controlling and indicating devices such as receiver controllers, receiver gauges, and sensitive pressure switches.

These devices are one-pipe transmitters which require an external restrictor in the supply line. Their design features pneumatic feedback, which ensures accuracy and stability over the entire operating range. Mounting ears are provided for strain-free mounting on ducts or other flat surfaces.

### **ORDERING DATA**

Table-1 TRANSMITTERS.

UNI-LINE NUMBER	REPLACES MODEL	RANGE	
2323-500	P323-03	0" to 3" W.C.	
2323-503	P323-01	-0.5" to +0.5" W.C.	
2323-504	P323-10	0" to 10" W.C.	
2323-505	P323-0025	-0.05" to +0.20" W.C.	

Table-2 ACCESSORIES & REPLACEMENT PARTS.

TAC WHOLESALE NUMBER	REPLACES MODEL	DESCRIPTION
20-877	N1-3	Static pressure tip - 1/4" O.D.
20-944	N4-32	Restrictor tee, copper tubing
21-038	N100-0010	Restrictor tee, polyethlene tubing
21-153	N100-2501	In-line restrictor

Table-3 RECIEVER GAUGE OVERLAYS.


21-764	23-63	2"	0"to 3"
21-768	24-63	2-1/2"	0" to 3"
21-773	25-63	3-1/2"	0" to 3"
21-763	23-62	2"	-0.5" to +0.5"
21-767	24-62	2-1/2"	-0.5" to +0.5"
21-772	25-62	3-1/2"	-0.5" to +0.5"
21-765	23-64	2"	0" to 10"
21-770	24-64	2-1/2"	0" to 10"
21-774	25-64	3-1/2"	0" to 10"
21-834	23-66	2"	-0.5" to +0.20"
21-578	24-66	2-1/2"	-0.5" to +0.20"
21-579	25-66	3-1/2"	-0.5" to +0.20"

### **SPECIFICATIONS**

Action: Direct, proportional.

Output pressure: 3 to 15 psig

Main air pressure: 20 psig operating, 30 psig max.

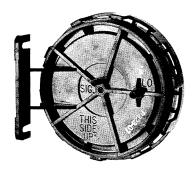

Air consumption: 29 SCIM

**Air connections:** Nipples for 1/4" O.D. polyethylene tubing except LO and HI ports which require 3/8" O.D. Polyethylene

tubing

Maximum ambient temperature: 140°F

**Caution:** THIS DEVICE SHOULD BE INSTALLED BY A QUALIFIED PERSON WITH DUE REGARD FOR SAFETY, AS IMPROPER INSTALLATION COULD RESULT IN A HAZARDOUS CONDITION.

#### MOUNTING

To be used on control air only. Do not use on any other medium. Using the integral mounting flange, the unit may be mounted using two machine screws or self-tapping screws. Two No.  $10 \times 5/8$ " pan head self-tapping screws are supplied. Be sure that the transmitter is mounted in a horizontal position with "THIS SIDE UP" on the top.

The sensing lines for the transmitter should be sized according to the length of run to the sensing head. By strictly adhering to the following table, there should be no adverse effects on the transmitted signal. Sensing lines must be leak free.


SENSING TUBE				
Length	Minimum O.D.			
Up to 200'	1/4"			
200' to 500' Max.	3/8"			

### **OPERATION AND MAINTENANCE**


When a differential pressure is sensed between the high and low pressure sensing lines, this device will transmit a 3 to 15 psig signal proportional to the pressure sensed to a remote readout location.

There is no maintenance required on this unit. In the event of a malfunction, make sure all air lines and restrictors are clean and open. If still inoperable, replace with a new device.


### MOUNTING DIMENSIONS

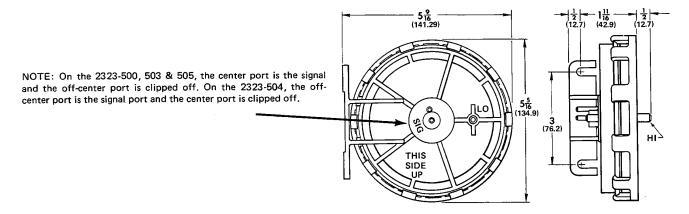

# **TYPICAL APPLICATION**

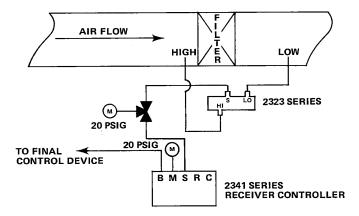

2323 USED AS A DIFFERENTIAL PRESSURE TRANSMITTER

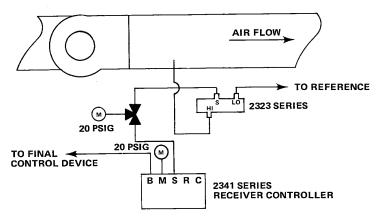

2323 USED AS A STATIC PRESSURE TRANSMITTER

