# For Motor Protection

# 3RV20 Class 10 - up to 40A



Description **Ordering Information** The 3RV20x MSPs are UL approved as Self Protected Combination Motor Controllers ON/OFF rotary handle with lockout and visible trip which are also called Type E. In this application, all the required functions for a motor indication. branch are provided in one device: disconnect, short circuit protection, motor control Adjustment dial for setting to motor FLA. and overload protection. A type E terminal adaptor is required. The 3RV20x MSPs are Class 10 overload trip characteristics. also approved for use as follows: Short circuit trip at 13 times the maximum setting of - Manual Motor Controller: Motor starter, motor disconnect, control and overloadthe FLA adjustment dial. protection. Short circuit current rating: - Group Installation: Motor starter only, motor disconnect, control and overload Ambient compensated up to 140° F (applies to side • protection. by side mounting). - Tap conductor Protection in Group Installation acc. NEC: Motor starter only; Phase loss sensitivity. motor disconnect, control and overload protection. Test trip function. Terminal versions: screw, spring, ring lug. When the 3RV20x is used with one of the 3 above mentioned approvals, the 3RV20x Auxiliaries and Accessories see pages 1/7–1/17. can be installed downstream of one circuit breaker or fuse set. General Information see pages 1/29–1/32. For more detailed application information and rules how to apply, size and rate the Technical Data see pages 1/18-1/28. 3RV20x in control panels in general, in group installations or in accordance to interna-Dimensions see page 1/33. tional IEC standards visit our website: www.usa.siemens.com/controlpaneldesign

Size S0 <sup>2) 4)</sup>	Size S00 <sup>2) 4)</sup>	UL short- circuit breaking capacity	Instant- aneous short circuit				Three-F HP Rati		Single-P HP Ratir	FLA	
Order Number	Order Number	@ 480V [kA]	release [A]	575V	460V	230V	200V	230V	115V	Adjustment Range [A]	
—	3RV2011-0AA ••	65	2.1	—	—	—	—	—	—	0.11-0.16	
l —	3RV2011-0BA ••	65	2.6	—			_			0.14-0.2	
l —	3RV2011-0CA ••	65	3.3	—			_			0.18-0.25	
_	3RV2011-0DA ••	65	4.2	—	—	—	—	—	—	0.22-0.32	
_	3RV2011-0EA ••	65	5.2	—	—	—	—	—	—	0.28-0.4	
l —	3RV2011-0FA ••	65	6.5	—			_			0.35-0.5	1. 1. 1. 16
3RV2021-0GA ••	3RV2011-0GA ••	65	8.2	—		—		—		0.45-0.63	10 10 WI 1
3RV2021-0HA ••	3RV2011-0HA ••	65	10	—	—	—		—	—	0.55-0.8	
3RV2021-0JA ••	3RV2011-0JA ••	65	13	1/2	—	—	—	—	—	0.7-1	and the second se
3RV2021-0KA ••	3RV2011-0KA ••	65	16	1/2	1/2	—	—	—	—	0.9-1.25	C
3RV2021-1AA ••	3RV2011-1AA ••	65	21	3/4	3⁄4	—		1⁄10	—	1.1-1.6	" anteriora
3RV2021-1BA ••	3RV2011-1BA ••	65	26	1	3⁄4	—	—	1/8	—	1.4-2	
3RV2021-1CA ••	3RV2011-1CA ••	65	33	1 1/2	1	1/2	1/2	1/6	—	1.8-2.5	a sid
3RV2021-1DA ••	3RV2011-1DA ••	65	42	2	1 1/2	3/4	1/2	1⁄4	1⁄10	2.2-3.2	
3RV2021-1EA ••	3RV2011-1EA ••	65	52	3	2	3/4	3⁄4	1/3	1/8	2.8-4	
3RV2021-1FA ••	3RV2011-1FA ••	65	65	3	3	1	1	1/2	1/6	3.5-5	
3RV2021-1GA ••	3RV2011-1GA ••	65	82	5	3	1 1/2	1	1/2	1⁄4	4.5-6.3	
3RV2021-1HA ••	3RV2011-1HA ••	65	104	5	5	2	2	1	1/3	5.5-8	
3RV2021-1JA ••	3RV2011-1JA ••	65	130	7 1⁄2	5	3	2	1 1/2	1/2	7-10	
3RV2021-1KA ••	3RV2011-1KA ••	65	163	10	7 1⁄2	3	3	2	1/2	9-12.5	
3RV2021-4AA	3RV2011-4AA	65	208	—	10	5	3	2	1	11-16	
3RV2021-4BA ••	_	65	260	—	10	5	5	3	1 1/2	14-20	
3RV2021-4CA ••	_	65	286	—	15	7 1⁄2	5	3	1 1/2	17-22	
3RV2021-4DA ••	_	65	325		15	7 1/2	5	3	2	20-25	
3RV2021-4NA ••	—	50	364	—	20	10	7 1/2	5	2	23-28	
3RV2021-4EA ••	_	50	400	—	20	10	7 1/2	5	2	27-32	
3RV2021-4PA	_	12	432		25	10	10	5	3	30-36 <sup>3)</sup>	
3RV2021-4FA ••	_	12	480		30	10	10	7 1/2	3	34-40 <sup>3)</sup>	

Note: Select MSP by motor Full Load Amperes. Horsepower ratings are for reference only.

Spring terminals, no auxiliary:  $\bullet \bullet = 20$ 

- Spring Terminals, with 1NO/1NC Aux: ●● = 25 Ring Lug Terminals, no Auxiliary:  $\bullet \bullet = 40$
- 3) These products are NOT certified as Type E combination motor controllers. They can only be used as manual motor controllers.

4) 3RV2 MSPs can only be used with Innovations contactors and accessories

1) Select motor starter protector by motor full load amps. Horsepower ratings for reference only.

2) The motor starter protectors rated up to 32 A can be used as manual motor controllers or as Type E combination motor controllers. For use as a Type E combination motor controller, a Type E terminal is required. See accessories page 1/10.

1/4

Screw Terminals, with 1NO/1NC Aux: •• = 15

# For Motor Protection

## 3RV10 Class 10 & 20 - up to 100A



#### Description **Ordering Information** The 3RV203/204 MSPs are UL approved as Self Protected Combination Motor Controllers ON/OFF rotary handle with lockout and visible which are also called Type E. In this application, all the required functions for a motor trip indication. • branch are provided in one device: disconnect, short circuit protection, motor control and Adjustment dial for setting to motor FLA. overload protection. A type E terminal adaptor is required for all S2 frame 3RV2031 above Class 10 overload trip characteristics. 45A and all S2 frame 3RV2032 as well as for all S3 frame motor starter protectors. Short circuit trip at 13 times the maximum setting of the FLA adjustment dial. The 3RV203/204 MSPs are also approved for use as follows: • Short circuit current rating: - Manual Motor Controller: Motor starter, motor disconnect, control and overload Ambient compensated up to 140° F (applies to protection. side by side mounting). - Group Installation: Motor starter only, motor disconnect, control and overload protection. Phase loss sensitivity. - Tap conductor Protection in Group Installation acc. NEC: Motor starter only; motor Test trip function. disconnect, control and overload protection.

Auxiliaries and Accessories see pages 1/7–1/17.

General Information see pages 1/29-1/32.

Technical Data see pages 1/18-1/28.

- For more detailed application information and rules how to apply, size and rate these MSPs in control panels in general, in group installations or in accordance to international IEC standards visit our website: www.usa.siemens.com/controlpaneldesign

When the 3RV203/204 is used with one of the 3 above mentioned approvals, they can be

installed downstream of one circuit breaker or fuse set.

#### Dimensions see page 1/33.

## Note: Select MSP by motor Full Load Amperes. Horsepower ratings are for reference only

	FLA Adjustment	Single P HP rating	Single Phase C HP rating <sup>1)</sup>		e ing <sup>1)</sup>			Inst. Short- Circuit	UL AIC	Trip Class 10	Trip Class 20
llustration	Range [A]	115V	240V	200V	230V	460V	575V	Release [A]	(480V) [kA] <sup>6)</sup>	Order Number <sup>4)</sup>	Order Number <sup>4)</sup>
										1	
	3RV203 Fr	ame Siz	e S2	T	r	1	Ť	1			
CT-CT-CT	9.5 - 14	1.5	3	5	5	10	15	208	65	3RV2031-4SA10	3RV2031-4SB10
44-1	12 - 17	1.5	3	5	7.5	15	15	260	65	3RV2031-4TA10	3RV2031-4TB10
6 6 6 1	14 - 20	1.5	3	7.5	7.5	15	20	260	65	3RV2031-4BA10	3RV2031-4BB10
- 1 .	18 - 25	2	5	7.5	10	20	25	325	65	3RV2031-4DA10	3RV2031-4DB10
10 10 10	22 - 32	3	5	10	10	25	30	416	65	3RV2031-4EA10	3RV2031-4EB10
	28 - 36	3	7.5	15	15	30	40	520	65	3RV2031-4PA10	3RV2031-4PB10
	32 - 40	3	7.5	15	15	30	40	585	65	3RV2031-4UA10	3RV2031-4UB10
	35 - 45	3	10	15	15	40	50	650	65	3RV2031-4VA10	3RV2031-4VB10
	42 - 52	5	10	15	20	40	50	741	65	3RV2031-4WA10	3RV2031-4WB10
	49 - 59	5	15	20	25	50	60	845	30	3RV2031-4XA10	3RV2031-4XB10
14 10/00	54 - 65	5	15	20	25	50	60	845	30	3RV2031-4JA10	3RV2031-4JB10
735											
	3RV204 Fr	ame Siz	e S3								
	28 - 40	3	7.5	15	15	30	40	520A	65	3RV2041-4FA10	3RV2041-4FB10
Ser K	36 - 50	5	10	15	20	40	50	650A	65	3RV2041-4HA10	3RV2041-4HB10
	45 - 63	5	15	20	25	50	60	819A	65	3RV2041-4JA10	3RV2041-4JB10
	57 - 75	7.5	15	25	25	60	75	975A	65	3RV2041-4KA10	3RV2041-4KB10
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	65 - 84	7.5	15	25	30	60	75	1170A	65	3RV2041-4RA10	3RV2041-4RB10
	75 - 93	7.5	20	30	40	75	100 3)	1300A	65	3RV2041-4YA10	3RV2041-4YB10
	80 - 100	10	25	40	40	75	100 <sup>3)</sup>	1300A	65	3RV2041-4MA10	3RV2041-4MB10

1) Select motor starter protector by motor full load amps. Horsepower ratings for reference only.

2) Size S2 and S3 are listed as type E combination motor controllers. For required Type E terminals see page 1/10. 4) Pre-assembled motor starter protector and transverse auxiliary switch with 1NO + 1NC is available. Replace the do not require a type E terminal and fulfill the spacing requirements of UL508.

3) Shaded ratings apply for group installation only. These ratings do not apply as UL listed manual combination starters.

last digit of the order no. with a "5"

5) 3RV1 MSPs can only be used with 3RT1 contactors and accessories. 3RV2 MSPs can only be used with 3RT2 contactors and accessories.

6) For 100kA SCCR rated MSPs, change the part number from 3RV2031 to 3RV2032. (applies to S2 frame only through 65A)

Refer to pages 1/18 to 1/20 when using an MSP in a Manual Motor Starter or a Manual Self-Protected Combination Motor Controller.

UL 489

# 3RV-up to 70 A

Thermal

overload

release

Short Circuit

[kA]

breaking capacity



**For Transformer** 

Order

Number

Protection <sup>3)</sup>

Instant-

aneous

Over

	Selection and ordering data	l
MOTOR STARTER PROTECTORS	Rated Cur- rent <sup>1</sup> ) [A]	
	Innovations Frame Size S	0
	Innovations Frame Size S 0.16	0
		0
	0.16	0
	0.16 0.2	0
	0.16 0.2 0.25	0
	0.16 0.2 0.25 0.32	0
	0.16 0.2 0.25 <u>0.32</u> 0.4	0
	0.16 0.2 0.25 <u>0.32</u> 0.4 0.5	0

	Rated Cur-	(non-ad-	[kA]			Over Current	Number		Over Current	Number	
	rent <sup>1)</sup>	justable)	480	480Y/	600Y/	Release	(Screw	Weight	Release	(Screw	Weight
	[A]	[A]	VAC	277VAC	347VAC	[A]	Terminals)	[kg]	[A]	Terminals)	[kg]
Innovations Frame	Size S	00 <sup>4)</sup>								·	
	0.16	0.16	_	65	10	2.1	3RV2711-0AD10	0.390	3.3	3RV2811-0AD10	0.390
	0.2	0.2	_	65	10	2.6	3RV2711-0BD10	0.390	4.2	3RV2811-0BD10	0.390
	0.25	0.25	_	65	10	3.3	3RV2711-0CD10	0.390	5.2	3RV2811-0CD10	0.390
	0.32	0.32	_	65	10	4.2	3RV2711-0DD10	0.390	6.5	3RV2811-0DD10	0.390
	0.4	0.4	_	65	10	5.2	3RV2711-0ED10	0.390	8.2	3RV2811-0ED10	0.390
	0.5	0.5	_	65	10	6.5	3RV2711-0FD10	0.390	10	3RV2811-0FD10	0.390
	0.63	0.63	—	65	10	8.2	3RV2711-0GD10	0.390	13	3RV2811-0GD10	0.400
	0.8	0.8	_	65	10	10	3RV2711-0HD10	0.390	16	3RV2811-0HD10	0.450
000, 1	1	1	_	65	10	13	3RV2711-0JD10	0.450	21	3RV2811-0JD10	0.450
	1.25	1.25	—	65	10	16	3RV2711-0KD10	0.450	26	3RV2811-0KD10	0.460
	1.6	1.6	—	65	10	21	3RV2711-1AD10	0.460	33	3RV2811-1AD10	0.460
" <u>~</u>	2	2	_	65	10	26	3RV2711-1BD10	0.460	42	3RV2811-1BD10	0.460
	2.5	2.5	—	65	10	33	3RV2711-1CD10	0.460	52	3RV2811-1CD10	0.460
666	3.2	3.2	—	65	10	42	3RV2711-1DD10	0.460	65	3RV2811-1DD10	0.460
	4	4	—	65	10	52	3RV2711-1ED10	0.450	82	3RV2811-1ED10	0.460
	5	5		65	10	65	3RV2711-1FD10	0.460	104	3RV2811-1FD10	0.460
	6.3	6.3	—	65	10	82	3RV2711-1GD10	0.460	130	3RV2811-1GD10	0.460
	8	8	—	65	10	104	3RV2711-1HD10	0.460	163	3RV2811-1HD10	0.460
	10	10	—	65	10	130	3RV2711-1JD10	0.460	208	3RV2811-1JD10	0.460
	12.5	12.5	_	65	10	163	3RV2711-1KD10	0.460	260	3RV2811-1KD10	0.460
	15	15		65	_	208	3RV2711-4AD10	0.470	286	3RV2811-4AD10	0.470
Innovations Frame	Size S	0 <sup>4)</sup>				_					
	20	20	—	50	-	260	3RV2721-4BD10	0.514	325	3RV2821-4BD10	0.516
	22	22		50		286	3RV2721-4CD10	0.516	364	3RV2821-4CD10	0.528
Innovations Frame	Size S	3 <sup>5)</sup>									
	10	10	65	_	20	150	3RV2742-5AD10	0.460	-	_	_
	15	15	65	—	20	225	3RV2742-5BD10	0.460	-	_	—
11-11-10	20	20	65	_	20	260	3RV2742-5CD10	0.460		—	_
	25	25	65	—	20	325	3RV2742-5DD10	0.460	-	—	—
	30	30	65	_	20	390	3RV2742-5ED10	0.460	-	_	_
	35	35	_	65	20	455	3RV2742-5FD10	0.460	-	—	_
. 25 1	40	40	_	65	20	520	3RV2742-5GD10	0.460		—	_
See 1 1 Au	45	45	_	65	20	585	3RV2742-5HD10	0.460		—	
	50	50	_	65	20	650	3RV2742-5JD10	0.460	-	_	
	60	60	_	65	20	780	3RV2742-5LD10	0.460	-	_	_
	70	70	_	65	10	910	3RV2742-5QD10	0.460	—	_	

For Motor

Instant-

aneous

Over

Protection<sup>2)</sup>

Order

Number

- 1) 100 % rated value acc. to UL 489 and IEC 60947-2 (100 % rated breaker).
- 3) Circuit breakers for system and transformer protection according to UL/CSA. Specially designed for transformers with high inrush current.
- 2) Circuit breakers for system protection of motor and non-motor loads. Requires use of separate overload protection for motor applications.
- 4) Transverse and lateral auxiliary switches can be ordered separately (see "Mountable accessories").
- 5) Transverse auxiliary switches must not be mounted. Lateral auxiliary switches can be ordered separately (see "Mountable accessories").
- Refer to page 1/21 when using as upstream protection of a Manual Motor Controller or a Manual Motor Controller Suitable for Tap Conductor Protection in Group Installations.



Selection and orderin	g data					
						Innovations
	Туре		Version	Width	Fits 3RV2 Frame Size	Screw Connection Order No.
Auxiliary switches <sup>3)</sup>				mm		Innovations
3RV2901-1E	Transverse auxilia switches	ry	1 CO 1 NO + 1 NC 2 NO		S00, S0, S2, S3	3RV2901-1D 1), 2) 3RV2901-1E 1) 3RV2901-1F
3RV2901-1G	Solid-state compa transverse auxilia		1 CO		S00, S0, S2, S3	3RV2901-1G
8RV2901-1A	switches for use in and in electronic cirr low operating currer	cuits with	nere			
	Covering caps for auxiliary switch sl				S00, S0, S2, S3	3RV2901-0H
	Lateral auxiliary switches (side mount) Width = 9 mm		1 NO + 1 NC 2 NO 2 NC 2 NO + 2 NC	9 9 9 18	S00, S0, S2, S3	1), 2) 3RV2901-1A 1) 3RV2901-1B 1) 3RV2901-1C 3RV2901-1J
Signaling switch <sup>4)</sup>						Innovations
3RV2921-1M	Signaling switch (side mount) Individual tripped an short-circuit signalin Width = 18 mm		1 NO + 1 NC each	18	S00, S0, S2, S3	1), 2) <b>3RV2921-1M</b>
Auxiliary releases <sup>5)</sup>						Innovations
3RV2902-1AB4	Undervoltage releases (side mount)	<b>DC</b> 24 V			S00, S0, S2, S3	3RV2902-1AB4
	Width = 18 mm	AC 50 Hz 24 V 110 V  230 V 400 V 415 V 500 V	AC 60 Hz 		S00, S0, S2, S3	3RV2902-1AB0 3RV2902-1AF0 1), 2) 3RV2902-1AM1 1), 2) 3RV2902-1AP0 3RV2902-1AV0 3RV2902-1AV1 3RV2902-1AS0
	Undervoltage releases with leading auxiliary contacts 2 NO (side mount)	230 V 400 V 415 V 230 V 400 V 415 V	240 V 440 V 480 V 240 V 440 V 480 V		S00, S0, S2, S3 S00, S0, S2, S3	1) 3RV2922-1CP0 1) 3RV2922-1CV0 1).2) 3RV2922-1CV1 1) 3RV2922-1CP0 1) 3RV2922-1CV0 1).2) 3RV2922-1CV1
	Width = 18 mm Shunt releases (side mount) Width = 18 mm	AC 50/60 Hz 100% ON <sup>6)</sup> 20-24 V 90-110 V 210-240 V 350-415 V 500 V			S00, S0, S2, S3	1), 2) 3RV2902-1DB0 1), 2) 3RV2902-1DF0 1) 3RV2902-1DF0 3RV2902-1DF0 3RV2902-1DV0 3RV2902-1DS0

- This product is also available with spring terminals. The order no. must be changed in the 8th position to a "2":e.g. 3RV1901-2E or 3RV2901-2E
- 2) This product is also available with ring lug terminals. The order no. must be changed in the 8th position to a "4": e.g. 3RV2901-4E
- 3) Each motor starter protector can be fitted with one transverse and one lateral auxiliary switch. The lateral auxiliary switch 2 NO + 2 NC is used without transverse auxiliary switch.
- One signaling switch can be mounted at the left of the motor starter protector. This accessory cannot be used on the 3RV27 and 3RV28 circuit breakers.

5) One auxiliary release can be mounted at the right of each MSP. motor starter protector.

6) The response voltage at the lower limit of the voltage range at 0.85 (Tu=60°C) is valid for 100% (infinite)

7) The response voltage at the lower limit of the voltage range at 0.9 (Tu=60°C) applies for a duty cycle of 5 seconds at AC 50/60 Hz and DC.

## Mounting accessories



Selection and ord	ering o	data							
	Modu- lar spac- ing		1		Rated current In at 690 V	For motor starter protectors Size	Order No.	Order quantity	Weight approx.
	mm	'			А				kg
Three-phase busb	ar sysi	tems for	Classi	c and In	novatio	ns			
HELIKA Malalaki tata	termina	als, moun	ted side-		n standar	with screw rd mounting			
3RV19 15-1AB	45	2 3 4 5			63	S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup>	3RV19 15-1AB 3RV19 15-1BB 3RV19 15-1CB 3RV19 15-1CB 3RV19 15-1DB	1 unit 1 unit 1 unit 1 unit	0.044 0.071 0.099 0.124
3RV19 15-1BB	55		2 3 4 5		63	S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup>	3RV19 15-2AB 3RV19 15-2BB 3RV19 15-2CB 3RV19 15-2CB 3RV19 15-2DB	1 unit 1 unit 1 unit 1 unit	0.048 0.079 0.111 0.140
3RV19 15-1CB	63			2 4	63	S00, S0 <sup>1)2)</sup> S00, S0 <sup>1)2)</sup>	3RV19 15-3AB 3RV19 15-3CB	1 unit 1 unit	0.052 0.120
	55	2 3 4			108	S2 <sup>3)</sup> S2 <sup>3)</sup> S2 <sup>3)</sup>	3RV19 35-1A 3RV19 35-1B 3RV19 35-1C	1 unit 1 unit 1 unit	0.150 0.214 0.295
3RV19 15-1DB	75		2 3 4	2 3 4	108	S2 S2 S2	3RV19 35-3A 3RV19 35-3B 3RV19 35-3C	1 unit 1 unit 1 unit	0.161 0.262 0.369

<sup>1)</sup> Not suitable for 3RV11 motor starter protectors with overload relay function. The 3RV1915-5DB connecting piece is available for connecting motor starter protectors from size S0 to size S00.

<sup>2)</sup> Not suitable for 3RV UL 489 circuit breakers.

 Auxiliary trip units and lateral auxiliary switches cannot be used in combination.

	Version		Modular spacing	For motor starter protectors Size	Order No.	Order quantity	Weight approx.
			mm				kg
Connecting pie	ces for three-	phase busbar	S		For Innovations		
3RV19 15-5DB	busbars for	ting three-phase motor starter of size S0 (left) to ght)	45	S00, S0	3RV19 15-5DB	1 unit	0.04
		cross-section,		For motor			
		s, solid or strand			3RV2		
	For <b>3RV1</b> MSP	For <b>3RV2</b> MSP	ing torque	protector size	Innovations <sup>2)</sup>		
	AWG	AWG	Nm	3120	Order No.		
Three-phase fe	eder termina	als					
3RV29 25-5AB	Connectio	n from top					
233	_	104	34	S00	3RV2925-5AB		
000	—	104	34	SO	3RV2925-5AB		
3RV2915-5B	Connectio	n from below <sup>3)</sup>					
N. N. N	_	104	Input: 4,	S00, S0	3RV2915-5B		
			Output:				
			2 2.5				
3RV2935-5A	Connectio	n from top					
No. of Concession, Name	140		4-6	S2	3RV2935-5A		
000							
Three-phase fe	eeder termina	als for constru	cting "Type	E Starters"	Innovations		
3RV2935-5E	Connectio	n from top					
and and and	_	104	3-4	S00	3RV2925-5EB		
	_	104	3-4	SO	3RV2925-5EB		
000	80	102/0	4.5-6	S2	3RV2935-5E		
) Do not mix 3RV1 Cla	assic Accessories v	vith 3RV2	2) Do not mix 3F	V2 Innovations A	ccessories with 3RV1 3) This te	erminal is connected in place of a su	witch, please

 Do not mix 3RV1 Classic Accessories with 3RV2 Innovations MSPs  Do not mix 3RV2 Innovations Accessories with 3RV1 Classic MSPs ) This terminal is connected in place of a switch, please take the space requirement into account.

1/8


## Mounting accessories

## Overview


### Accessories for "Self-Protected Combination Motor Controllers (Type E)" according to UL 508/UL 60947-4-1

The 3RV20 motor starter protectors with screw terminals are approved according to UL 508/UL 60947-4-1 as "Self-Protected Combination Motor Controllers (Type E)".

This requires increased clearance and creepage distances (1 inch and 2 inches respectively) at the input side of the device, which are achieved by mounting a terminal block or a phase barrier.

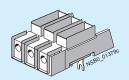

#### SIRIUS 3RV2928-1H terminal block

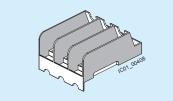

#### SIRIUS 3RV2938-1K phase barrier

Motor starter protectors/ circuit breakers	Size	Essential accessories for "Self-Protected Combination Motor Controllers (Type E)" according to UL 508/UL 60947-4-1
3RV201., 3RV202.	S00/S0	3RV2928-1H terminal block or 3RV2928-1K phase barrier
3RV2031-4B1., 3RV2031-4D.1., 3RV2031-4E1., 3RV2031-4F1., 3RV2031-4S.1., 3RV2031-4T.1., 3RV2031-4T.1., 3RV2031-4U.1., 3RV2031-4V.1.	S2	
3RV2031-4J.1., 3RV2031-4K.1., 3RV2031-4R.1., 3RV2031-4R.1., 3RV2031-4W.1., 3RV2031-4X.1., 3RV2032	S2	3RV2938-1K phase barrier
3RV204	S3	3RT2946-4GA07 terminal block

-- No accessories needed

Special threephase infeed terminals are required for constructing "Type E Starters" with an insulated threephase busbar system (see page 1/8).

The 3RV29 infeed system also enables the assembly of "Type E Starters", see page 1/14 onwards.

Note:

According to CSA, these terminal blocks and the phase barriers can be omitted when the device is used as a "Self-Protected Combination Motor Controller (Type E)".

## Link modules

Feeders can be easily assembled from single devices with the help of the link modules. The following table shows the different combination options for devices with screw or spring-type terminals.

Combination devices	3RV2 motor starter protec- tors/ circuit breakers Size	3RT2 contactors; 3RW30, 3RW40 soft starters; 3RF34 solid-state contactors Size	Link modules Screw terminals	Spring-type terminals
Link modules protectors/circ	for connection	cting switching dev ers <sup>1)</sup>	vices to 3RV2 n	notor starter
3RT2 contac- tors with AC or	S00	S00	3RA1921- 1DA00	3RA2911- 2AA00
DC coil	S0	S00		
	S2	S2	3RA2931- 1AA00	
3RT2 contac- tors with	S0	SO	3RA2921- 1AA00	3RA2921- 2AA00
AC coil	S00	S0		
3RT2 contac- tors with	S0	SO	3RA2921- 1BA00	3RA2921- 2AA00
DC coil	S00	S0		
3RW30 soft starters	S00	S00	3RA2921- 1BA00	3RA2911- 2GA00
	S0	S00		
3RW30/ 3RW40	S0	SO	3RA2921- 1BA00	3RA2921- 2GA00
soft starters	S00	SO		
	S2 <sup>2)</sup>	S2 <sup>2)</sup>	3RA2931- 1AA00	
3RF34 solid- state contac- tors	S00/S0	S00	3RA2921- 1BA00	

# Hybrid link modules for connecting contactors with spring-type terminals to 3RV2 motor starter protectors/circuit breakers with screw terminals $^{3)}$

3RT2 contac- tors with AC or	S00		3RA2911- 2FA00	
DC coil	S0	SO	3RA2921- 2FA00	

-- Version not possible

<sup>1)</sup> The link modules cannot be used for the 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.

<sup>2)</sup> To assemble the feeder between a motor starter protector and a soft starter in size S2, the 3RA2932-1AC00 standard mounting rail adapter must be used.

<sup>3)</sup> The motor starter protector to contactor hybrid link modules cannot be used for the 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV27 and 3RV28 motor starter protectors/circuit breakers. They are only suitable for constructing direct-on-line starters.

Note:

- Link modules can be used in
- Sizes S00 and S0: up to max. 32 A - Size S2: up to max. 65 A
- Hybrid link modules can be used in
  - Sizes S00 and S0: up to max. 32 A

3RA29 11-2AA00

Selection and ordering data



Innovations

MOTOR STARTER PROTECTORS 1

	Version		For motor starter protector size	3RV2/3RT2 Order No.	Order Quantity
Terminal blocks and phase	e barriers for "Self-Prot	ected Combination	ו		·
Motor Controllers (Type E	)" according to UL 508 /	UL 60947-4-1			
	Note: <i>UL 508 / UL 60947-4-1 den</i> <i>"Combination Motor Control</i> The following terminal blocks The terminal blocks or phase <i>For construction with three-</i>	<i>ller Type E".</i> s or phase barriers mus e barriers cannot be us	st be used on 3RV motor sta ed in combination with the 3		
3RV29 28-1H	Terminal blocks type E	JIIASE DUSDAIS, SEE AC			
	For extended clearance and creepage distances (1 and 2 inch)		S00, S0 S0 S2	3RV29 28-1H — 3RV29 35-5E	1 unit 1 unit 1 unit
			S3	3RT2946-4GA07	1 unit
3RV29 28-1K	Phase barriers				
	For extended clearance and creepage distances (1 and 2 inch)		S00, S0 S2	3RV29 28-1K 3RV29 38-1K	1 unit 1 unit
3RT1946-4GA07	Actuating voltage of contactor	Size 3RT contactor	3RV motor starter protector	Innovations 3RV2/3RT2 Order No.	Order Quantity
Link modules for motor st	arter protector to conta	ictor <sup>1)</sup>			
	For mechanical and electrica motor starter protector and terminals.			Screw Terminals	
	Single-unit packaging				
M. Latitude	AC/DC	S00	S00/S0	3RA19 21-1DA00	1 unit
	AC	SO	S00/S0	3RA29 21-1AA00	1 unit
	AC	S2	S2	3RA29 31-1AA00	1 unit
	AC	S3	S3	3RA19 41-1AA00	1 unit
	DC	SO	S00/S0	3RA29 21-1BA00	1 unit
	DC	S2	S2	3RA29 31-1AA00	1 unit
3RA29 21-1AA00	DC	S3	S3	3RA19 41-1AA00	1 unit
	Multi-unit packaging				
	AC/DC	S00	S00/S0	3RA19 21-1D	10 units
	AC	SO	S00/S0	3RA29 21-1A	10 units
	DC	SO	S00/S0	3RA29 21-1B	10 units
And A	AC/DC	S2	S2	3RA29 31-1A	5 units
	AC/DC	S3	S3	3RA19 41-1A	5 units

For mechanical and electrical connection between motor starter protector and Spring-type Terminals contactor with spring-type terminals.

Single-unit packaging				
AC/DC	S00	S00	3RA29 11-2AA00	1 unit
AC <sup>2)</sup>	SO	SO	3RA29 21-2AA00	1 unit
DC	S0	SO	3RA29 21-2AA00	1 unit
Multi-unit packaging				
AC/DC	S00	S00	3RA29 11-2A	10 units
AC <sup>2)</sup>	SO	SO	3RA29 21-2A	10 units
DC	SO	SO	3RA29 21-2A	10 units
Spacers				
For compensating height	on AC contactors	3		
Single-unit packaging	SO	SO	3RA29 11-1CA00	1 unit
Multi-unit packaging	SO	SO	3RA29 11-1C	5 units

1) The link modules for motor starter protector to contactor cannot be used for the 3RV2. 21-4PA1., 3RV2. 21-4FA1., 3RV27 and 3RV28 motor starter protectors

2) A spacer for height compensation on AC contactors size S0 is optionally available

Note

Size S0 link modules can be used up to max. 32 A. Size S2 link modules can be used up to 65A max.

Selection and ordering data

# Accessories



	Size 3RW30, 3RW40 soft starters; 3RF34 solid-state contactors	3RV2 motor starter protectors	Order No.	PU (UNIT, SET, M)	PS*	Weight approx. kg
	tor starter protector to so or to solid-state contacto					
	Connection between motor starter protector and soft starter / solid-state contactor with screw terminals		Screw terminals			
	Single-unit packaging S00 S0 S2 <sup>3)</sup> S3 <sup>4)</sup> Multi-unit packaging	S00/S0 S00/S0 S2 S3	3RA29 21-1BA00 3RA29 21-1BA00 3RA29 31-1AA00 3RA19 41-1A	1 1 1	1 unit 1 unit 1 unit 1 unit	0.068 0.068 0.104 0.104
3RA29 21-1BA00	S00 S0 S2 <sup>3)</sup> S3 <sup>4)</sup>	S00/S0 S00/S0 S2 S2	3RA29 21-1B 3RA29 21-1B 3RA29 31-1A 3RA19 41-1A	1 1 1	10 units 10 units 5 units 5 units	0.068 0.068 0.104 0.104
	soft starter with spring-type terminals		Spring-type terminals			
Title	Single-unit packaging S00 S0 Multi-unit packaging	S00 S0	3RA29 11-2GA00 3RA29 21-2GA00	1 1	1 unit 1 unit	0.038 0.072
3RA29 21-2GA00	S00 S0	S00 S0	3RA29 11-2G 3RA29 21-2G	1 1	10 units 10 units	0.380 0.720

<sup>1)</sup> The link modules for motor starter protector to soft starter and for motor starter protector to solid-state contactor cannot be used for the 3RV2. 21-4PA1., 3RV2. 21-4FA1., 3RV27 and 3RV28 motor starter protectors.

# Note:

So link modules can be used up to max. 32 A. S2 link modules can be used up to max. 65 A.

	Actuating voltage of contactor	Size 3RT2 contactors	3RV2 motor starter protectors	Order No.	PU (UNIT, SET, M)	PS*	Weight approx. kg
Hybrid link modules	for motor starter protec	tor to cont	actor <sup>1)</sup>				0
	For mechanical and electric between motor starter prote and contactor with spring-t <b>Single-unit packaging</b> AC/DC AC <sup>2)</sup> /DC	ector with sci	rew terminals	3RA29 11-2FA00 3RA29 21-2FA00	1	1 unit 1 unit	0.029 0.056
3RA29 11-2FA00	Multi-unit packaging						
ALL	AC/DC AC <sup>2)</sup> /DC	S00 S0	S00 S0	3RA29 11-2F 3RA29 21-2F	1 1	10 units 10 units	0.290 0.560
and a few	Spacers <sup>2)</sup> for compensating the heigh	nt on AC con	tactors				
1111	Single-unit packaging Multi-unit packaging	SO SO	S0 S0	3RA29 11-1CA00 3RA29 11-1C	1 1	1 unit 5 units	0.001 0.001

3RA29 21-2FA00

- <sup>1)</sup> The hybrid link modules for motor starter protector to contactor cannot be used for the 3RV2. 21-4PA1., 3RV2. 21-4FA1., 3RV27 and 3RV28 motor starter protectors or reversing starters.
- <sup>2)</sup> A spacer for height compensation on AC contactors size S0 is optionally available. See 3RA2911-1CA00
- <sup>3)</sup> To assemble the starter between a motor starter protector and a soft starter in size S2, the 3RA2932-1AC00 standard mounting rail adapter must be used.
- <sup>4)</sup> It is only permissible to assemble the feeder between the motor starter protector and the soft starter in Size S3 on a mounting plate.

Note:

Hybrid link modules can be used up to max. 32 A.

# Mounting accessories



Selection and ordering data

	Туре	Design	For SIRIUS MSP size	Order No.	Order Quantity	Weight approx (kg)
3RV29 28-1A without padlock		Visible isolating distance for isolating individual motor starter protectors from the network.	S00, S0	3RV29 28-1A	1 unit	0.13
		lockable in isolating position.	S2 <sup>1)</sup>	3RV29 38-1A	1 unit	0.36
rminal, 3 pole	9					
•		For connection of auxiliary and control cables to the main conductor connections	S3	3RT29 46-4F	1 unit	0.10
1					-	
	<b>Terminal cover</b> for box terminals	Additional touch guard to be fitted at the box terminals	S2	3RT29 36-4EA2	1 unit	0.01
		(2 units can be mounted per MSP)	S3	3RT29 46-4EA2	1 unit	0.01
	Terminal cover for cable lug and bar connection	For maintaining the required voltage clearance and as protection against the equipment being touched if distant box terminals are used (2 units can be mounted per MSP)	S3	3RT19 46-4EA1	1 unit	0.03
	Terminal cover		0)			
THE.	for devices with ring lug terminal connection	Main current level		3RV29 28-4AA00	1 unit	0.01
		• For transverse auxiliary switches	S00, S0 <sup>2)</sup>	3RV29 08-4AA10	1 unit	0.01
	Scale cover	For covering the current setting scale. Packing unit: Bag with 10 scale covers.	S00, S0, S2 <sup>3)</sup> S3	3RV29 08-0P 3RV19 08-0P	10 units 10 units	
rial						
	<b>Push-in lugs</b> For screwing the motor starter protector onto mounting plates.	Two units are required for each motor starter protector.	S00	3RB19 00-0B	10 units	0.10
ening spring	-type terminals by h	and				
0	Screwdriver For all SIRIUS devices with spring terminals	Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black partially insulated	S00, S0, S2	3RA29 08-1A	1 unit	0.04
	rminal, 3 pole	cule 1   Structure     Structure   Structure     without padlock   Structure     minal, 3 pole   minal, 3 pole     minal, 3 pole   Structure     minal, 3 pole   Ferminal cover     for box terminals   For box terminals     for cable lug and bar connection   For cable lug and bar connection     Scale cover   For devices with ring lug terminal connection     Scale cover   Scale cover     rial   Push-in lugs     For screwing the motor starter protector onto mounting plates.   Screwdriver     For all SIRIUS devices with spring   Screwdriver	dule 1   Styles 28-1A     without padlock   Visible isolating distance for isolating individual motor starter protectors from the network, lockable in isolating position.     without padlock   For connection of auxiliary and control cables to the main conductor connections     minal, 3 pole   For connection of auxiliary and control cables to the main conductor connections     minal, 3 pole   For maintaining the required to be fitted at the box terminals (2 units can be mounted per MSP)     Terminal cover for cable lug and bar connection   For maintaining the required voltage clearance and as protection against the equipment being touched if distant box terminals are used (2 units can be mounted per MSP)     Terminal cover for devices with ning lug terminal connection   • Main current level     Terminal cover for cable lug and bar connection   • Main current level     Terminal cover for cable conver   • Main current level     Scale cover   For covering the current setting scale. Packing unit: Bag with 10 scale covers.     Scale cover   For covering the current setting scale. Packing unit: Bag with 10 scale covers.     rial   Push-in lugs For screwing the motor starter protector onto mounting plates.   Two units are required for each motor starter protector.     ending spring-type terminals by hand   Length approx. 200 mm, 3.0 mm x 0.5 mm, 3.0 mm x 0.	Type Design MSP size   dule <sup>1</sup> without patiock Visible isolating distance for isolating individual motor starter protectors from the network, lockable in isolating position. S00, S0   minal, 3 pole For connection of auxiliary and control cables to the main conductor connections S3   Terminal cover for box terminals Additional touch guard to be fitted at the box terminals (2 units can be mounted per MSP) S2   Terminal cover for cable lug and bar connection For maintaining the required voltage clearance and as protection (2 units can be mounted per MSP) S3   Terminal cover for cable lug and bar connection For maintaining the required voltage clearance and as protection (2 units can be mounted per MSP) S3   Terminal cover for cable lug and bar connection For maintaining the required voltage clearance and as protection (2 units can be mounted per MSP) S3   Terminal cover for dowices with ring lug terminal connection • Main current level (2 units can be mounted per MSP) S00, S0, S0 <sup>3</sup> Scale cover For covering the current setting scale. Packing unit: Bag with 10 scale covers. S00, S0, S2 <sup>3</sup> S3   rial Push-in lugs For screwing the motor starter protector onto mounting plates. Two units are required for each motor starter protector. S00   solid cover for davices with spring Length approx. 200 mm, 3.0 mm x.0.5 mm, 3.0 mm x.0.5 mm, 3.0 mm x.0.5 mm, S00, S0, S2	Type     Design     MSP size     Order No.       dule 9 wind at a wind at alack.     Visible isolating distance for isolating individual motor starer protectors form the networks (lockable in isolating position.     S00, 50     SRV29 25-1A       SRV29 35-1A     SRV29 35-1A     SRV29 35-1A     SRV29 35-1A       SRV29 35-1A     SRV29 35-1A     SRV29 35-1A     SRV29 35-4EA2       SRV29 35-1A     SRV29 35-1A     SRV29 35-1A     SRV29 35-2AAA00       SRV29 35-1A </td <td>Type     Design     MSP size     Order No.     Quantity.       dulo 1     Windproduct.     Visible isolating delance for isolating individual motor stater protectors for the network.     500, 50     SRV29 28-1A     1 unit       windproduct.     Isolating individual motor stater protectors for the network.     52 <sup>10</sup>     SRV29 28-1A     1 unit       minal, 3 pole     For connection of axuliay and control cables to the main conductor connections     S3     SRT29 46-4F     1 unit       Image: state state state state protectors     Additional touch guard to be fitted at the box terminals (2 units can be mounted per MSP)     S2     SRT29 46-4F     1 unit       Image: state state state state for box terminals     Additional touch guard to be fitted at the box terminals (2 units can be mounted per MSP)     S2     SRT29 46-4EA1     1 unit       Image: state state state state for box terminals     For maintaining the required valage clearance and as protector agament the equipment being touched (2 units can be mounted per MSP)     S3     SRT29 38-4EA2     1 unit       Image: state state state state state state (2 units can be mounted per MSP)     S00, S0, S0<sup>2</sup>     SRV29 28-4AA00     1 unit       Image: state state state state state state state state (2 units can be mounted per MSP)     S00, S0, S0<sup>2</sup>     SRV29 08-4AA10</td>	Type     Design     MSP size     Order No.     Quantity.       dulo 1     Windproduct.     Visible isolating delance for isolating individual motor stater protectors for the network.     500, 50     SRV29 28-1A     1 unit       windproduct.     Isolating individual motor stater protectors for the network.     52 <sup>10</sup> SRV29 28-1A     1 unit       minal, 3 pole     For connection of axuliay and control cables to the main conductor connections     S3     SRT29 46-4F     1 unit       Image: state state state state protectors     Additional touch guard to be fitted at the box terminals (2 units can be mounted per MSP)     S2     SRT29 46-4F     1 unit       Image: state state state state for box terminals     Additional touch guard to be fitted at the box terminals (2 units can be mounted per MSP)     S2     SRT29 46-4EA1     1 unit       Image: state state state state for box terminals     For maintaining the required valage clearance and as protector agament the equipment being touched (2 units can be mounted per MSP)     S3     SRT29 38-4EA2     1 unit       Image: state state state state state state (2 units can be mounted per MSP)     S00, S0, S0 <sup>2</sup> SRV29 28-4AA00     1 unit       Image: state state state state state state state state (2 units can be mounted per MSP)     S00, S0, S0 <sup>2</sup> SRV29 08-4AA10

starter protectors/circuit breakers up to max. 65 A. Similarly, it cannot be used with the transverse auxiliary switch or three-phase busbars.

3) Compatible with 3RV20, 3RV21, and 3RV24 motor

starter protectors.




# Selection and ordering data

	Туре		For SIRIUS /ISP size	Order No.	Approx. Wt. (kg)		
oor-coupling ro	otary operating mechanisms for	Classic and Innovations					
RV29 26-0B	extension shaft (6 mm x 6 mm). protection IP64. The door lockir	The door-coupling rotary operating mechanisms consist of a knob, a coupling driver and a 130/330 mi extension shaft (6 mm x 6 mm). The door-coupling rotary operating mechanisms are designed to degre protection IP64. The door locking device prevents accidental opening of the control cabinet door in the position of the motor starter protector. The OFF position can be locked with up to 3 padlocks.					
5	Door-coupling rotary	Extension shaft 130 mm	500, SO ;	3RV29 26-0B	0.111		
	operating mechanisms	S	S2, S3 ;	3RV29 26-0B	0.1		
	(black)	Extension shaft 330 mm S00, 5	500, S0 ;	3RV29 26-0K	0.324		
		5	S2, S3 ;	3RV29 26-0K	0.3		
	EMERGENCY STOP	Extension shaft 130 mm	500, S0 :	3RV29 26-0C	0.110		
	door-coupling rotary	5	S2, S3 ;	3RV29 26-0C	0.1		
	operating mechanisms	Extension shaft 330 mm	500, S0 :	3RV29 26-0L	0.316		
	(red/yellow)			3RV29 26-0L	0.3		
oor-coupling re	otary operating mechanisms for						
	(gray) EMERGNCY STOP door-cour rotary operating mechanism (red/yellow)	pling S	S3     3RV29 46-2B       S00, S0     3RV29 26-2C       S2     3RV29 36-2C       S3     3RV29 46-2C		1.6 1.7 1.2 1.5 1.7		
			For SIRIUS	3	Approx.		
	Туре	Details	MSP size	Order No.	Wt. (kg)		
ront Plates							
8V19 23-4B 3RV19 23-4G	Molded-plastic front plate with rotary operating mechanism, lockable. For actuation of 3RV moto starter protectors in any enclosure	For actuation of 3RV MSPs in any enclosure, degree of protection IP55 or (front plate)	S00, S0 S2, S3	3RV19 23-4B	0.08		
	Molded-plastic front plate with EMERGENCY STOP door-coupling rotary operating mechanisms (red/yellow)	EMERGENCY-STOP operation of 3RV MSPs in any enclosure, degree of protection IP55	S00, S0 S2, S3	3RV19 23-4E	0.08		
	Holders for front plates	Holder is mounted on front plate, MSP size S or S0 with or without accessories is snapped		3RV19 23-4G	0.19		
nclosures for w	vall mounting <sup>2)</sup>						
RV19 23-1CA00	Molded-plastic enclosure for wall mounting	Degree of protection IP55, with N and PE terminals, lockable in 0 position					





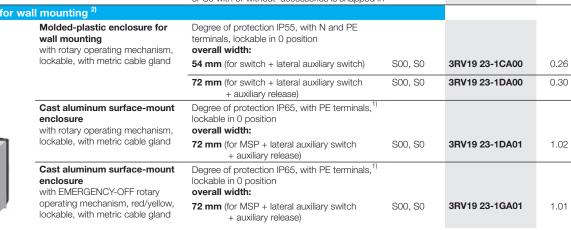

1) If required, an additional N terminal can be mounted (e.g. 8WA10 11-1BG11).